

Project Report
EO-1-1

Earth Observing-1 Advanced Land Imager: Instrument and Flight Operations Overview

J.A. Mendenhall (Editor)

L.A. Bernotas

W.E. Bicknell

V.J. Cerrati

C.J. Digenis

J.B. Evans

S.E. Forman

D.R. Hearn

R.H. Hoffeld

D.E. Lencioni

D.M. Nathanson

A.C. Parker

NMP 00677
FILE 6067

23 June 2000

Lincoln Laboratory

MASSACHUSETTS INSTITUTE OF TECHNOLOGY

LEXINGTON, MASSACHUSETTS



**Prepared for the National Aeronautics and Space Administration
under Air Force Contract F19628-95-C-0002.**

**This document is available to the public through
the National Technical Information Service,
Springfield, Virginia 22161.**

The work reported in this document was performed at Lincoln Laboratory, a center for research operated by Massachusetts Institute of Technology. The work was sponsored by the National Aeronautics and Space Administration, GSFC, under Air Force Contract F19628-95-C-0002.

| | | | |
|---|--|---|-----------|
| 1. Report No. EO-1-1 | 2. Government Accession No. | 3. Recipient's Catalog No. | |
| 4. Title and Subtitle Earth Observing-1 Advanced Land Imager: Instrument and Flight Operations Overview | | 5. Report Date 23 June 2000 | |
| | | 6. Performing Organization Code | |
| 7. Author(s) J.A. Mendenhall (Editor), L.A. Bernotas, W.E. Bicknell, V.J. Cerrati, C.J. Digenis, J.B. Evans, S.E. Forman, D.R. Hearn, R.H. Hoffeld, D.E. Lencioni, D.M. Nathanson, and A.C. Parker | | 8. Performing Organization Report No. EO-1-1 | |
| 9. Performing Organization Name and Address MIT Lincoln Laboratory 244 Wood Street Lexington, MA 02420-9108 | | 10. Work Unit No. (TRAIS) | |
| | | 11. Contract or Grant No. | |
| 12. Sponsoring Agency Name and Address National Aeronautics and Space Administration/GSFC Mr. Ralph Welsh Building 16, Room 21 MS740.3 Greenbelt, MD 20771 | | 13. Type of Report and Period Covered Project Report | |
| | | 14. Sponsoring Agency Code | |
| 15. Supplementary Notes This report is based on studies performed at Lincoln Laboratory, a center for research operated by Massachusetts Institute of Technology, under Air Force Contract F19628-95-C-0002. | | | |
| 16. Abstract An Advanced Land Imager (ALI) will be flown on the first Earth Observing mission (EO-1) under NASA's New Millennium Program (NMP). The ALI contains a number of key NMP technologies. These include a 15° wide field-of-view, push-broom instrument architecture with a 12.5 cm aperture diameter, compact multispectral detector arrays, non-cryogenic HgCdTe for the short wave infrared bands, silicon carbide optics, and a multi-level solar calibration technique. The focal plane contains multispectral and panchromatic (MS/Pan) detector arrays with a total of 10 spectral bands spanning the 0.4- to 2.5- μ m wavelength region. Seven of these correspond to the heritage Landsat bands. The instantaneous fields of view of the detectors are 14.2 μ rad for the Pan band and 42.6 μ rad for the MS bands. The partially populated focal plane provides a 3° cross-track coverage corresponding to 37 km on the ground. The focal plane temperature is maintained at 220 K by means of a passive radiator. This document is meant to serve as an instrument handbook and will outline key areas vital for proper operation and data processing: ALI design and performance, the calibration pipeline, commanding, telemetry, and flight operations. | | | |
| 17. Key Words Landsat remote sensing multispectral | | 18. Distribution Statement This document is available to the public through the National Technical Information Service, Springfield, VA 22161. | |
| 19. Security Classif. (of this report) Unclassified | 20. Security Classif. (of this page) Unclassified | 21. No. of Pages 123 | 22. Price |

ABSTRACT

An Advanced Land Imager (ALI) will be flown on the first Earth Observing mission (EO-1) under NASA's New Millennium Program (NMP). The ALI contains a number of key NMP technologies. These include a 15° wide field-of-view, push-broom instrument architecture with a 12.5 cm aperture diameter, compact multispectral detector arrays, non-cryogenic HgCdTe for the short wave infrared bands, silicon carbide optics, and a multi-level solar calibration technique. The focal plane contains multispectral and panchromatic (MS/Pan) detector arrays with a total of 10 spectral bands spanning the 0.4- to 2.5- μm wavelength region. Seven of these correspond to the heritage Landsat bands. The instantaneous fields of view of the detectors are 14.2 μrad for the Pan band and 42.6 μrad for the MS bands. The partially populated focal plane provides a 3° cross-track coverage corresponding to 37 km on the ground. The focal plane temperature is maintained at 220 K by means of a passive radiator. This document is meant to serve as an instrument handbook and will outline key areas vital for proper operation and data processing: ALI design and performance, the calibration pipeline, commanding, telemetry, and flight operations.

ACKNOWLEDGMENT

The authors acknowledge contributions from Dr. Bryant Cramer, Dale Schulz, and Ralph Welsh, Jr. of NASA GSFC; and Dr. Charles Bruce and William M. Brown, Jr. of MIT Lincoln Laboratory to this effort.

TABLE OF CONTENTS

| | |
|---|------|
| Abstract | iii |
| Acknowledgment | v |
| List of Illustrations | xi |
| List of Tables | xiii |
| 1. INTRODUCTION | 1 |
| 2. INSTRUMENT DESCRIPTION | 3 |
| 2.1 Telescope | 3 |
| 2.2 Focal Plane | 5 |
| 2.3 Internal Reference Source | 8 |
| 2.4 Mechanisms | 10 |
| 2.5 High Output Paraffin Actuators | 11 |
| 2.6 Temperature Sensors | 12 |
| 2.7 Heaters | 15 |
| 2.7.1 Instrument Heaters | 15 |
| 2.7.2 Survival Heaters | 17 |
| 2.7.3 Outgas Heater | 18 |
| 2.8 ALI Control Electronics | 18 |
| 2.8.1 ALICE Power Interface | 20 |
| 2.8.2 Focal Plane Electronics Power Interface | 20 |
| 2.8.3 Mechanisms and Thermal Control Electronics | 21 |
| 2.8.4 Analog Signal Conditioning Electronics | 22 |
| 2.8.5 Remote Services Node | 23 |
| 2.8.6 Instrument Health and Safety Monitoring | 24 |
| 2.9 Thermal Control System | 25 |
| 2.9.1 Heater H1, H2 Control | 25 |
| 2.9.2 Heater H12 Control | 27 |
| 2.9.3 Heater H7-H11 Control | 29 |
| 2.9.4 Temperature Control System Operation – STANDBY MODE | 31 |
| 2.9.5 Temperature Control System Operation – DATA TAKING MODE | 32 |
| 2.9.6 Temperature Control System Commands | 33 |
| 3. INSTRUMENT ASSEMBLY AND ENGINEERING TEST RESULTS | 37 |
| 3.1 Thermal and Mechanical Testing | 37 |
| 4. ALI CALIBRATION | 41 |
| 4.1 Pre-launch Calibration and Characterization Strategy | 43 |
| 4.2 In-flight Calibration Strategy | 43 |
| 5. CALIBRATION PIPELINE | 45 |
| 5.1 Background | 45 |
| 5.2 Input/Output | 46 |

| | | |
|--------|----------------------------------|----|
| 5.3 | Calibration Pipeline Database | 47 |
| 5.4 | Monitoring System Stability | 47 |
| 5.5 | Leaky Pixel Anomalies | 47 |
| 5.6 | Geometrical Image Reconstruction | 50 |
| 6. | COMMANDING THE ALI | 51 |
| 6.1 | Commands | 51 |
| 6.1.1 | /I_NOOP | 51 |
| 6.1.2 | /I_DIAGMODE | 51 |
| 6.1.3 | /I_RST28VTRIPS | 51 |
| 6.1.4 | /I_DSBL28VTRIPS | 52 |
| 6.1.5 | /I_ENABLEPOKE | 52 |
| 6.1.6 | /I_POKE | 53 |
| 6.1.7 | /I_ARMHOPA | 53 |
| 6.1.8 | /I_FIREHOPA | 53 |
| 6.1.9 | /I_RESETHOPA | 54 |
| 6.1.10 | /I_MECHPOWER | 54 |
| 6.1.11 | /I_MECHACTIVE | 55 |
| 6.1.12 | /I_MECHRESET | 55 |
| 6.1.13 | /I_LAMPENABLE | 56 |
| 6.1.14 | /I_LAMPON | 56 |
| 6.1.15 | /I_LAMPRESET | 57 |
| 6.1.16 | /I_RESETFPE | 57 |
| 6.1.17 | /I_SET_FPE_DG | 57 |
| 6.1.18 | /I_CLR_FPE_DG | 58 |
| 6.1.19 | /I_CONFIGFPE | 58 |
| 6.1.20 | /I_SETFPETHERM | 58 |
| 6.1.21 | /I_SETFPEPOWER | 59 |
| 6.1.22 | /I_SET_TCS_MODE | 59 |
| 6.1.23 | /I_ENA_HTR_BANKS | 60 |
| 6.1.24 | /I_MAN_HTR_CTRL | 60 |
| 6.1.25 | /I_TCS_AUTO_CTRL_MODE | 61 |
| 6.1.26 | /I_EARTH_OBS | 62 |
| 6.1.27 | /I_FL_CAL | 62 |
| 6.1.28 | /I_SOL_CAL | 63 |
| 6.1.29 | /I_SET_DEFAULT | 64 |
| 6.1.30 | /I_FPE_OFFSET_MODE | 64 |
| 6.1.31 | /I_SET_FPE_ENA_MSPAN | 65 |
| 6.1.32 | /I_SET_FPE_TEST_PATTERN | 65 |
| 6.1.33 | /I_SAFE_MODE | 65 |
| 6.1.34 | /I_SCHED_CMD | 66 |
| 6.1.35 | /I_DEL_STORED_CMD | 66 |
| 6.1.36 | /I_FLUSH_STORED_CMDS | 67 |
| 6.1.37 | /I_RST_CMD_CNTRS | 67 |
| 6.2 | ALI Parameter Start-up Values | 67 |
| 6.3 | Hazardous Commands | 74 |

| | | |
|------|--|-----|
| 7. | TELEMETRY | 75 |
| 7.1 | Telemetry Limits | 88 |
| 8. | FLIGHT OPERATIONS | 91 |
| 8.1 | Power On and Idle Mode | 91 |
| 8.2 | Achieving Thermal Equilibrium | 91 |
| 8.3 | Releasing Launch Latches and Fail-Safe HOPAs | 91 |
| 8.4 | Dark Data Collection | 92 |
| 8.5 | Earth Scene Data Collection | 93 |
| 8.6 | Internal Lamp Data Collection | 93 |
| 8.7 | Typical DCE Command Sequence | 93 |
| 8.8 | Solar Calibration | 94 |
| 8.9 | Lunar Calibration | 95 |
| 8.10 | FPA Outgassing | 96 |
| 8.11 | Nominal Power Off | 96 |
| 8.12 | Safehold | 96 |
| 9. | OPERATIONAL CONSTRAINTS | 97 |
| 10. | FLIGHT TSMs AND RTSs | 99 |
| 11. | ALI CONTINGENCIES | 101 |
| 12. | EMERGENCY CONTACT NUMBERS | 105 |
| 13. | SUMMARY | 107 |
| 14. | REFERENCES | 109 |

LIST OF ILLUSTRATIONS

| Figure No. | | Page |
|---------------|---|------|
| 1 | Photograph of the Earth Observing-1 Advanced Land Imager. | 1 |
| 2 | ALI instrument configuration showing the main thermal, mechanical, and electronic components. | 3 |
| 3 | A conceptual sketch of the ALI telescope and Focal Plane Assembly. | 4 |
| 4 | Photograph of the silicon carbide mirrors supported by the Invar metering truss. | 4 |
| 5 | ALI Focal Plane Assembly. | 5 |
| 6 | Photograph of ALI Focal Plane Assembly. | 6 |
| 7 | Photograph of populated Sensor Chip Assembly. | 6 |
| 8 | ALI spectral response functions for the visible and near infrared bands. | 7 |
| 9 | ALI spectral response functions for the short wave infrared bands. | 8 |
| 10 | EO-1 ALI internal reference source. | 9 |
| 11 | Photograph of internal reference source. | 9 |
| 12 | Mechanisms used in ALI. | 10 |
| 13 | Photograph of the ALI Aperture Cover Assembly. | 10 |
| 14 | Photograph of the Spectralon diffuser plate and motor. | 11 |
| 15 | Location of aperture cover HOPAs. | 12 |
| 16 | Locations of telescope metering truss temperature sensors. | 12 |
| 17 | Location of temperature sensor T4 on focal plane array frame. | 13 |
| 18 | Location of pallet temperature sensors T9 and T10. | 13 |
| 19 | Location of focal plane array and radiator temperature sensors. | 14 |
| 20 | Locations of telescope aperture cover temperature sensors. | 14 |
| 21 | Locations of external temperature sensors. | 15 |
| 22 | Locations of metering truss heaters H1 and H2. | 16 |
| 23 | Locations of focal plane radiator heaters H7-H11. | 16 |
| 24 | Location of the focal plane array heater H12. | 17 |
| 25 | Locations of ALI survival heaters. | 17 |
| 26 | Location of focal plane radiator outgas heater. | 18 |
| 27 | ALI electrical block diagram. | 19 |
| 28 | ALICE functional block diagram. | 19 |
| 29 | ALICE power interface (API). | 20 |
| 30 | FPE power interface (FPEPI). | 20 |

LIST OF ILLUSTRATIONS (Continued)

| Figure No. | | Page |
|---------------|---|------|
| 31 | MTCE mechanism block diagram. | 21 |
| 32 | MTCE heaters block diagram. | 21 |
| 33 | MTCE flood lamps block diagram. | 22 |
| 34 | ASCE functional block diagram. | 22 |
| 35 | RSN functional block diagram. | 23 |
| 36 | ALI thermal control loop when the instrument is in idle mode. | 32 |
| 37 | ALI thermal control loop when the ALI is in data collection mode. | 33 |
| 38 | ALI being placed into thermal-vacuum test chamber. | 38 |
| 39 | ALI thermal vacuum testing temperature ranges. | 39 |
| 40 | The EO-1 ALI pre-launch and post-launch calibration strategy. | 41 |
| 41 | Illustration of solar calibration. | 43 |
| 42 | Calibration pipeline software flow diagram. | 45 |
| 43 | Sample HDF Level 0 file contents and structure. | 46 |
| 44 | Effect of leaky pixel. | 48 |
| 45 | Affect of applying leaky pixel correction factor β_n . | 50 |
| 46 | ASIST I_NOMINAL telemetry page. | 82 |
| 47 | ASIST I_HS_STAT telemetry page. | 83 |
| 48 | ASIST I_FPE telemetry page. | 84 |
| 49 | ASIST I_PROCESS_STAT telemetry page. | 85 |
| 50 | ASIST I_TEMPS telemetry page. | 86 |
| 51 | ASIST I_THERMAL telemetry page. | 87 |
| 52 | ASIST I_MECH_STAT telemetry page. | 88 |

LIST OF TABLES

| Table No. | | Page |
|-----------|--|------|
| 1 | ALI Spectral Coverage and Ground Sample Distances | 7 |
| 2 | Thermal and Mechanical Tests During Development | 37 |
| 3 | ALI Calibration Matrix | 42 |
| 4 | Notation For Counts on Detector n | 48 |
| 5 | Default ALI Start-up Parameters | 68 |
| 6 | ALI Hazardous Commands | 74 |
| 7 | ALI Telemetry Points | 75 |
| 8 | Flight Thermal Yellow and Red Telemetry Limits For the ALI | 89 |
| 9 | Flight Power Yellow and Red Telemetry Limits For the ALI | 90 |
| 10 | ALI Contingency Table | 102 |
| 11 | Emergency Contact Numbers | 105 |

1. INTRODUCTION

The first Earth Observing satellite (EO-1) under the New Millennium Program (NMP) will carry an Advanced Land Imager (ALI) with multispectral imaging capability¹⁻⁴ (Figure 1). Overall direction of the EO-1 mission and acquisition of the spacecraft is being carried out by the Goddard Space Flight Center (GSFC) of NASA. MIT Lincoln Laboratory developed the Advanced Land Imager with NMP instrument team members Raytheon Systems Santa Barbara Remote Sensing (focal plane) and SSG Inc. (optical system). This instrument includes an optical system, a focal plane system, a calibration system, and the structural, thermal, and electrical components required to form an integrated unit. Lincoln Laboratory was responsible for the design, fabrication, test and development of the instrument, the software and databases for calibration, and will be responsible for on-orbit performance assessment.

This document provides a detailed overview of the instrument, including the telescope, control electronics, mechanisms, and thermal control system. The calibration pipeline that will be used to radiometrically calibrate flight data is also discussed. A complete command and telemetry list will be provided along with a description of the operating modes expected on orbit. Finally, contingency procedures that will be implemented during flight operations will be discussed.

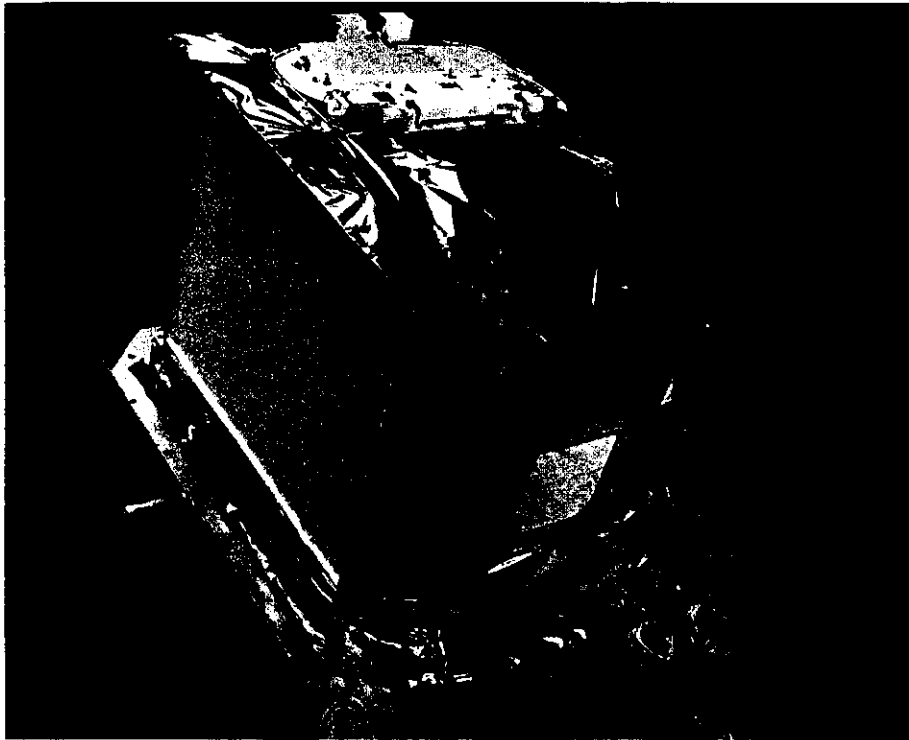


Figure 1. Photograph of the Earth Observing-1 Advanced Land Imager.

2. INSTRUMENT DESCRIPTION

The overall envelope and configuration of the Advanced Land Imager is depicted in Figure 2. The instrument is approximately 0.9m (X) x 0.9m (Y) x 0.7m (Z) and sits on an aluminum pallet that attaches to the spacecraft. The instrument has a velocity vector in the +X direction with the base pallet mounted on the nadir deck of the spacecraft so that earth is in the +Z direction. The focal plane and focal plane electronics each have radiators to help regulate the thermal environment of these components. The telescope is under multi-layer insulation (MLI) and is surrounded by a thin (~1mm) aluminum housing that supports an aperture cover. The ALI Control Electronics and the Focal Plane Electronics (FPE) packages are supported on the pallet outside the telescope housing.

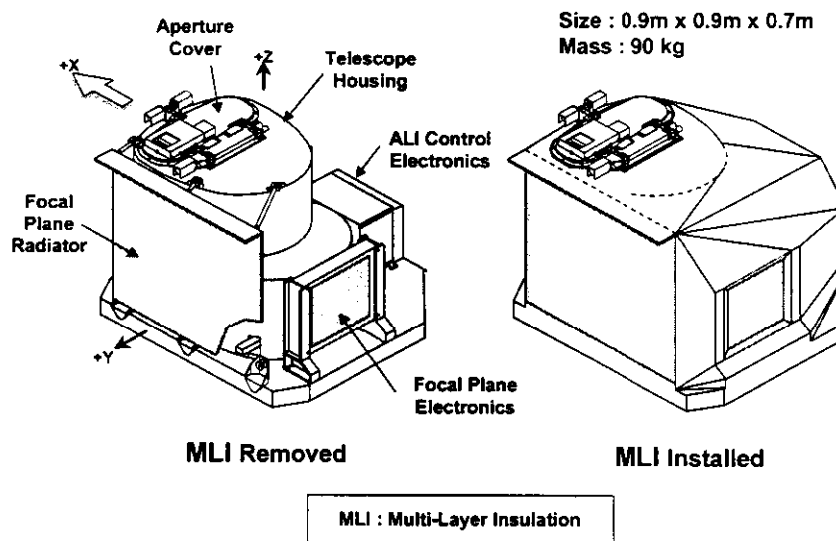


Figure 2. ALI instrument configuration showing the main thermal, mechanical, and electronic components.

2.1 TELESCOPE

A conceptual sketch of the interior of the ALI illustrating the major design features is shown in Figure 3. The telescope is a $f/7.5$ reflective triplet design with a 12.5 cm unobscured entrance pupil and a FOV of 15° cross-track by 1.256° in-track. It employs reflecting optics throughout, to cover the fullest possible spectral range. The design uses four mirrors: the primary is an off-axis asphere, the secondary is an ellipsoid, the tertiary is a concave sphere, and the fourth is a flat folding mirror. The optical design features a flat focal plane and telecentric performance, which greatly simplifies the placement of the filter and detector array assemblies. The focal plane consists of five modules, only one of which is populated with detectors (for cost reasons). When the focal plane is fully populated, the detector arrays will cover an entire 185 km swath on the ground, equivalent to Landsat, in a 'push-broom' mode.


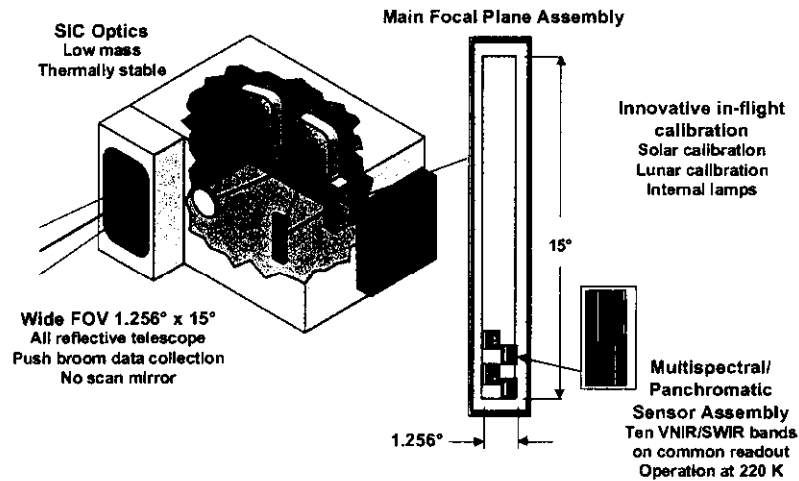


Figure 3. A conceptual sketch of the ALI telescope and Focal Plane Assembly.

The telescope design incorporates silicon carbide mirrors and an Invar truss structure with appropriate mounting and attachment fittings. Silicon carbide has many favorable properties for space optical systems. It possesses a high stiffness to weight ratio and a low coefficient of thermal expansion. Although it has been used for space optical elements previously, it has not been used for such large mirrors. A photograph of the silicon carbide mirrors that are held in place by the Invar metering truss is shown in Figure 4.

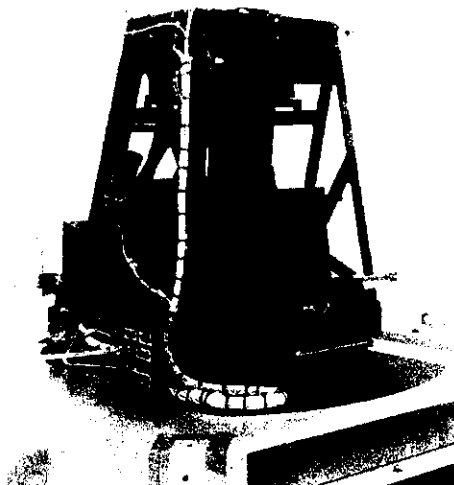

Telescope features

- 12.5 cm entrance pupil
- 15° x 1.26° field-of-view
- Telecentric, f/7.5 design
- Unobscured, reflective optics
- Silicon carbide mirrors
- Wavefront error = 0.11 λ RMS @ 633 nm

Figure 4. Photograph of the silicon carbide mirrors supported by the Invar metering truss.

2.2 FOCAL PLANE

Although the optical system supports a 15° wide FOV, only 3° was populated with detector arrays, as illustrated in Figures 5-7. The multispectral panchromatic (MS/Pan) array has 10 spectral bands in the visible, near infrared (VNIR), and short wave infrared (SWIR) (Figures 8 and 9). The pan detectors subtend 10 m square pixels on the ground and are sampled every 10 m as the earth image moves across the array. The MS detectors subtend 30 m and are sampled every 30 m. The wavelength coverage and ground sampling distance (GSD) are summarized in Table 1. Six of the nine multispectral bands are the same with those of the Enhanced Thematic Mapper (ETM+) on Landsat 7⁵ for direct comparison. The additional bands, indicated with primes, were chosen for other science objectives.

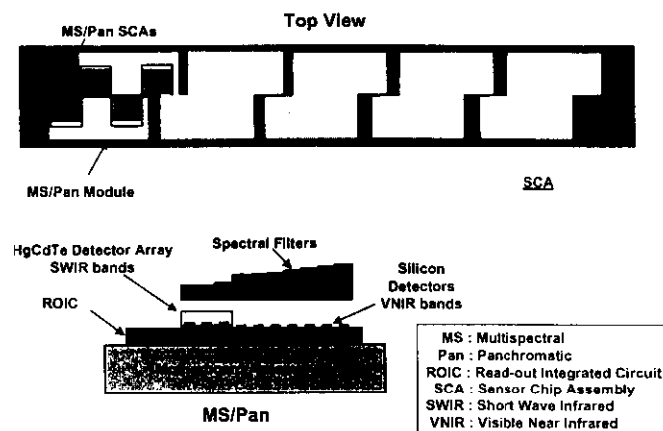


Figure 5. ALI Focal Plane Assembly.

Four sensor chip assemblies (SCAs) populate the 3° cross-track segment of the focal plane to form the focal plane array or FPA. Each MS band on each SCA contains 320 detectors in the cross-track direction, while each pan band contains 960 detectors. The total cross-track coverage from the single MS/Pan module is 37 km.

The MS/Pan arrays use silicon-diode VNIR detectors fabricated on the silicon substrate of the Readout Integrated Circuit (ROIC). The SWIR detectors are mercury-cadmium-telluride (HgCdTe) photo-diodes that are indium bump-bonded onto the ROIC that services the VNIR detectors. These SWIR detectors promise high performance over the 0.9 to 2.5 μm wavelength region at temperatures that can be reached by passive or thermoelectric cooling. The nominal focal plane temperature is 220K and is maintained by the use of a radiator and heater controls (see Section 2.9).

Application of detectors of different materials to a single readout integrated circuit (ROIC) enables a large number of arrays covering a broad spectral range to be placed closely together. This technology is extremely effective when combined with the wide cross-track FOV optical design being used on the ALI.

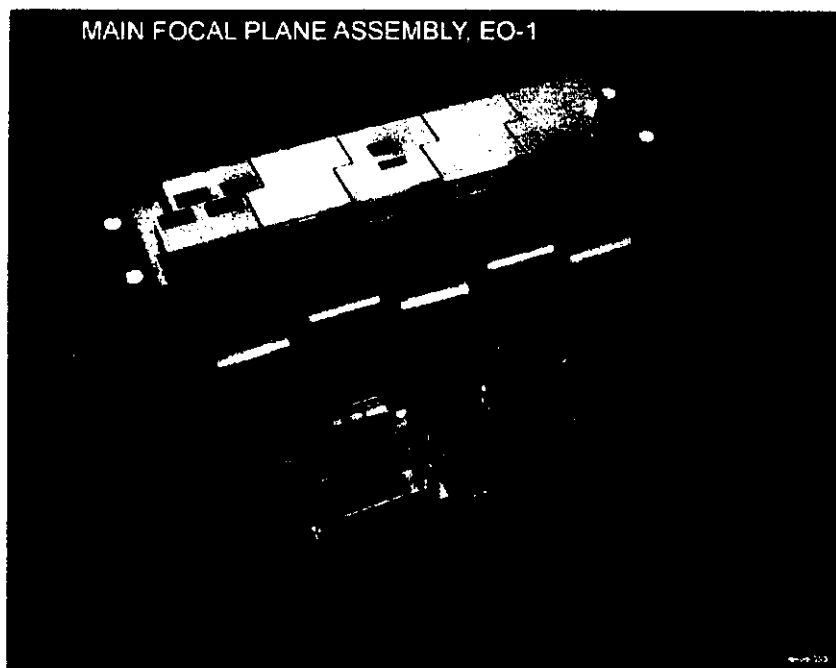


Figure 6. Photograph of ALI Focal Plane Assembly.

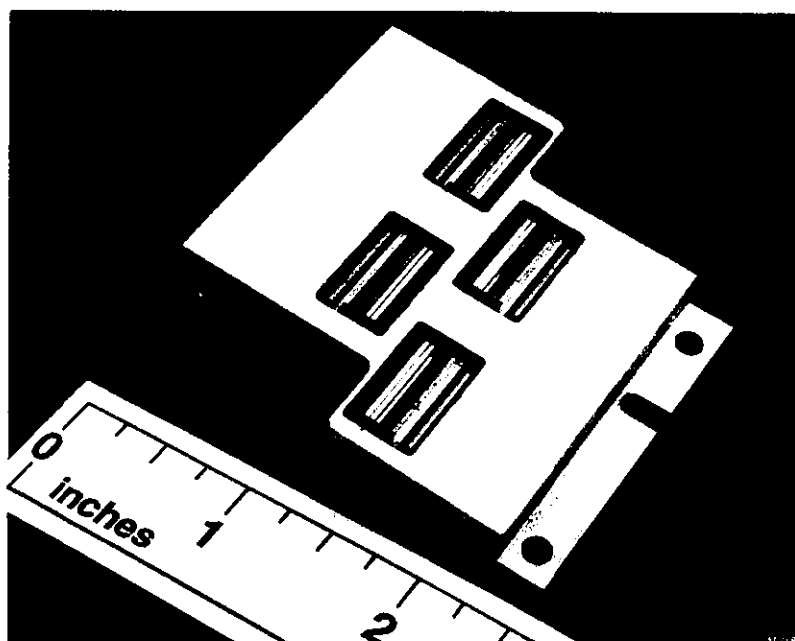


Figure 7. Photograph of populated Sensor Chip Assembly.

TABLE 1

ALI Spectral Coverage and Ground Sample Distances

| Band | Wavelength (μm) | GSD (m) |
|-------|------------------------------|---------|
| Pan | 0.480-0.690 | 10 |
| MS-1' | 0.433-0.53 | 30 |
| MS-1 | 0.450-0.515 | 30 |
| MS-2 | 0.525-0.605 | 30 |
| MS-3 | 0.630-0.690 | 30 |
| MS-4 | 0.775-0.805 | 30 |
| MS-4' | 0.845-0.890 | 30 |
| MS-5' | 1.200-1.300 | 30 |
| MS-5 | 1.550-1.750 | 30 |
| MS-7 | 2.080-2.350 | 30 |

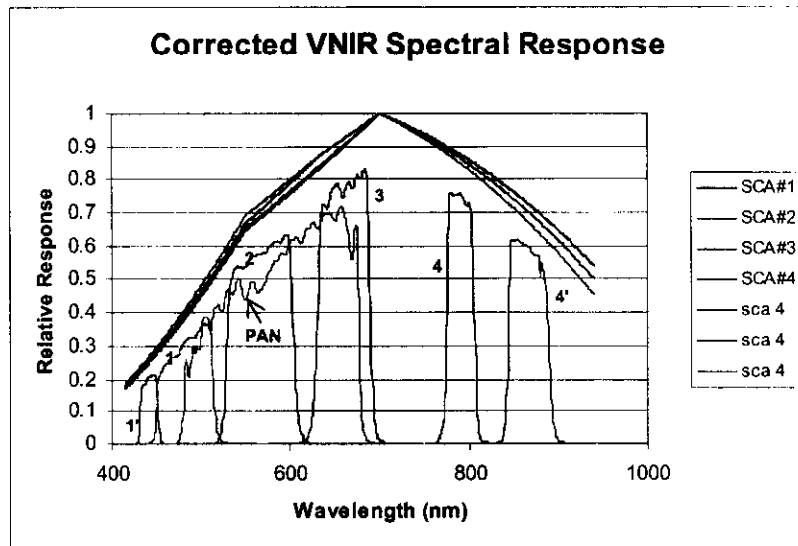


Figure 8. ALI spectral response functions for the visible and near infrared bands obtained from component level measurements. The smoothly varying curves at the top represent the responsivities of the silicon detectors for each SCA. The final responses for each band, considering mirror reflectivities, filter transmissions, and detector responsivities are shown in the lower curves.

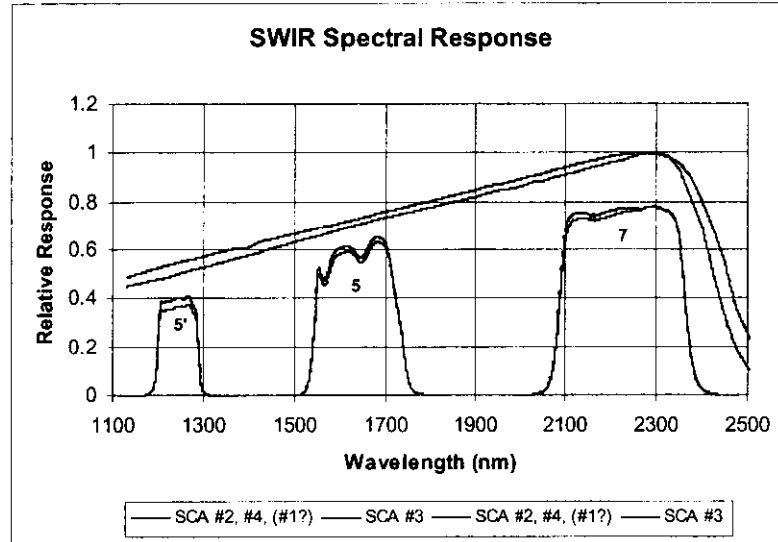


Figure 9. ALI spectral response functions for the short wave infrared bands obtained from component level measurements. The smoothly varying curves at the top represent the responsivities of the HgCdTe detectors for each SCA. The final responses for each band, considering mirror reflectivities, filter transmissions, and detector responsivities are shown in the lower curves.

The focal plane electronics (FPE) provides the necessary bias and clock voltages to operate and control the FPA. Both the array frame rate and the detector integration times can be set by commands to the FPE. The nominal frame rate is 226 frames/sec. The nominal integration time for the MS detectors is 4.05 msec while 1.35 msec for the Pan. The frame rate can be adjusted in 312.5 nsec increments to synchronize frame rate with ground scan velocity variations due to altitude and velocity variations during orbit.

The FPE samples the output of each detector with a 12-bit converter. The samples are then multiplexed into a 32-bit parallel word (two detector samples plus an 8 bit header), RS-422 output channel that streams the data at a 102.4 Mbit/sec rate to a 44 Gbit capacity, Wideband Advanced Recorder-Processor (WARP) onboard the spacecraft.

2.3 INTERNAL REFERENCE SOURCE

Daily in-flight radiometric checks of the Advanced Land Imager will be conducted by observing the on-board internal reference source (Figures 10, 11). This source consists of three Welch Allyn 997418-7 (modified) gas-filled lamps mounted on a small, 0.8-inch diameter integrating sphere. Light emerging from the exit slit of the sphere passes through a BK 7 lens and infrared filter, is reflected off the ALI flat mirror, and floods the focal plane. This source should provide better than 2% absolute radiometric calibration for the instrument. Extensive stability and lifetime testing of the internal reference source for spaceflight operation was conducted at Lincoln Laboratory.

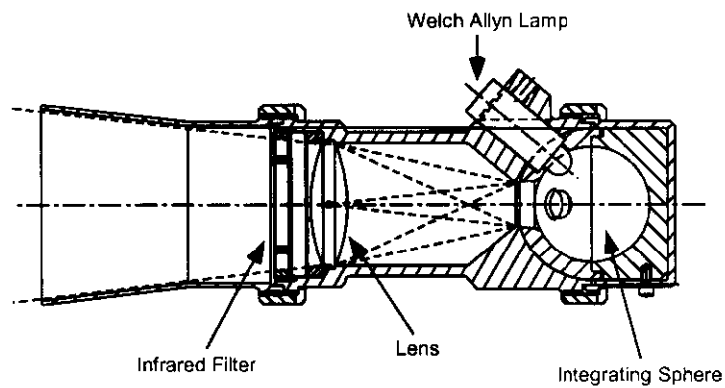


Figure 10. EO-1 ALI internal reference source.

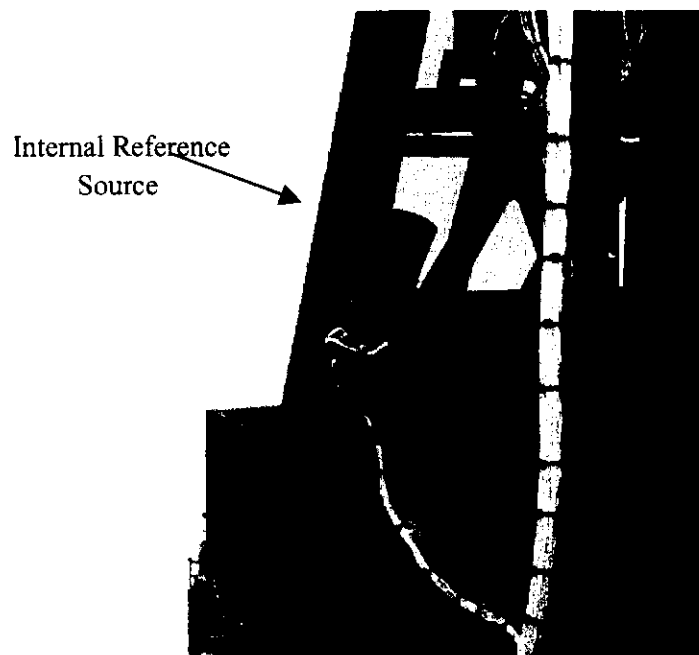


Figure 11. Photograph of internal reference source.

Following each observation, after the aperture cover has been closed, the three internal calibration lamps are powered by the ALI Control Electronics. After an eight-second stabilization period the lamps are sequentially powered down in a staircase fashion, with two-second exposures between each step. In this manner, the focal plane will receive a three point radiometric calibration after each observation.

2.4 MECHANISMS

Figure 12 illustrates three motor-driven mechanisms employed by the ALI. The aperture cover opens for a data collection event and closes after data collection. The cover is driven by a two-phase stepper motor and four LEDs are mounted near the cover for discrete status monitoring (open, closed, launch latch released, fail safe released). There is also an aperture cover throwback spring that is enabled by firing a High Output Paraffin Actuator (HOPA). The throwback spring would be used in case of motor failure; however, shutting the aperture cover would not be possible after invoking this option.

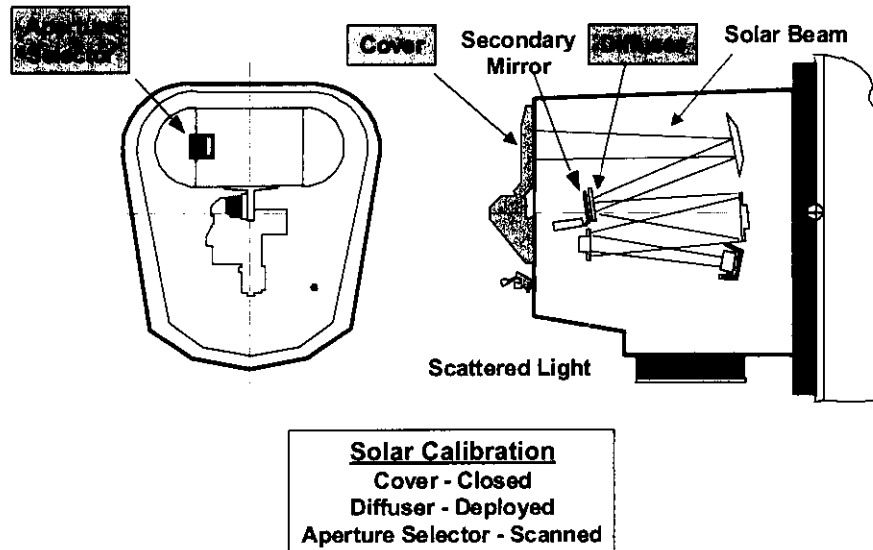


Figure 12. Mechanisms used in ALI.

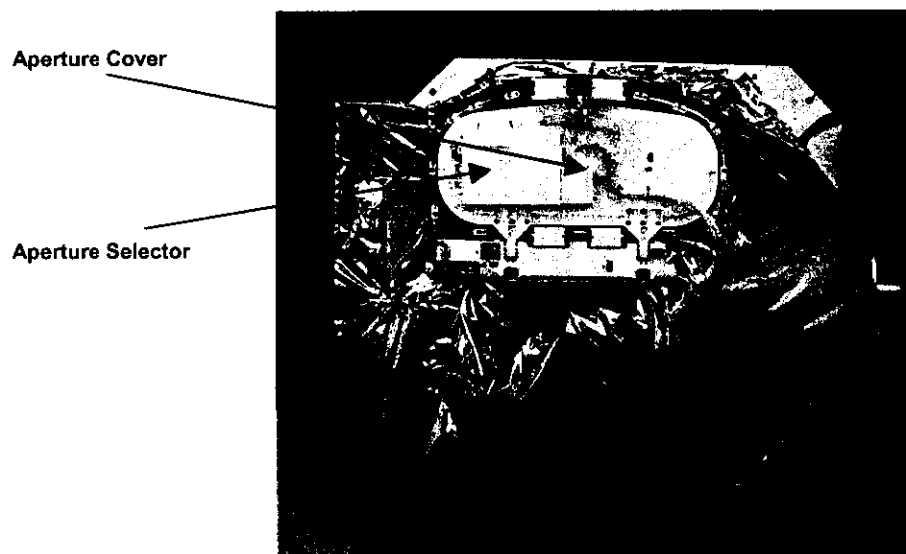


Figure 13. Photograph of the ALI Aperture Cover Assembly.

For solar calibration, the aperture cover is closed and a Spectralon diffuser plate is swung over the secondary mirror by a second stepper motor (Figure 14). Four LEDs are mounted near the diffuser assembly for discrete status monitoring (deployed, stowed, launch latch released, fail safe released). Fully deployed, the diffuser panel will reflectively scatter any sunlight that would otherwise impinge on the secondary. Once the diffuser is in place, an Aperture Selector Assembly, contained within the Aperture Cover Assembly, is activated. The aperture selector is a two-phase stepper motor that moves an opaque slide over a row of small to increasingly larger slit openings, exposing the diffuser to increasing amounts of sunlight. Fully open, the aperture selector then reverses the slide motion to eventually block all light. Two LEDs are used to monitor the position of the selector (fully extended, fully retracted). Additionally, a resolver is used for continuous position readout. During solar calibration the reflectively scattered sunlight exposes the FPA to an irradiance that is equivalent to earth-reflected sunlight for an earth albedo ranging from 0 to 90%.

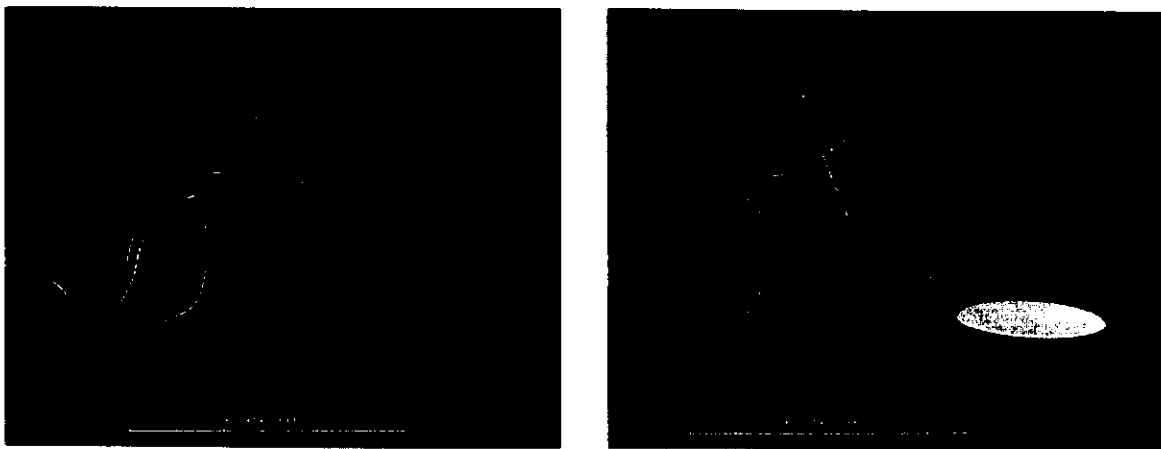


Figure 14. Photograph of the Spectralon diffuser plate and motor. The diffuser is stowed in the left image and deployed in the right image.

The status of all ALI mechanisms may be found on the ASIST workstation display page *I_MECH_STAT* (Figure 52). A review of the ASIST system and ALI telemetry may be found in Section 7.

2.5 HIGH OUTPUT PARAFFIN ACTUATORS

The ALI employs six high output paraffin actuators or HOPAs. Four of the HOPAs are used as launch latches and fail safe latches for the aperture cover (Figure 15). The remaining two HOPAs are used as a single string launch latch and fail safe latch for the solar diffuser. The launch latches are used to secure the aperture cover and solar diffuser during ascent. The fail safe latches are only to be used if the aperture cover or solar diffuser motors fail and cannot be recovered. Once the fail safe latches are fired, the associated mechanism can never be used again. The status of all ALI HOPAs may be found on the ASIST page *I_MECH_STAT* (Figure 52).

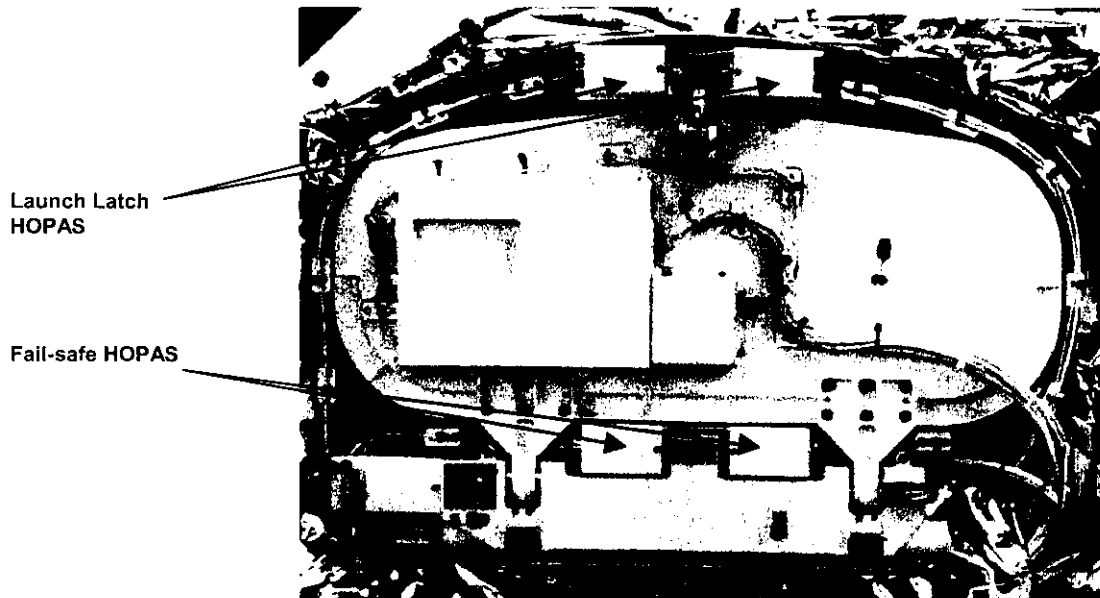


Figure 15: Location of aperture cover HOPAs.

2.6 TEMPERATURE SENSORS

The Advanced Land Imager contains thirty-six temperature sensors used to monitor the thermal condition of many regions of the instrument. Twenty-six of these sensors are AD590s and are sensitive from -50.83°C to $+60.83^{\circ}\text{C}$. Five sensors are DT570s and are sensitive over the range -39.55°C to -100.45°C . The remaining five sensors are located within the FPE and are used by the FPE thermal control system. A list of telemetry points and limits to be used during flight operations are provided in Section 7.

Figure 16 indicates the positions of eight temperature sensors used to monitor portions of the telescope metering truss. All sensors are AD590s.

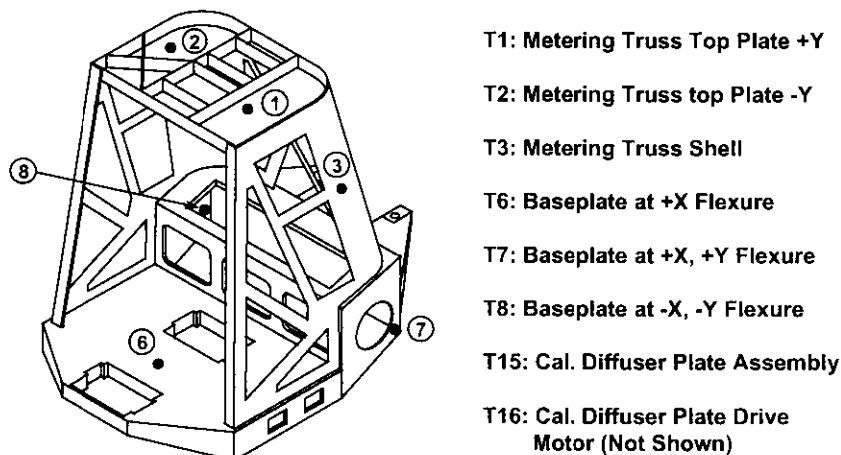


Figure 16. Locations of telescope metering truss temperature sensors.

T4 is an AD590 sensor and monitors the temperature of the focal plane array frame (Figure 17).

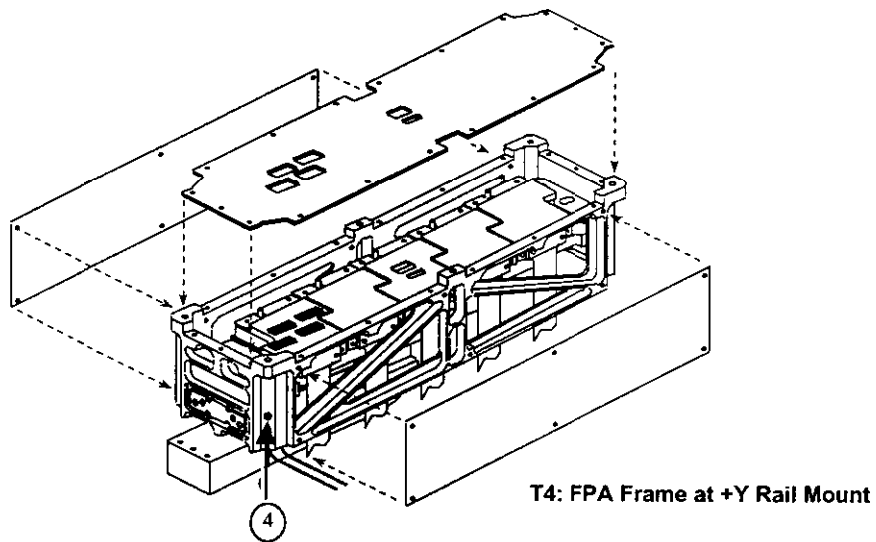


Figure 17. Location of temperature sensor T4 on focal plane array frame.

Two temperature sensors are located on the instrument pallet (T9, T10). Both sensors are AD590s and are indicated on Figure 18.

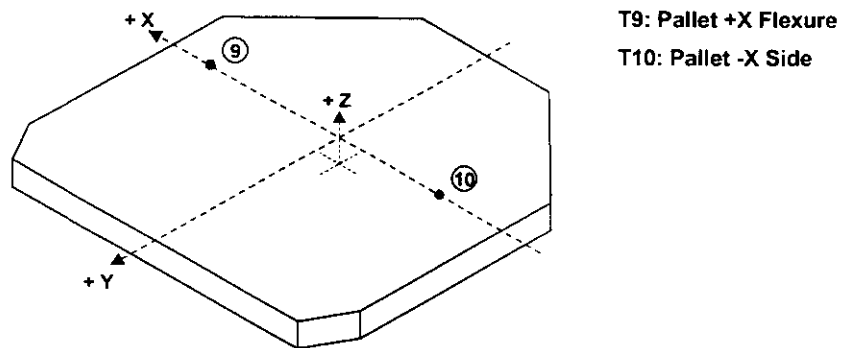


Figure 18. Location of pallet temperature sensors T9 and T10.

Figure 19 indicates the positions of seven temperature sensors used to monitor portions of the focal plane array and radiator. T20 and T32 are Ad590 and T19, T21, T29, T33, and T34 are DT570 sensors.

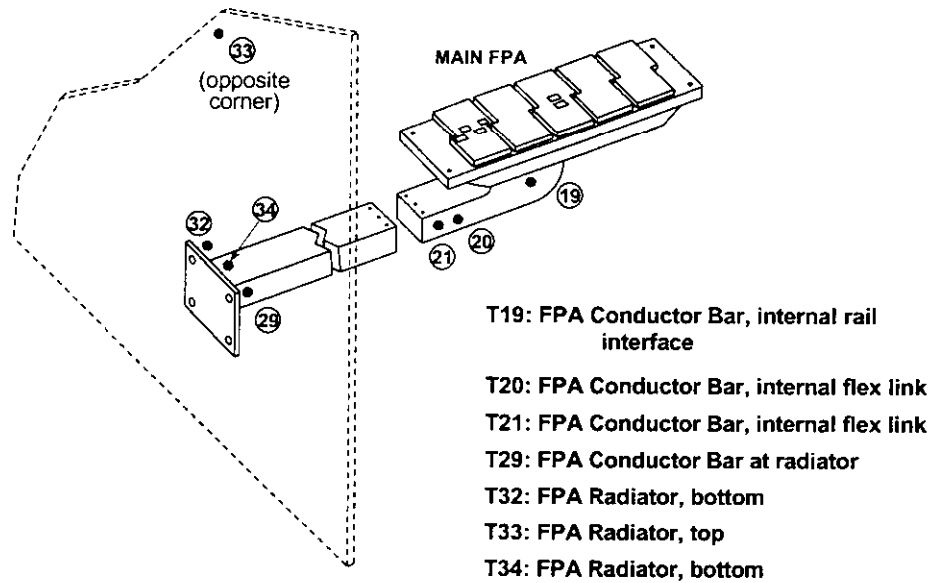


Figure 19. Location of focal plane array and radiator temperature sensors.

The locations of five temperature sensors located on the telescope aperture cover are indicated in Figure 20. All sensors are AD590s.

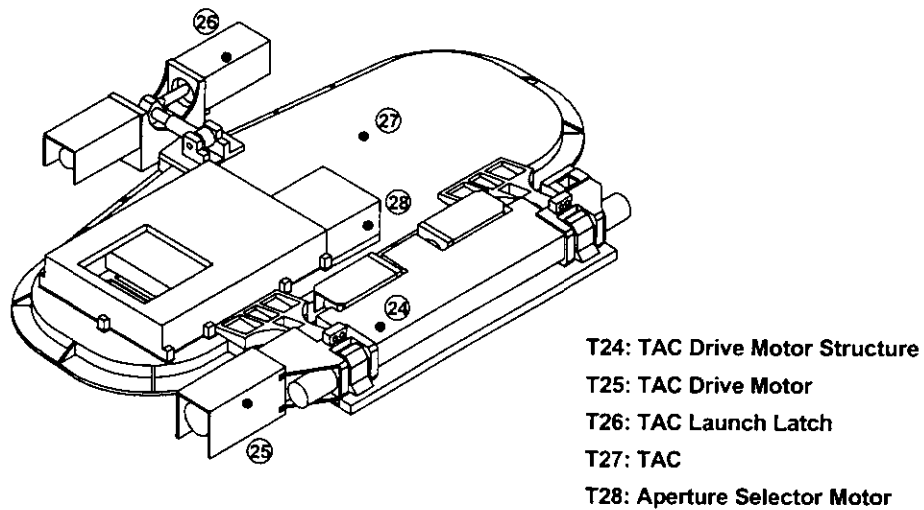


Figure 20. Locations of telescope aperture cover temperature sensors.

The locations of five temperature sensors mounted externally to the ALI are indicated in Figure 21. All sensors are AD590s.

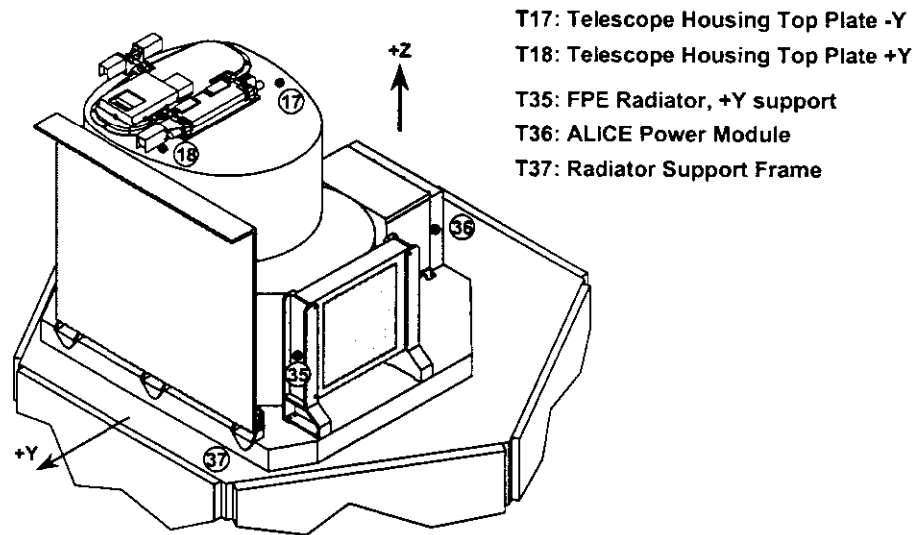


Figure 21. Locations of external temperature sensors.

2.7 HEATERS

The Advanced Land Imager contains eight instrument heaters, two survival heaters, and one outgas heater.

2.7.1 Instrument Heaters

Eight instrument heaters are used to regulate the thermal differential between the top and bottom plates of the metering truss and stabilizes the temperature of the focal plane. See Section 2.9 for a description of the ALI Thermal Control System (TCS).

Figure 22 depicts the location of the metering truss heaters H1 and H2. These heaters are placed on top of the top plate and on the back of the bottom plate respectively in this figure.

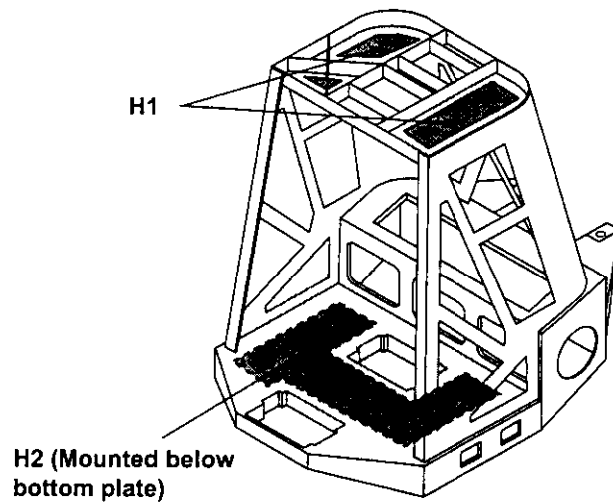


Figure 22. Locations of metering truss heaters H1 and H2.

Heaters H7 – H11 are used to regulate the temperature of the focal plane radiator. These heaters are spread along the radiator and are located in Figure 23.

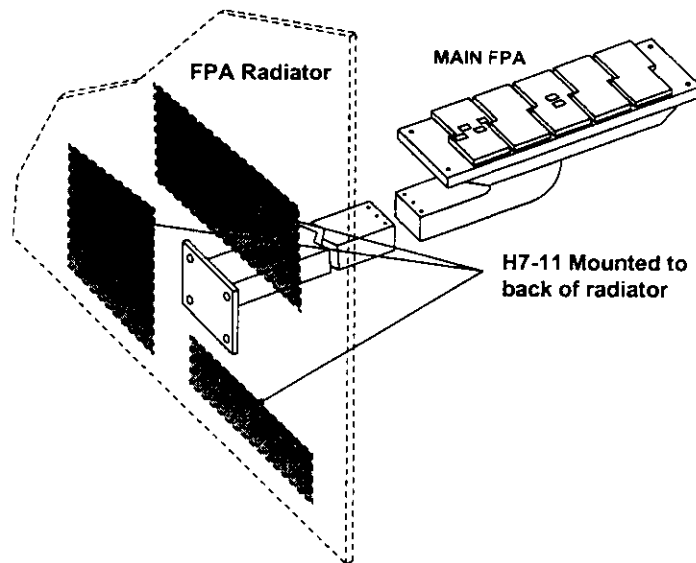


Figure 23. Locations of focal plane radiator heaters H7-H11.

The location of heater H12 is depicted in Figure 24. This heater is located on the focal plane conductor bar and is used to help regulate the focal plane temperature.

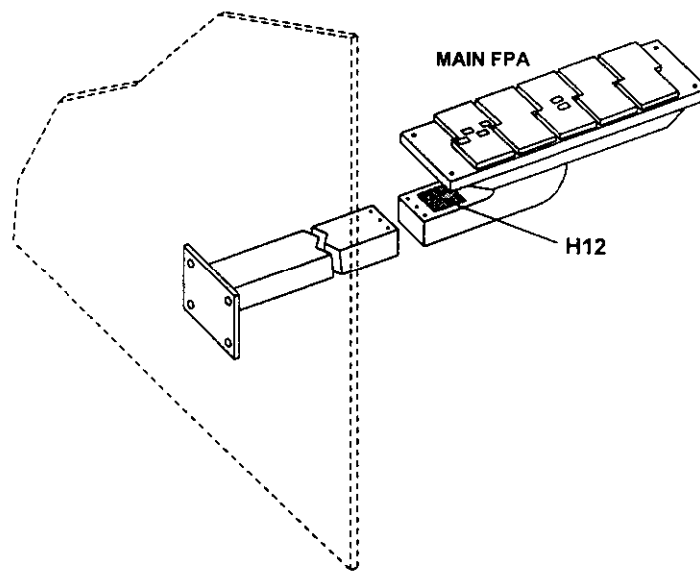


Figure 24. Location of the focal plane array heater H12.

2.7.2 Survival Heaters

Two 7W survival heaters are mounted externally to the focal plane electronics box. These heaters are thermostatically controlled by the spacecraft, and are normally enabled at all times to ensure the FPE does not experience temperature below -1°C primary and -10°C secondary, even when the instrument is unpowered. The location of these heaters is shown in Figure 25.

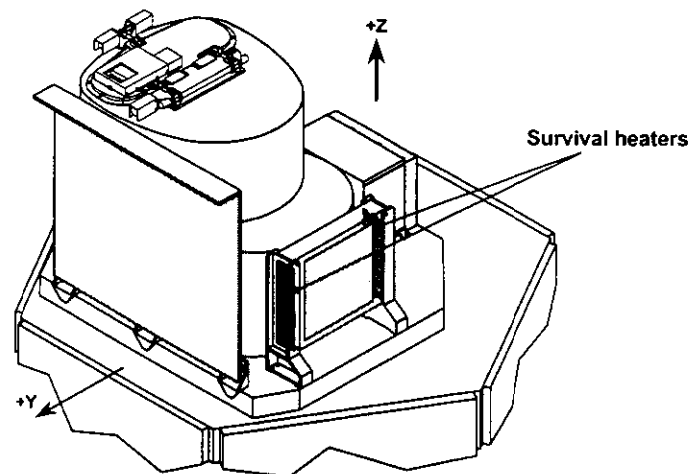


Figure 25. Locations of ALI survival heaters.

2.7.3 Outgas Heater

A 22W outgas heater has been placed on the focal plane radiator, near the radiator-conductor bar interface (Figure 26). This heater is powered and controlled by the spacecraft and will be used to assist in raising the temperature of the focal plane to $\sim 0^{\circ}\text{C}$ when the ALI is in outgassing mode (Section 8.10).

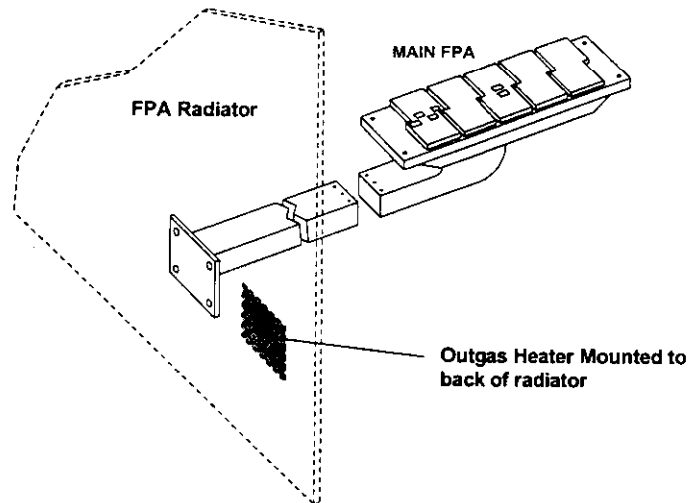


Figure 26. Location of focal plane radiator outgas heater.

2.8 ALI CONTROL ELECTRONICS

The ALI Control Electronics (ALICE) package is located outside the telescope housing and is thermally coupled to the nadir deck. The ALICE controls all functions of the instrument (Figure 27) and has nine primary duties:

- provide filtering and protection for +28 V primary power from the spacecraft
- distribute primary and secondary power to ALI subsystems
- collect housekeeping data
- implement 1773 command and housekeeping interface
- issue commands to the focal plane electronics
- implement mechanism control
- implement thermal control
- monitor ALI health and safety
- implement instrument protection functions.

Five functional subsystems have been defined for the ALICE: ALICE power interface, focal plane electronics power interface, mechanisms and thermal control electronics, remote services node, analog signal conditioning electronics (Figure 28).

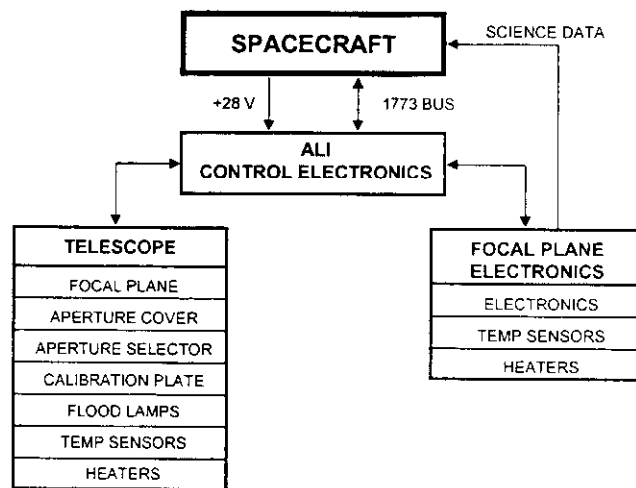


Figure 27. ALI electrical block diagram.

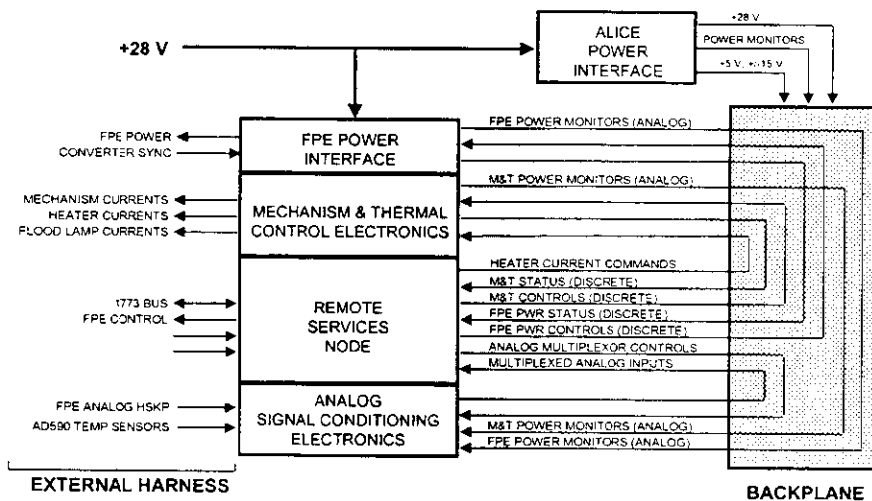


Figure 28. ALICE functional block diagram.

2.8.1 ALICE Power Interface

The ALICE Power Interface or API filters spacecraft +28 V primary power and distributes primary (+28 V) and secondary (+5V, +/-15 V) power to the ALICE backplane (Figure 29). Additionally, primary power voltage and current monitor signals are routed to the ALICE Analog Signal Conditioning Electronics (ASCE) by the API.

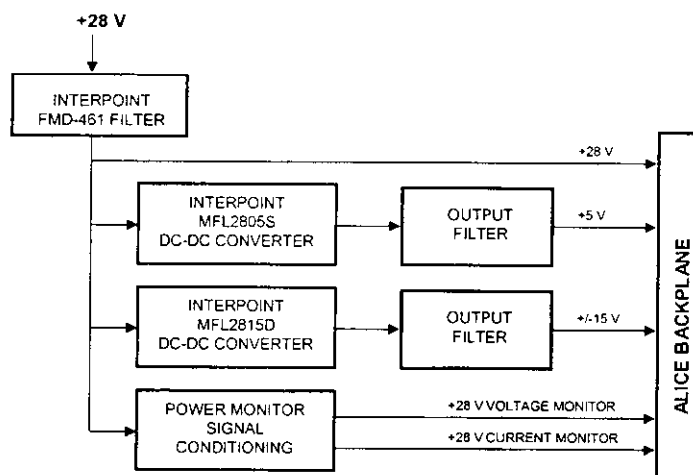


Figure 29. ALICE power interface (API).

2.8.2 Focal Plane Electronics Power Interface

The FPE Power Interface or FPEPI also filters spacecraft primary power and distributes secondary (+5 V, +/-15 V) to the focal plane electronics (Figure 30). +28 V current trip circuits are in place to protect the FPEPI if excess +28 V current is on the primary power bus. FPE power monitor signals are also routed to the ASCE.

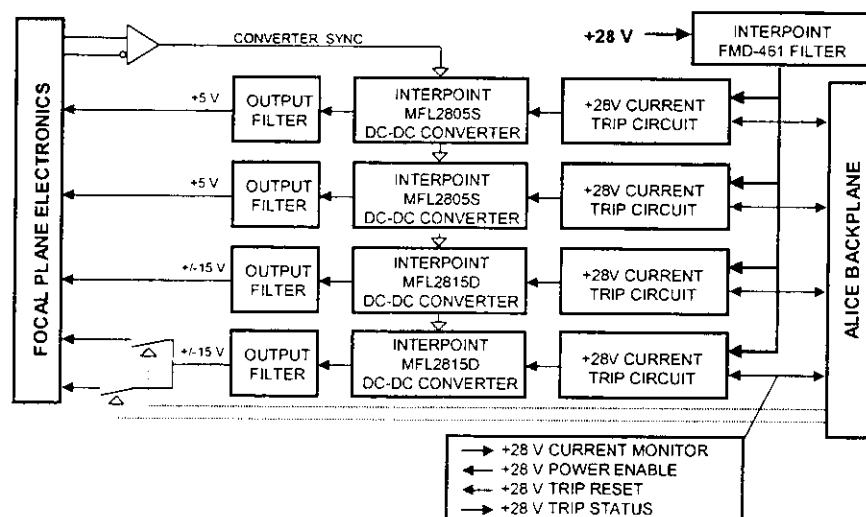


Figure 30. FPE power interface (FPEPI).

2.8.3 Mechanisms and Thermal Control Electronics

The Mechanism and Thermal Control Electronics (MTCE) subsystem is used to provide power to the ALI mechanisms, heaters, and flood lamps (Figures 31-33). The MTCE board primarily consists of power switching circuits for three two-phase unipolar stepper motors, six, high output paraffin actuators (HOPAs), eight thermostatically controlled heaters, and three individually controlled flood lamps. +15V mechanism power and +28 V HOPA and heater power is provided by the ALICE Power Interface through the ALICE backplane. Each of the three services has overcurrent trip circuitry in place. All higher level logic functions used to control the MTCE are implemented in the Remote Services Node (RSN) software. These services include motor positioning and phasing control, software thermostats, and loop closures for proportional temperature control. Finally, power and trip circuit status monitor signals are routed to the ASCE for processing.

Telemetry related to ALI mechanisms may be found on the ASIST *I_MECH_STAT* page (see Figure 52). Telemetry related to the ALI thermal control system and ALI temperatures may be found on the ASIST *I_TEMPS* and *I_THERMAL* pages (Figures 50 and 51, respectively).

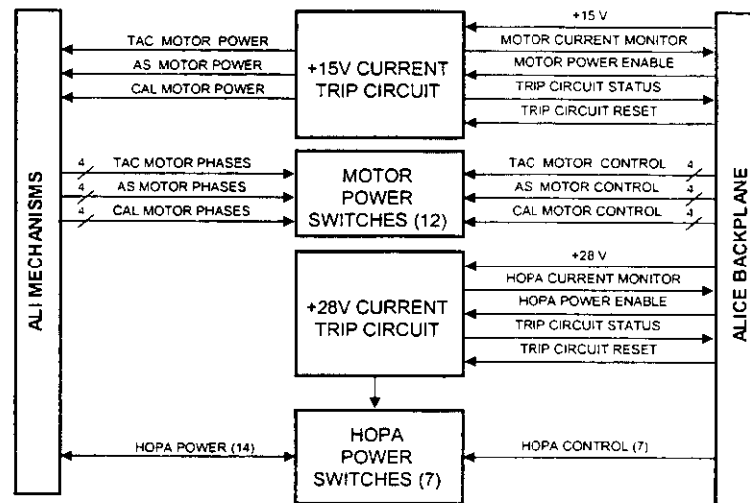


Figure 31. MTCE mechanism block diagram.

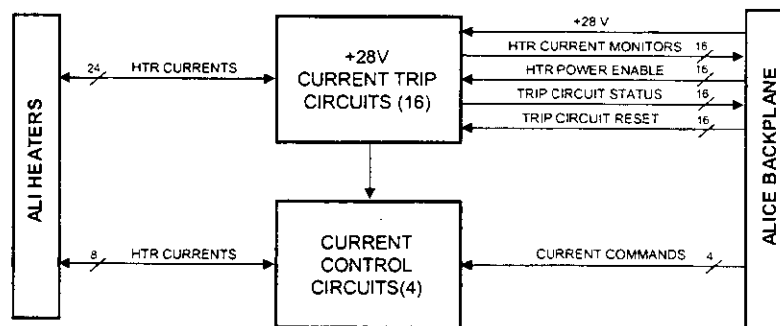


Figure 32. MTCE heaters block diagram.

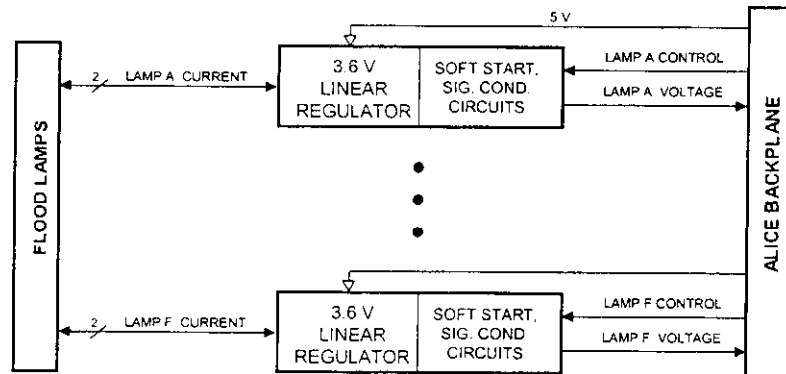


Figure 33. MTCE flood lamps block diagram.

2.8.4 Analog Signal Conditioning Electronics

The Analog Signal Conditioning Electronics or ASCE subsystem provides signal conditioning for 26 AD590 and 5 DT570 (cryogenic) temperature sensors distributed throughout the ALI (Figure 34). The ASCE also provides buffering for 25 pseudodifferential signals originating in the focal plane electronics and 34 ALICE power monitors. All of these signals are multiplexed onto 14 outputs that are sampled by the RSN. Most ALI analog housekeeping may be monitored on ASIST pages: *I_NOMINAL*, *I_FPE*, *I_PROCESS_STAT*, *I_THERMAL*, *I_MECH_STAT*, and *I_TEMPS* (Figures 46,48-52, Section 7).

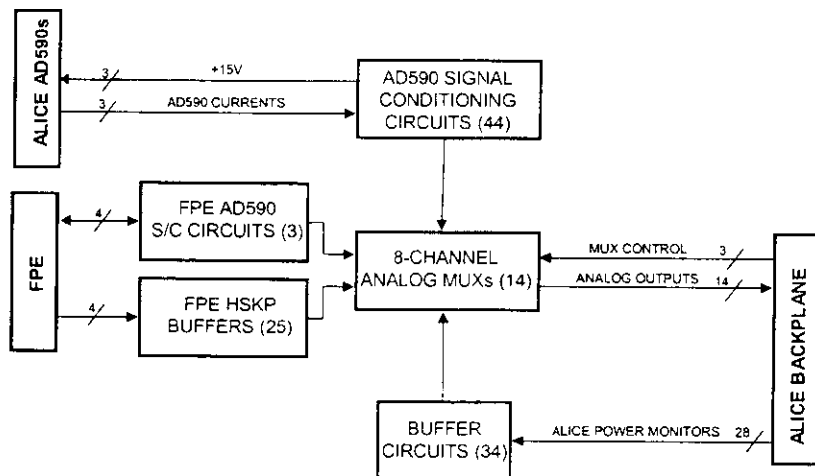


Figure 34. ASCE functional block diagram.

2.8.5 Remote Services Node

The Remote Services Node subsystem houses the Essential Services Node (ESN) multi-chip module and provides an interface between this module and the ALI (Figure 35). The RSN is composed of a generic RSN core with ALI specific extensions. The generic RSN core includes external oscillators, boot PROM (programmable read only memory), EEPROM (electrically erasable PROM), 1773 interface, analog to digital conversion of housekeeping signals, and a standard backplane interface. The ALI-specific extensions include digital input/output, digital to analog converters, RS-422 transmitters and receivers, and resolver to digital converters. Power is provided to the RSN through the ALICE backplane. Communication with the spacecraft (commanding and housekeeping) is accomplished through the 1773 fiber optic bus. Communication with GSE off the spacecraft and communication between the ESN and the focal plane electronics is provided by RS-422 interfaces.

The Remote Services Node software is designed to implement seven key functions:

- Provide spacecraft command interface over the 1773 fiber optic bus
- Issue commands to the mechanisms and HOPAs (see Section 6)
- Issue commands to the focal plane electronics (see Section 6)
- Implement thermal control functions (see Section 2.9)
- Monitor instrument health and safety (see Section 2.8.6)
- Implement instrument protection functions (see Section 2.8.6)
- Provide a test interface through the RS-422 port

Important RSN ASIST pages include *I_PROCESS_STAT*, *I_CMD_LOG*, and *I_STORED_CMD*.

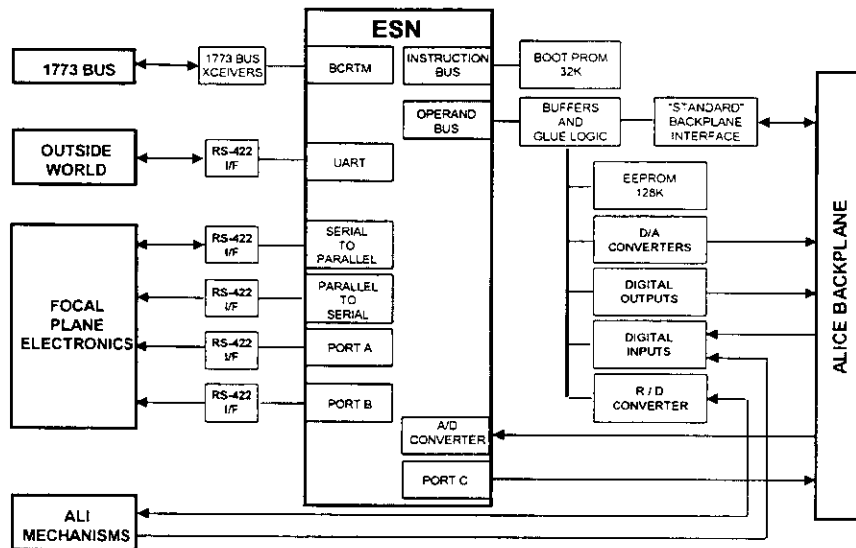


Figure 35. RSN functional block diagram.

2.8.6 Instrument Health and Safety Monitoring

In addition to providing power and controlling all functions of the instrument, ALICE also continuously monitors key parameters to verify the health of the instrument. These include circuit breakers and health and safety interlocks.

Eight software controlled 'circuit breakers' have been implemented in ALICE to protect hardware against short circuits in the following areas:

- HOPA power
- Heater bank 1
- Heater bank 2
- Heater bank 3
- Heater bank 4
- Motor power
- FPE thermal control power
- FPE operational power

If any circuit breaker is tripped, it is automatically reset. If a second trip occurs within 10 seconds the associated subsystem is disabled. Once a subsystem is disabled, the circuit breaker may only be reset via ground commands.

Eighteen health and safety software 'interlocks' (Figure 47, Section 7) are also implemented in ALICE to assist with instrument failure, detection, and correction. These interlocks include the following:

- If FPE radiator temperature > 58.6 C then disable FPE operational and thermal power
 - Cleared when FPE operational or thermal power is reenabled
- If FPE +28 V input current > 1.5 amps then disable FPE operational and thermal power
 - Cleared when FPE operational or thermal power is reenabled
- If FPE operational time > 30000 seconds then disable FPE operational power
 - Cleared when FPE operational power is reenabled
- If HOPA > 1.1 amps then disarm and disable HOPAs
 - Cleared when any HOPA is fired
- If HOPA on time > 180 seconds then disarm and disable HOPA
 - Cleared when any HOPA is fired
- If aperture cover motor temperature > 58.6 C then disable motor power and turn off all motor phases.
 - Cleared when any motor is reactivated
- If solar diffuser motor temperature > 58.6 C then disable motor power and turn off all motor phases.
 - Cleared when any motor is reactivated
- If aperture selector motor temperature > 58.6 C then disable motor power and turn off all motor phases.
 - Cleared when any motor is reactivated
- If motor current > 2.1 amps then disable motor power and turn off all motor phases.
 - Cleared when any motor is reactivated
- If motor turn on time > 60 seconds then disable motor power and turn off all motor phases.
 - Cleared when any motor is reactivated
- If lamp 1 current > 0.98 amps disable lamp power and turn off all lamps
 - Cleared when any lamp is turned on
- If lamp 2 current > 0.98 amps disable lamp power and turn off all lamps
 - Cleared when any lamp is turned on
- If lamp 3 current > 0.98 amps disable lamp power and turn off all lamps
 - Cleared when any lamp is turned on

- If lamp on time > 60 seconds disable lamp power and turn off all lamps
 - Cleared when any lamp is turned on
- If heater bank 1 current > 1.1 amps then disable heater bank 1 power
 - Cleared when heater bank 1 is reenabled
- If heater bank 3 current > 1.1 amps then disable heater bank 3 power
 - Cleared when heater bank 3 is reenabled
- If heater bank 4 current > 1.1 amps then disable heater bank 4 power
 - Cleared when heater bank 4 is reenabled
- If FPE operational power on and FPA rail heater power > 0 Watts then disable FPE thermal control power
 - Cleared when the FPE thermal power is reenabled

All interlock parameter values may be changed using the `/I_SET_DEFAULT` command. However, the default parameters should be used until a need for a change is identified.

2.9 THERMAL CONTROL SYSTEM

The ALI Thermal Control System (TCS) regulates the thermal differential between the top and bottom plates of the metering truss and stabilizes the temperature of the focal plane at one of five set points. The nominal FPA temperature set-point is 220 K. Possible alternatives are 225 K, 215 K, 210 K, and 205 K (See section 6.1.20). Status of the ALI thermal control system and a summary of ALI temperatures may be found on the ASIST `I_THERMAL` and `I_TEMPS` pages (Figures 51 and 50, respectively).

The ALI TCS is invoked once a second and has three main functions:

- Control heaters H1 and H2 (located on the top and bottom plates of metering truss, respectively)
- Control heaters H12 (located on the internal side of the FPA conductor bar)
- Control heaters H7–H11 (located on the FPA radiator)

For each control function, several modes have been implemented and are detailed below. Modes, which are active upon ALICE startup (default modes), are identified in the descriptions. “Non-flight” modes can be considered backup modes and have been useful during various stages of TCS development. Non-flight modes can be invoked via ground command

All automatic controls are disabled when the system is placed in “Manual” mode. In this mode, each heater can be individually controlled via ground command. **However, it is recommended that the default mode be used whenever the ALI is under nominal operating conditions.**

2.9.1 Heater H1, H2 Control

The ALI thermal control system regulates the thermal differential between the telescope metering truss top and bottom plates by regulating power to heaters H1 and H2 (See Section 2.7.1). H1 is a 5W heater located on the top plate of the metering truss. H2 is a 5W heater located on the bottom plate of the metering truss. H1 and H2 are powered from +28V (See Section 2.8.3). They are controlled by solid state relays and are either full on or full off. T1 is an AD590 temperature sensor, which measures the temperature of the top plate. T6 is an AD590 temperature sensor, which measures the temperature of the bottom plate

STARTUP MODE

Mode 4: H1 and H2 are controlled with a software thermostat. Control of H1 and H2 is based on the difference between T1 and T6. NOTE: Upon ALICE startup, this is the default mode.

Parameters:

Delta-T turn-on threshold
/I_SET_DEFAULT index = 16
default value = 18 (+7.88 deg C)

Delta-T turn-off threshold
/I_SET_DEFAULT index = 17
default value = 9 (+3.94 deg C))

Action:

If (T1-T6) > Delta-T turn-on threshold, turn on H2
If (T6-T1) > Delta-T turn-on threshold, turn on H1
If ((T1>T6) and ((T1-T6) < Delta-T turn-off threshold)), turn off H2
If ((T6>T1) and ((T6-T1) < Delta-T turn-off threshold)), turn off H1

BACKUP MODES

Mode 0: Automatic control of H1 and H2 is disabled.

Mode 1: H1 is controlled with a software thermostat, H2 is disabled. Control of H1 is based on T1

Parameters:

H1 turn-on threshold
/I_SET_DEFAULT index = 13
default value = 162 (+20.1 deg C)

H1 turn-off threshold
/I_SET_DEFAULT index = 12
default value = 185 (+30.2 deg C)

Action:

If T1 is greater than H1 turn-off threshold, H1 is turned off
If T1 is less than H1 turn-on threshold, H1 is turned on

Mode 2: H2 is controlled with a software thermostat, H1 is disabled. Control of H2 is based on T6

Parameters:

H2 turn-on threshold
/I_SET_DEFAULT index = 15
default value = 162 (+20.1 deg C)

H2 turn-off threshold
/I_SET_DEFAULT index = 14
default value = 185 (+30.2 deg C)

Action:

If T6 is greater than H2 turn-off threshold, H2 is turned off
If T6 is less than H2 turn-on threshold, H2 is turned on

Mode 3: H1 is controlled with a software thermostat, H2 is controlled with a software thermostat.
Control of H1 is based on T1, Control of H2 is based on T6

Parameters:

H1 turn-on threshold
/I_SET_DEFAULT index = 13
default value = 162 (+20.1 deg C)

H1 turn-off threshold
/I_SET_DEFAULT index = 12
default value = 185 (+30.2 deg C)

H2 turn-on threshold
/I_SET_DEFAULT index = 15
default value = 162 (+20.1 deg C)

H2 turn-off threshold
/I_SET_DEFAULT index = 14
default value = 185 (+30.2 deg C)

Action:

If T1 is greater than H1 turn-off threshold, H1 is turned off
If T1 is less than H1 turn-on threshold, H1 is turned on
If T6 is greater than H2 turn-off threshold, H2 is turned off
If T6 is less than H2 turn-on threshold, H2 is turned on

2.9.2 Heater H12 Control

H12 is a 3.75 W heater located on the MFPA conductor bar (See Section 2.7.1). H12 is powered from +15V and is controlled with an analog proportional/integral compensator with heater current as the control variable (See Section 2.8.3). Current commands are generated by a 12-bit D/A converter. T19 is a DT570 cryogenic temperature sensor, which measures the temperature of the MFPA conductor bar. HTRAM is the voltage applied to the FPA heater by Side A of SBRS' thermal control system. HTRBM is the voltage applied to the FPA heater by Side B of SBRS' thermal control system

STARTUP MODE

Mode 4: Current commands for H12 are generated by proportional plus integral control of HTRAM or HTRBM depending on which FPE Thermal Control bus is active. Mode 3 and Mode 4 are identical except that in Mode 4, current commands are not updated while FPE Operational Power is on. NOTE: Upon ALICE startup, this is the default mode.

Parameters:

HTRAM (HTRBM) Setpoint
/I_SET_DEFAULT index = 28
default value = 78 (9.09 Volts, 0.4 W)

Heater Power Control Proportional Gain (KP)
/I_SET_DEFAULT index = 29
default value = 100

Heater Power Control Integral Gain (KI)
/I_SET_DEFAULT index = 30
default value = 10

Heater Power Control Interval
/I_SET_DEFAULT index = 100
default value = 5 (seconds)

Action:

If FPE Operational Power is on, zero the Control Interval Counter and EXIT

- This serves to hold last value of the MFPA Conductor Bar power during data collection.

If the Control Interval has elapsed:

- Calculate the error signal, $u(t)$ (the difference between HTRAM or HTRBM and the setpoint)
- Compute the control, $y(t) = y(t-1) + (KP*u(t) - KP*u(t-1) + KI*u(t)) / 10$
- Limit the control so as not to exceed minimum or maximum H12 current
- Update error and control shift registers for next time

BACKUP MODES

Mode 0: Automatic control of H12 is disabled.

Mode 1: Current commands for H12 are generated by thermostatic control of T19.

Parameters:

H12 turn-on threshold
/I_SET_DEFAULT index = 24
default value = 60 (-53.9 deg C)

H12 turn-off threshold
/I_SET_DEFAULT index = 23
default value = 52 (-52.0 deg C)

Action:

If T19 is greater than H12 turn-off threshold, H12 current command is set to zero.

If T19 is less than H12 turn-on threshold, H12 current command is set to maximum value (0.25 Amps).

Mode 2: Current commands for H12 are generated by proportional plus integral control of T19

Parameters:

T19 Temperature Setpoint
/I_SET_DEFAULT index = 25
default value = 56 (-52.9 deg C)

Temperature Control Proportional Gain (KP)
/I_SET_DEFAULT index = 26
default value = 100

Temperature Control Integral Gain (KI)
/I_SET_DEFAULT index = 27
default value = 10

Temperature Control Interval
/I_SET_DEFAULT index = 100
default value = 5 (seconds)

Action:

If the Control Interval has elapsed:

- Calculate the error signal, $u(t)$ (the difference between T19 and the setpoint).
- Compute the control:
$$y(t) = y(t-1) + (KP*u(t) - KP*u(t-1) + KI*u(t)) / 10$$
- Limit the control so as not to exceed minimum or maximum H12 current

- Update error and control shift registers for next control interval

Mode 3: Current commands for H12 are generated by proportional plus integral control of HTRAM or HTRBM depending on which FPE Thermal Control bus is active.

Parameters:

HTRAM (HTRBM) Setpoint
/I_SET_DEFAULT index = 28
default value = 78 (9.09 Volts, 0.4 W)

Heater Power Control Proportional Gain (KP)
/I_SET_DEFAULT index = 29
default value = 100

Heater Power Control Integral Gain (KI)
/I_SET_DEFAULT index = 30
default value = 10

Heater Power Control Interval
/I_SET_DEFAULT index = 100
default value = 5 (seconds)

Action:

If the Control Interval has elapsed:

- Calculate the error signal, $u(t)$ (the difference between HTRAM or HTRBM and the setpoint)
- Compute the control, $y(t) = y(t-1) + (KP*u(t) - KP*u(t-1) + KI*u(t))/10$
- Limit the control so as not to exceed minimum or maximum H12 current
- Update error and control shift registers for next time

2.9.3 Heater H7-H11 Control

H7 is a 0.75 W heater located on the FPA radiator (See Section 2.7.1). H8 is a 1.5 W heater located on the FPA radiator. H9 is a 3.4 W heater located on the FPA radiator. H10 is a 6.4 W heater located on the FPA radiator. H11 is a 12.3 W heater located on the FPA radiator. H7-H11 are powered from +28V (See Section 2.8.3). They are individually controlled with solid-state relays. Together, these heaters may be used as a five bit "digital-to-thermal converter" for quasi-proportional control. T34 is a DT570 cryogenic temperature sensor, which measures the temperature of the FPA radiator. H12_CUR is the measured current drawn through H12 (MFPA conductor bar heater).

STARTUP MODES

Mode 3: H7-H11 are used as a thermal-to-digital converter and are controlled with the output of a proportional plus integral control loop with H12_CUR as the control variable. NOTE: Upon ALICE startup, this is the default mode.

Parameters:

H12_CUR Moving Average Count
/I_SET_DEFAULT index = 106
default value = 10

H12_CUR Current Setpoint
/I_SET_DEFAULT index = 102
default value = 139 (0.18 Amps)

Heater Power Control Proportional Gain (KP)
/I_SET_DEFAULT index = 103
default value = 10

Heater Power Control Integral Gain (KI)
/I_SET_DEFAULT index = 104
default value = 10

Maximum Heater Power Increase
/I_SET_DEFAULT index = 113
default value = 8 (0.23 Amps)

Maximum Heater Power Decrease
/I_SET_DEFAULT index = 114
default value = 8 (0.23 Amps)

Heater Power Control Interval
/I_SET_DEFAULT index = 101
default value = 1200 (seconds)

Action:

Calculate the average of the specified number of previous values of H12_CUR.

If FPE Operational Power is on, zero the Control Interval Counter and EXIT

- This serves to hold last value of FPA Radiator power during data collection

- The counter is zeroed to give the other loops in the system time to settle before the first correction is applied when FPE Operational Power is turned off

If the Control Interval has elapsed:

- Calculate the error signal, $u(t)$

- Compute the control, $y(t) = y(t-1) + (KP*u(t) - KP*u(t-1) + KI*u(t))/10$

- Limit the control so as not to exceed maximum delta

If $y(t) > y(t-1)$ and $(y(t)-y(t-1)) > \text{max increase}$ then $y(t) = y(t-1) + \text{max increase}$

If $y(t) < y(t-1)$ and $(y(t-1)-y(t)) > \text{max decrease}$ then $y(t) = y(t-1) + \text{max decrease}$

- Limit the control so as not to exceed bounds of digital to thermal converter

- Update error and control shift registers for next time

BACKUP MODES

Mode 0: Automatic control of H7-H11 is disabled.

Mode 1: H7-H11 are controlled with a software thermostat

Parameters:

H7-H11 turn-on threshold

/I_SET_DEFAULT index = 19

default value = 145 (-74.2 deg C)

H7-H11 turn-off threshold

/I_SET_DEFAULT index = 18

default value = 140 (-73.0 deg C)

Action:

If T34 is greater than H7-H11 turn-off threshold, all heaters are turned off

If T34 is less than H7-H11 turn-on threshold, all heaters are turned on

Mode 2: H7-H11 are used as a thermal-to-digital converter and are controlled with the output of a proportional plus integral control loop with T34 as the control variable.

Parameters:

T34 Temperature Setpoint
/I_SET_DEFAULT index = 20
default value = 90 (-60.04 deg C)

Temperature Control Proportional Gain (KP)
/I_SET_DEFAULT index = 21
default value = 10

Temperature Control Integral Gain (KI)
/I_SET_DEFAULT index = 22
default value = 0

Temperature Control Interval
/I_SET_DEFAULT index = 99
default value = 60 (seconds)

Action:

If the Control Interval has elapsed:

- Calculate the error signal, $u(t)$ (the difference between T34 and the setpoint).
- Compute the control:
$$y(t) = y(t-1) + (KP*u(t) - KP*u(t-1) + KI*u(t)) / 10$$
- Limit the control so as not to exceed bounds of the digital to thermal converter
- Update error and control shift registers for next control interval

2.9.4 Temperature Control System Operation – STANDBY MODE

A block diagram of the ALI FPA temperature control system while the ALI is in idle mode (FPE operational power off) is shown in Figure 36. In this mode, the FPE regulates power to the FPA rail heater according to the difference between the FPA temperature and FPA temperature setpoint. If the FPA is too cold, power is applied to the FPA rail heater. Correspondingly, if the FPA is too warm, power to the FPA rail heater is removed. In a similar manner, power to the ALI TCS H12 heater is regulated according to the difference between the FPA rail heater power and FPA rail heater power setpoint. Finally, the ALI TCS FPA radiator heaters H7-11 are regulated based on the difference between the H12 current and H12 current setpoint. Monitoring and control of these loops are autonomously provided by ALICE.

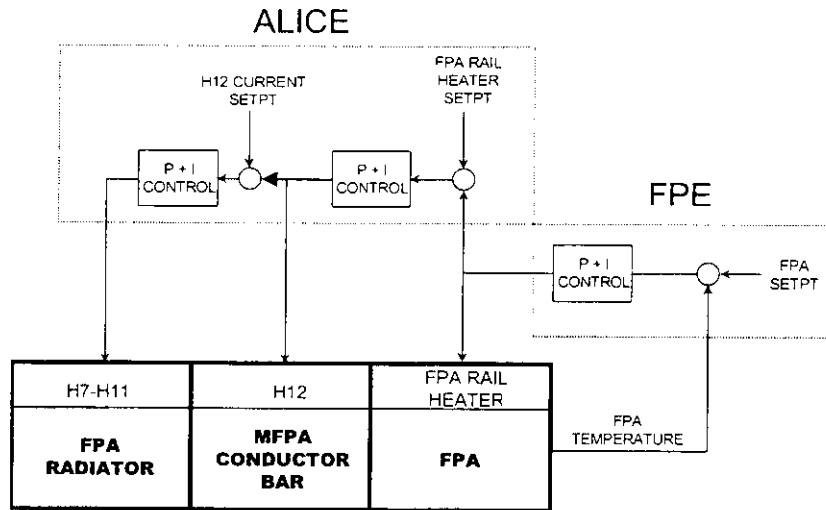


Figure 36. ALI thermal control loop when the instrument is in idle mode. In this mode the focal plane array operational power is turned off and the FPE feedback loop is enabled.

2.9.5 Temperature Control System Operation – DATA TAKING MODE

A block diagram of the ALI FPA temperature control system during data collection is shown in Figure 37. A feature of the thermal control system implemented in the FPE is that when FPE Operational Power is turned on, the FPA Temperature loop is effectively disabled because the feedback signal is corrupted by noise generated in the FPE. It is assumed that this comes about because the DT570 diode temperature sensor rectifies AC noise and a large offset is imposed on the signal. The FPE thermal control system reacts by reducing the FPA Rail Heater to zero. In order to overcome this, the ALI TCS holds the last value of H12 current command as well as the last H7-H11 commands when the ALICE enables FPE operational power. The heat lost by disabling the FPE temperature loop is replaced by electronic dissipation in the FPA resulting from the operation of the SCAs. The FPA Rail Heater Setpoint (0.4 Watts) was chosen so that the power provided to the FPA would remain constant during data collection and during FPE thermal control.

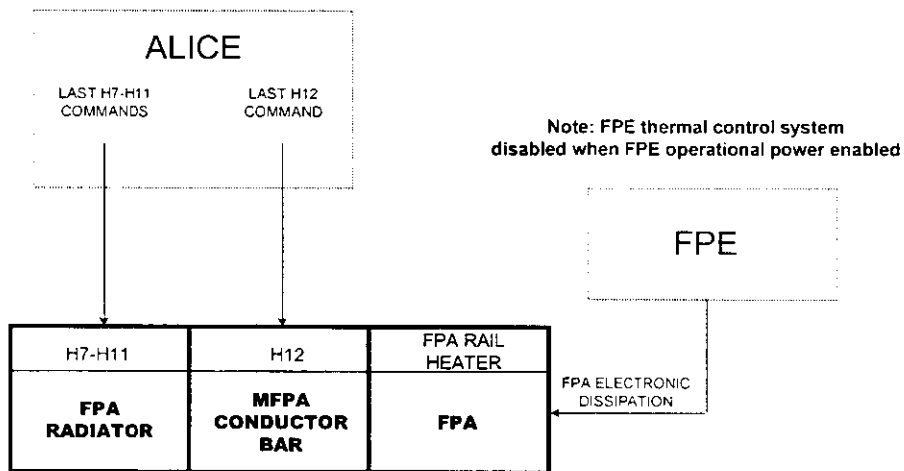


Figure 37. ALI thermal control loop when the ALI is in data collection mode. In this mode the focal plane operational power is on and FPE feedback loop is defeated.

2.9.6 Temperature Control System Commands

There are a number of commands that can be issued to alter the performance of the ALI TCS.

| Command | Parameter 1 | Parameter 2 | Parameter 3 |
|------------------------------|-------------------|--------------------|-----------------|
| /I_TCS_AUTO_CTRL_MODE | h1_h2_mode | h7_h11_mode | h12_mode |

This command changes the control modes (described above) of the various loops to the value specified. If a mode change for a particular loop is commanded, the heater(s) associated with that loop are turned off and any associated state variables are initialized to zero. Note that upon startup (or when automatic control is enabled with “/I_SET_TCS_MODE 1”), the default modes are as follows:

H1-H2: mode 4, control truss Delta-T thermostatically
H7-H11: mode 3, regulate H12_CUR
H12: mode 4, regulate HTRAM (HTRBM)

The corresponding /I_SET_DEFAULT parameter indices are as follows:

H1-H2: index = 9
H7-H11: index = 10
H12: index = 11

| Command | Parameter 1 | Parameter 2 |
|-----------------------|------------------------|--------------|
| /I_SET_DEFAULT | parameter_index | value |

This command allows the user to change the various parameters of the ALI TCS. Below is summary of TCS commandable parameters:

H1-H2 startup mode
 /I_SET_DEFAULT index = 9, value = 4

H7-H11 startup mode
 /I_SET_DEFAULT index = 10, value = 3

H12 startup mode
 /I_SET_DEFAULT index = 11, mode = 4

H1 turn-on threshold (mode 1, 3)
 /I_SET_DEFAULT index = 13, value = 162

H1 turn-off threshold (mode 1, 3)
 /I_SET_DEFAULT index = 12, value = 185

H2 turn-on threshold (mode 2, 3)
 /I_SET_DEFAULT index = 15, value = 162

H2 turn-off threshold (mode 2, 3)
 /I_SET_DEFAULT index = 14, value = 185

Delta-T turn-on threshold (mode 4)
 /I_SET_DEFAULT index = 16, value = 18

Delta-T turn-off threshold (mode 4)
 /I_SET_DEFAULT index = 17, value = 9

H7-H11 turn-on threshold (mode 1)
 /I_SET_DEFAULT index = 19, value = 145

H7-H11 turn-off threshold (mode 1)
 /I_SET_DEFAULT index = 18, value = 140

T34 Temperature Setpoint (H7-H11 mode 2)
 /I_SET_DEFAULT index = 20, value = 90

Temperature Control Proportional Gain (H7-H11 mode 2)
 /I_SET_DEFAULT index = 21, value = 10

Temperature Control Integral Gain (H7-H11 mode 2)
 /I_SET_DEFAULT index = 22, value = 0

Temperature Control Interval (H7-H11 mode 2)
 /I_SET_DEFAULT index = 99, value = 60

H12_CUR Moving Average Count (H7-H11 mode 3)
 /I_SET_DEFAULT index = 106, value = 10

H12_CUR Current Setpoint (H7-H11 mode 3)
 /I_SET_DEFAULT index = 102, value = 139

H12 Power Control Proportional Gain (H7-H11 mode 3)
 /I_SET_DEFAULT index = 103, value = 10

H12 Power Control Integral Gain (H7-H11 mode 3)
 /I_SET_DEFAULT index = 104, value = 10

Maximum Heater Power Increase (H7-H11 mode 3)
 /I_SET_DEFAULT index = 113, value = 8

Maximum Heater Power Decrease (H7-H11 mode 3)
 /I_SET_DEFAULT index = 114, value = 8

Heater Power Control Interval (H7-H11 mode 3)
 /I_SET_DEFAULT index = 101, value = 1200

H12 turn-on threshold (H12 mode 1)
 /I_SET_DEFAULT index = 24, value = 60

H12 turn-off threshold (H12 mode 1)
 /I_SET_DEFAULT index = 23, value = 52

T19 Temperature Setpoint (H12 mode 2)
 /I_SET_DEFAULT index = 25, value = 56

Temperature Control Proportional Gain (H12 mode 2)
 /I_SET_DEFAULT index = 26, value = 100

Temperature Control Integral Gain (H12 mode 2)
 /I_SET_DEFAULT index = 27, value = 10

HTRAM (HTRBM) Setpoint (H12 mode 3, 4)
 /I_SET_DEFAULT index = 28, value = 78

Heater Power Control Proportional Gain (H12 mode 3, 4)
 /I_SET_DEFAULT index = 29, value = 100

Heater Power Control Integral Gain (H12 mode 3, 4)
 /I_SET_DEFAULT index = 30, value = 10

Heater Power Control Interval (H12 mode 3, 4)
 /I_SET_DEFAULT index = 100, value = 5

| Command | Parameter |
|---------|-----------|
|---------|-----------|

| | |
|-------------------------|------------------|
| /I_ENA_HTR_BANKS | bank_mask |
|-------------------------|------------------|

This command enables/disables each of the four heater banks. If the corresponding bit of bank_mask is set the bank is enabled. If cleared, the bank is disabled.

Bit 0 of bank_mask: Heater Bank 1
 Bit 1 of bank_mask: Heater Bank 2
 Bit 2 of bank_mask: Heater Bank 3
 Bit 3 of bank_mask: Heater Bank 4

H1 and H2 are located in Heater Bank 1
 Heater Bank 2 is an unused spare
 H7-H11 are located in Heater Bank 3
 H12 is located in Heater Bank 4

Upon restart, Heater Banks 1, 3 and 4 are enabled.

| Command | Parameter |
|------------------------|-------------|
| /I_SET_TCS_MODE | mode |

This command globally enables/disables the ALI TCS.

If mode = 0, TCS is disabled (manual control enabled)
 If mode = 1, TCS is enabled

When changing from automatic mode to manual mode or vice versa, all heaters are turned off. Note that this command has no effect on SBRS' thermal control system, which is turned on/off by enabling/disabling the FPE Thermal buses.

Upon restart, the ALI TCS is enabled.

| Command | Parameter | Parameter |
|------------------------|-----------------|--------------------|
| /I_MAN_HTR_CTRL | htr_mask | h12_command |

This command allows manipulation of each individual heater in the ALI TCS. If the corresponding bit of htr_mask is set the heater is turned on. If cleared, the heater is turned off.

- Bit 0 of htr_mask: H1
- Bit 1 of htr_mask: H2
- Bit 2 of htr_mask: spare
- Bit 3 of htr_mask: spare
- Bit 4 of htr_mask: spare
- Bit 5 of htr_mask: spare
- Bit 6 of htr_mask: H7
- Bit 7 of htr_mask: H8
- Bit 8 of htr_mask: H9
- Bit 9 of htr_mask: H10
- Bit 10 of htr_mask: H11

Note that h12_command is transmitted directly to the D/A converter as a current command. This command is ignored if the ALI TCS is enabled.

3. INSTRUMENT ASSEMBLY AND ENGINEERING TEST RESULTS

The flight telescope was delivered by SSG to MIT Lincoln Laboratory in April 1998. The Focal Plane System was delivered by SBRS in June 1998. ALI sub-systems were assembled, integrated, and tested over a 9-month period in preparation for delivery to the spacecraft integrator (Swales Aerospace) in March 1999. The integration and assembly followed a set of NASA processes specially tailored for the program quality control, documentation, and cleanliness of space-qualified components and sub-systems. During this time period testing was undertaken for subsystem alignment, for space flight qualification, and for performance measurement.

3.1 THERMAL AND MECHANICAL TESTING

A number of successful tests were conducted to establish the qualification of the ALI for launch and space operation. Table 2 summarizes these tests.

TABLE 2
Thermal and Mechanical Tests During Development

| Test | Test Conditions |
|--|---|
| Sine burst acceleration along each axis <ul style="list-style-type: none"> • ALI Structural Thermal Model • Flight units box level | <ul style="list-style-type: none"> • Qualification[*] • Protoflight[†] |
| Sine sweep <ul style="list-style-type: none"> • Flight units box level • ALI flight unit | <ul style="list-style-type: none"> • Protoflight[†] • Protoflight[†] |
| Random vibration along each axis <ul style="list-style-type: none"> • Flight units box level • ALI Flight Unit Note: Acceleration spectrum was notched as necessary to insure 3 σ acceleration loads did not exceed Qualification Level loads at any frequency for non-electronics box level testing. | <ul style="list-style-type: none"> • Protoflight[†] • Protoflight[†] |
| Mechanism Life Testing <ul style="list-style-type: none"> • Mechanism's Engineering Development Unit | 1.5 times design life Aperture Selector and Calibration Diffuser: 240 cycles Aperture Cover: 3900 cycles Survive 50°C to -10°C thermal cycle before and after test |
| Thermal Cycle Testing <ul style="list-style-type: none"> • ALI Flight Unit | 50°C to -30°C survival hot-to-cold soak cycle Four thermal cycles 40°C to -10°C Checked operation before, during, and after each cycle. |

^{*} Qualification levels = 1.5 \times flight levels (2 oct/minute)

[†] Protoflight levels = 1.25 \times flight levels (4 oct/minute)

[‡] Protoflight levels = flight level + 3 dB (1 minute/axis)

To facilitate testing, an ALI Structural Thermal Model (STM) and an Engineering Development Unit (EDU) of the ALICE and mechanisms were developed during the course of fabrication and assembly of the instrument. The STM was subjected to qualification level testing, while flight box and instrument level testing was restricted to protoflight levels.

After being fully assembled, the ALI also underwent thermal vacuum testing to 1) validate the ALI thermal model and 2) demonstrate survivability of the instrument within an environment more severe than expected on orbit. This testing was conducted at Lincoln Laboratory and included thermal soaking and thermal cycling while under vacuum. Figure 38 shows the instrument being placed into the thermal vacuum test chamber. Figure 39 provides a summary of ALI thermal vacuum testing, compared to on-orbit expectations. Testing at Lincoln Laboratory is included in the ALI I&T region.

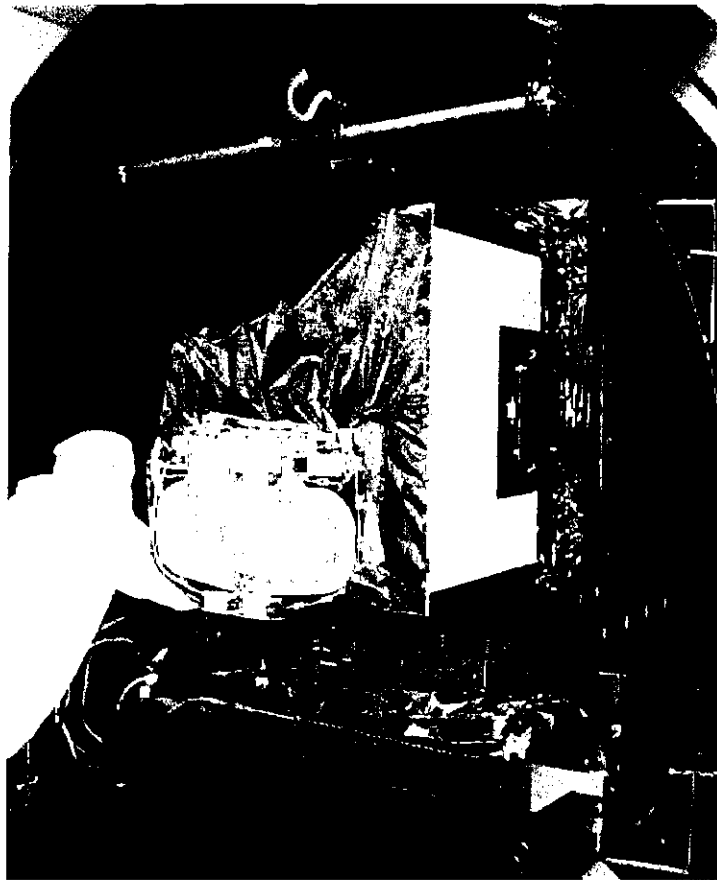


Figure 38. ALI being placed into thermal-vacuum test chamber.

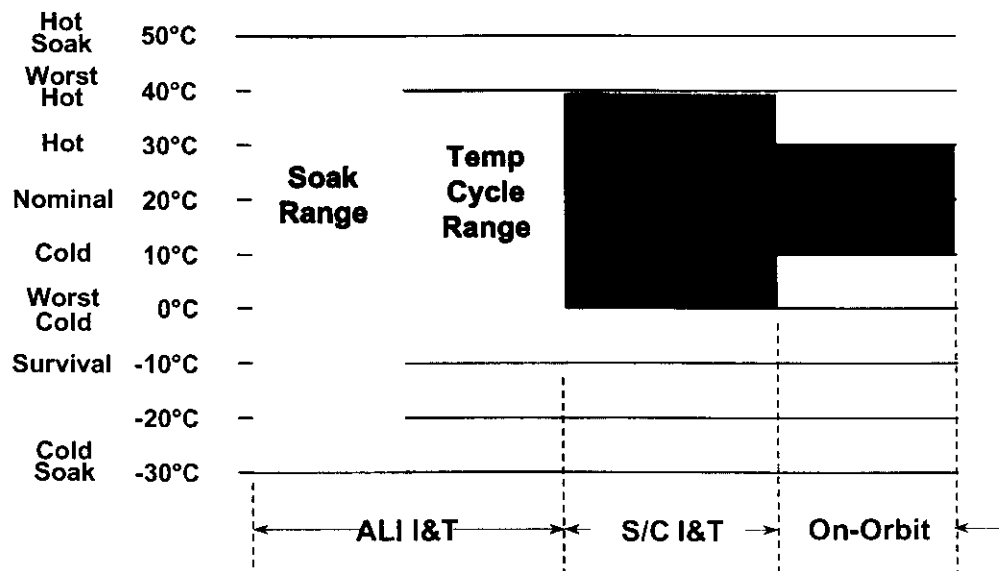


Figure 39. ALI thermal vacuum testing temperature ranges.

4. ALI CALIBRATION

The calibration and characterization plan for the ALI has both pre-launch and in-flight components⁶⁻¹². The objectives are to characterize the overall instrument performance and to determine all instrument parameters required to generate accurate estimates of spatial, spectral and radiometric image quantities. The ALI performance requirements were guided by the Landsat 7 specification⁵ and were generated in concert with Landsat, EOS and EO-1 calibration scientists. The requirements were also constrained by the primary NMP mission objective, which is the validation of key technologies in flight. The instrument performance and verification tests included: measurements of noise, repeatability, polarization dependencies, temperature transient response, saturation recovery, image artifacts, and stray light rejection. The overall strategy is illustrated in Figure 40.

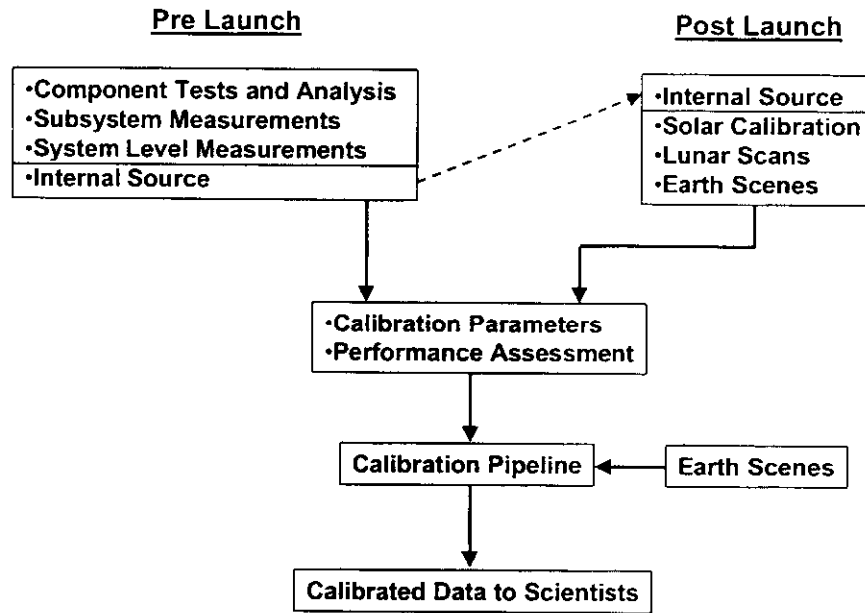


Figure 40. The EO-1 ALI pre-launch and post-launch calibration strategy.

The sensor calibration data comprise five measurement categories and are established for each detector channel (N). These are:

- a) Normalized spectral response function: $F_N(\lambda)$

This function represents the relative response of a detector channel to a constant monochromatic radiance ($W/cm^2 \cdot sr \cdot \mu m$) at the entrance aperture of the sensor as a function of wavelength. The function is normalized to unity at the peak. These functions define the in-band radiance L^*_λ at the entrance of the sensor:

$$L^*_\lambda = \int L(\lambda)F_N(\lambda)d\lambda, \text{ where } L(\lambda) \text{ is the spectral radiance at the entrance of the sensor.}$$

- b) Pixel angular position in object space: $(\alpha, \beta)_N$

Each detector will respond to the radiance from different angular directions. This direction is determined both by the location of the detector in the focal plane of the telescope and the distortion from the optical system. Undistorted reconstruction of the scene requires accurate knowledge of the relative angular position of each detector in object space. These are measured relative to an arbitrary bore-sight direction.

c) Modulation transfer function: MTF_N

The MTF for each detector channel is a two dimensional function of spatial frequency. It represents the magnitude of the Fourier transform of the detector channel's system response versus angle to a point source. The MTF is a measure of image sharpness and is used in quantitative image reconstruction.

d) Zero signal digital number offset: dn_0

This is the digital number offset that each detector channel has when there is no input radiance. These offsets remain fairly constant, however they are measured for every data collection event to improve accuracy.

e) Response coefficient: C_N

These convert raw digital numbers (dn) to estimates of in-band radiance (L_λ^*), i.e., $L_\lambda^* = C_N (dn - dn_0)$. Although C_N is approximately constant over the full dynamic range it is in general a weak function of $(dn - dn_0)$. This is accounted for in the calibration process. Each detector channel has 16 functional representations for C_N , one for each integration time.

These five calibration "parameters" are built up from all the pre and post launch measurements. A summary of this process, including the relative weight of each measurement, is shown in Table 3. Note that there is at least one primary measurement for each of the five "parameters" and that for the spectral response functions there is no on-orbit measurement of significant value.

TABLE 3

ALI Calibration Matrix

Primary measurements are denoted by solid circles and secondary measurements by open circles. A dash indicates that no data of any significant value is obtained.

| | Spectral Response Function | Response Coefficient | Zero Signal Offset | Pixel Angular Position | Modulation Transfer Function |
|--|----------------------------|----------------------|--------------------|------------------------|------------------------------|
| Component Tests and Analysis | ● | ○ | — | — | ○ |
| Subsystem Tests: Telescope and MS/Pan | — | ○ | ○ | ○ | ○ |
| Instrument-Level Laboratory Tests | ● | ● | ○ | ● | ● |
| On-Orbit Measurements: | | | | | |
| Solar Diffuser | — | ● | — | — | — |
| Closed Aperture | — | — | ● | — | — |
| Internal Source | — | ○ | — | — | — |
| Lunar Scans | — | ○ | ○ | — | ○ |
| Earth Scenes | — | ○ | — | ○ | ○ |

4.1 PRE-LAUNCH CALIBRATION AND CHARACTERIZATION STRATEGY

The pre-launch component, which is essentially completed, began with testing and analysis at the component level. This process continued through subsystem and system level testing. The objective was to generate initial estimates of the sensor's spatial, spectral, and radiometric characteristics and then track the performance throughout the development phases of the instrument. This provided an early indication of any test setup errors, analysis errors, or performance anomalies. Moreover, since this process employed a number of independent and complementary calibration methods, consistency in projected performance increased the confidence of the final calibration parameters. Pre-launch testing and calibration were conducted under mission-like conditions including appropriate environmental conditions, and the full range of signal levels, wavelengths and spatial frequencies. The internal reference source was used throughout ground testing as a health check and to measure stability of performance. This was especially useful during environmental testing as a means of verifying satisfactory performance. Some measure of absolute radiometry is established for the internal reference source by transfer to the integrating sphere calibration. The design of the internal source is described in Section 2.3.

4.2 IN-FLIGHT CALIBRATION STRATEGY

The post-launch calibration will begin with internal source measurements. This is the only direct link to the pre-launch calibration and establishes continuity of performance from ground to space. The on-orbit absolute calibration relies primarily on solar calibration. For solar calibration there is motor-driven aperture selector in the aperture cover assembly itself. The aperture selector moves an opaque slide over a row of small to increasingly larger slit openings and then reverses the slide motion to block all light. Just prior to solar calibration, a Spectralon diffuser plate is swung over the secondary mirror by a motor-driven mechanism. The diffuser reflectively scatters the sunlight that would otherwise impinge on the secondary. During solar calibration the reflectively scattered sunlight exposes the FPA to an irradiance that is equivalent to earth-reflected sunlight for an earth albedo ranging from 0 to 90%. This is illustrated in Figure 41. Lunar scans are planned and will be used as a measure of image quality and radiometric accuracy. Finally, well-characterized ground scenes will be used for both image quality assessment and radiometry. The on-orbit calibration plan is intended to contain adequate capabilities for cross checks and diagnostic tests.

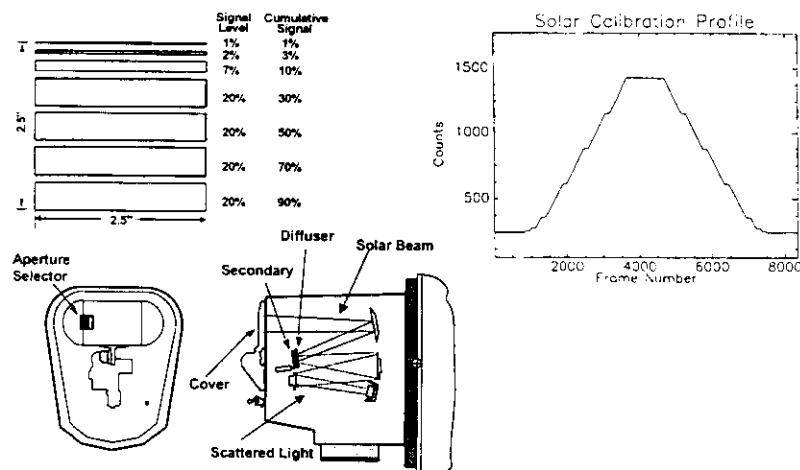


Figure 41. Illustration of the solar calibration mode and detector data from the laboratory functional test using a solar simulator.

Finally, the ALI will produce images that will be directly compared to those from the ETM+. The goal is to demonstrate that the ALI technology will provide data continuity with previous and current Landsat data. The EO-1 satellite will fly "in formation" with the Landsat 7 satellite in a sun-synchronous, 705 km, approximately 100 minute period orbit with a 10:01 am descending node. That is, it will be in an orbit that covers the same ground track as Landsat 7, approximately one minute later. The objective is to obtain images of the same ground areas at nearly the same time, so that scenes may be directly compared. It is planned that two to four scenes per day will be collected. Accordingly, the basic field of view, angular resolution, and spectral bands are matched to be as good or better than those of the ETM+.

5. CALIBRATION PIPELINE

The ALI raw science data collected on orbit is downlinked and sent to Goddard Space Flight Center where it is converted to radiometrically calibrated data with engineering units of $\text{Wcm}^{-2}\text{sr}^{-1}$ by the calibration pipeline¹³. This section addresses the design and implementation of the pipeline, the initialization of the calibration database, the monitoring of system stability and handling of leaky pixel data anomalies by the software.

5.1 BACKGROUND

The ALI raw science data is downlinked, descrambled and arranged in imageable, band sequential order. This set of digital numbers, or raw sensor counts C_n , collected on orbit is referred to as the Level 0 science data. The radiometric calibration pipeline converts the Level 0 science data to the estimated in-band radiance L_λ^* with engineering units of $\text{Wcm}^{-2}\text{sr}^{-1}$. This radiometrically calibrated data is referred to as the Level 1R science data. The simple equation defining the transform is:

$$L_\lambda^* = R_n(C_n - C_0)$$

where C_0 is the offset coefficient derived from the dark noise, and R_n is the response coefficient from the calibration database defining the relationship between the digital numbers and the estimated in-band radiance. The database of radiometric calibration response coefficients is derived from seven sources of radiometric calibration data. These seven sources are laboratory ground data, solar calibration data, lunar calibration data, deep space data, internal reference lamps, dark data, and flights over areas of known radiance. The main source for generating the coefficient database prior to launch is the laboratory ground calibration data.

During a typical on orbit data collection event (DCE), up to 30 seconds of science data are collected, followed by 8 seconds of internal reference lamp data, and two seconds of dark data. These three sources of data form three datasets in a single Level 0 file. This file is the input to the radiometric calibration pipeline. The general software flow diagram is shown in Figure 42. The output of the calibration pipeline is a processing log and a single Level 1R file with three datasets corresponding to the radiometrically calibrated science data, the associated offset coefficients C_0 , and the associated response coefficients R_n . The processing log contains warnings and general processing notes generated by the error checking functions or by the main calibration routine.

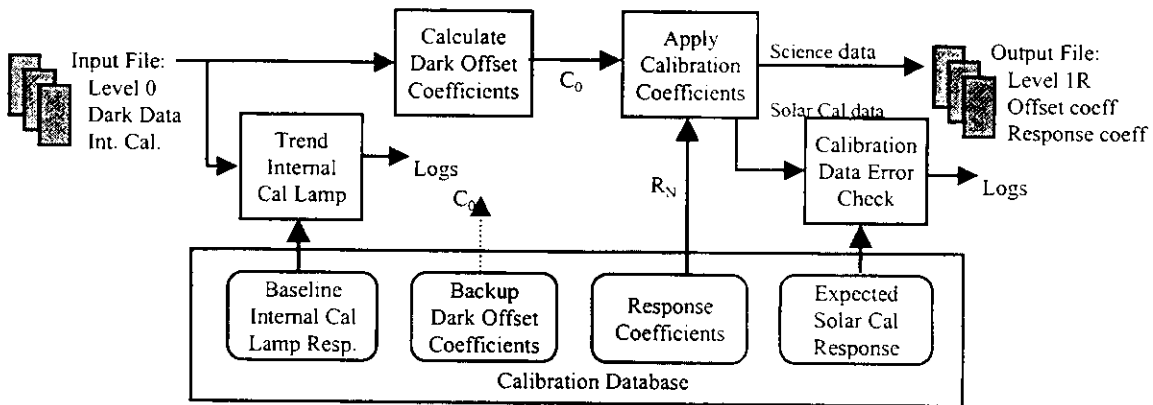


Figure 42. Calibration pipeline software flow diagram.

The calibration pipeline depends heavily on the calibration database, which contains four datasets. The most important dataset is the set of calibration response coefficients R_n , which are used regularly for the primary calibration. The other datasets within the calibration pipeline database are a default set of offset coefficients, a baseline internal reference lamp dataset, and an expected solar response dataset. The offset coefficients, C_0 , are generally computed for each DCE from the dark data included in the Level 0 file. However, if for some reason dark data is not available for a single DCE or all DCEs, e.g., the instrument cover no longer closes, a set of default offset coefficients exists in the database. The internal reference lamp dataset that is collected along with each DCE is compared to the baseline internal reference lamp dataset. Any significant change in response is noted in the calibration pipeline's processing log, and serves as a flag for detecting changes in the instrument. The expected solar calibration response dataset is used in a similar manner. The data collected during an on orbit solar calibration DCE will be radiometrically corrected using the calibration pipeline's offset and response coefficients. The expected radiometric solar response is compared to the measured response with any significant variation noted in the calibration pipeline's processing log.

5.2 INPUT/OUTPUT

The radiometric calibration pipeline is a stand alone, deliverable, software routine that receives Level 0 data as an input, performs the calibration, and outputs the Level 1R radiometrically calibrated data. Both the Level 0 data and the Level 1R data are available to various science teams performing data analysis in a distributed environment. Given the distributed work environment, the Hierarchical Data Format (HDF), created by the National Center for Supercomputing Applications (NCSA), was chosen for the file formats. HDF is self-describing, platform independent, and has supporting software for retrieval, storage, and visualization of the data, which makes the data easily readable by the distributed science teams.

In addition to containing the basic science data, the Level 0 and Level 1R data files also contain most of the ancillary data needed for the basic science data processing. This ancillary data is stored in HDF fields called attributes. Each single Level 0 or Level 1R data file contains multiple datasets. Each file has a set of file attributes pertaining to that datafile and all of its datasets, e.g., file name, time of generation, and names of related files. Each dataset also has attributes with data parameters specific to that dataset, e.g., sensor used, dataset type, dimensions of dataset, integration time and frame rate. By using HDF and putting all of this information in a single, self-describing, platform independent file, any science team member is able to begin processing the data without further file format documentation. See Figure 43 for a depiction of a Level 0 file and content.

| File Attributes | | |
|---------------------------|------------------------|-----------------------------|
| Filename | Big or Little Endian | Related File 1 |
| Data Product Level | Time of Generation | Related File 2 |
| LZP Software version | Number Related Files | ... |
| Dataset 1: | Dataset 2: | Dataset 3: |
| Science Data | Dark Data | Internal Lamp Data |
| Science Data Attrs | Dark Data Attrs | Int. Lamp Data Attrs |
| ALI Sensor | ALI Sensor | ALI Sensor |
| Dataset Type | Dataset Type | Dataset Type |
| Data Start Time | # along track pixels | Integration Time |
| Percent Missing Data | # bands | Frame Rate |
| ... | ... | ... |

Figure 43. Sample HDF Level 0 file contents and structure.

5.3 CALIBRATION PIPELINE DATABASE

The radiometric calibration pipeline database is also an HDF file with multiple datasets. The primary dataset contains the response coefficients, with additional datasets for the default offset coefficients, the baseline internal reference lamp response, and the expected solar calibration response. A typical database HDF file attribute is when the database was generated. Database dataset HDF attributes include the time when the baseline internal reference lamp data was acquired, what files are the source of the default offset coefficients, and when the most recent on-orbit solar calibration data was acquired.

The main source of data for generating the calibration database prior to launch is the ground calibration data collected in the laboratory. For initializing the calibration response coefficient database, a total of 440 useable datasets were collected in the laboratory. The datasets include 96 xenon lamp datasets for calibrating the three shortest wavelength VNIR bands (MS 1', MS 1, and MS 2) and 344 halogen lamp datasets for the remaining VNIR (MS 3 MS 4, and MS 4') and SWIR (MS 5', MS 5, and MS 7.) Twelve different radiance levels were used, with the output of each level being monitored and recorded by a spectroradiometer. Three hundred and twelve of the datasets were recorded with the focal plane at the nominal operating temperature of 220 degree Kelvin, 64 datasets at 215 degree Kelvin, and 64 datasets at 225 degree Kelvin. The fourth variable was the integration time. The ALI integration times vary from 0 to 15, which correspond to 0.81 ms to 4.86 ms in steps of 0.27 ms. An integration time of 12 resulted in saturation for most bands at some radiance levels which completely exercised the full dynamic range of the focal plane.

5.4 MONITORING SYSTEM STABILITY

The radiometric calibration pipeline includes a function for monitoring the ALI stability using internal reference lamp data that will be collected on a regular basis. The internal reference lamp data was baselined prior to launch and will be trended over the course of the mission. The calibration pipeline will compare each new set of internal reference data to the baseline. If there is significant variation, a warning will be included in the calibration pipeline processing logs. The importance of the internal reference lamp data to the radiometric calibration pipeline is not for absolute radiometric calibration but for stability monitoring and overall performance assessment of the system.

Additionally the mean and standard deviation of the dark data, which is collected with every DCE, is continuously being calculated when determining the offset coefficients C_0 . These numbers have been monitored throughout the I&T process, and will continue to be monitored on orbit to assure the system hasn't changed.

5.5 LEAKY PIXEL ANOMALIES

During ground performance assessment of the system as a whole, two focal plane anomalies were discovered after application of the radiometric calibration pipeline. Leaky pixels were found on SCA 3, Band 3, detector/pixel 225 and on SCA 4, Band 2, detector/pixel 190. The focal plane electronics of the ALI are such that all even numbered detectors on a single SCA share a gate, and all odd numbered detectors share a gate. So an odd numbered leaky pixel such as pixel 225 manifests itself by leaking energy into all other odd numbered detectors or pixels on that band on that SCA and artificially raising the counts, C_n , seen on those detectors. Figure 44 is from the integration and test (I&T) imaging configuration using the Air Force image test reticle. The effect of Pixel 225 being illuminated and leaking into the other odd-numbered pixels is visible to the eye.

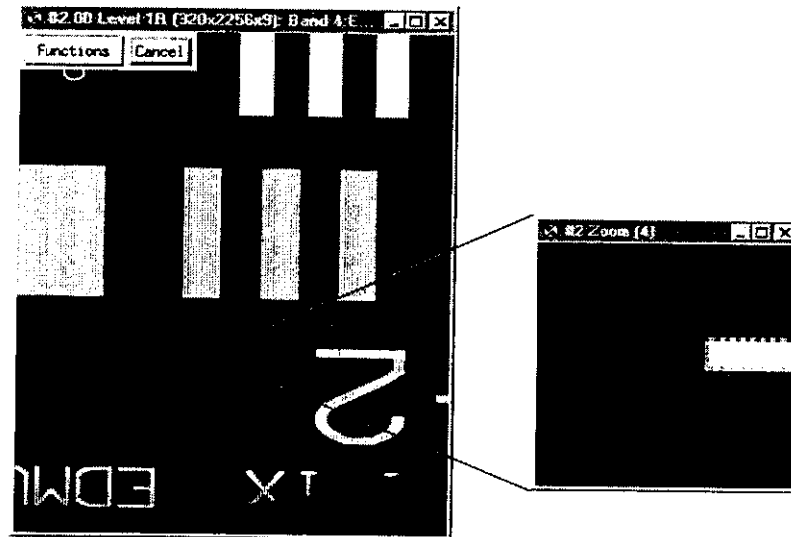


Figure 44. Effect of leaky pixel.

Ideally, the leaky pixel could be completely characterized during ground calibration by masking the leaky pixel, performing the radiometric calibration of all other detectors when unaffected by the leaker, then unmasking the leaky pixel and repeating the process. The effect of the leaky pixel on each detector would be precisely known. Unfortunately, the I&T imaging configuration which is necessary for masking of pixels and scanning of knife edges, does not support use of the halogen lamps and integrating sphere used in the radiometric calibration process which exercises the full dynamic range of the focal plane. The laboratory I&T imaging configuration does allow for limited dynamic range data collection. This data can be used to estimate the appropriate compensation for the leaky pixel and extrapolated to the higher radiances, and hopefully more finely adjusted after additional data is collected on orbit. The following discussion focuses on pixel 225 on SCA 3, Band 3, but also applies to pixel 190 on SCA 4, Band 2.

Given the limited available data, the first assumption made is that the leaky pixel, pixel 225, can be calibrated the same as all other normal pixels, thereby allowing us to determine L_l , the radiance on the leaker. The second assumption made is that the effect of the leaky pixel can be described by a linear equation. This equation describes the digital number or counts measured on pixel n , C_n , as a function of the radiance on pixel n , L_n , plus a percentage β_n of the radiance measured on the leaky pixel, L_l . The equation is written as:

$$C_n = \alpha_n L_n + \beta_n L_l \quad (1)$$

The notation defined in Table 4 is used in the following discussion. The first subscript to C denotes whether a pixel n is illuminated or dark, and the second subscript denotes whether the leaky pixel l is illuminated or dark. I is illuminated and Z is dark. Therefore:

TABLE 4

Notation For Counts on Detector n

| Notation | Pixel n | Pixel l |
|----------|-------------|-------------|
| C_{II} | Illuminated | Illuminated |
| C_{IZ} | Illuminated | Dark |
| C_{ZI} | Dark | Illuminated |
| C_{ZZ} | Dark | Dark |

The other assumptions made are that L_n and L_l are either 0, or illuminated at a constant radiance of the same value. And since all processed data has been offset corrected, C_{ZZ} is considered to be 0. Given the above notations and assumptions, the equations are:

$$\begin{aligned}
 &\text{if} \\
 &\quad L_l = 0 \\
 &\text{then} \\
 &\quad C_n = \alpha_n L_n \\
 &\quad C_{IZ} = \alpha_n L_n \\
 &\quad C_{ZZ} = \alpha_n L_n = 0
 \end{aligned} \tag{2}$$

Essentially, if the leaker is not illuminated, the counts on pixel n are purely a function of the radiance on pixel n and its radiometric coefficient, α_n . If the leaker is illuminated, the following equations apply:

$$\begin{aligned}
 C_{II} &= \alpha_n L_n + \beta_n L_l \\
 C_{II} &= C_{IZ} + \beta_n L_l \\
 \beta_n &= \frac{C_{II} - C_{IZ}}{L_l}
 \end{aligned} \tag{3}$$

and

$$\begin{aligned}
 C_{ZI} &= \alpha_n L_n + \beta_n L_l \\
 C_{ZI} &= C_{ZZ} + \beta_n L_l \\
 \beta_n &= \frac{C_{ZI} - C_{ZZ}}{L_l}
 \end{aligned} \tag{4}$$

Essentially, the coefficient β_n describing the amount of energy leaking from pixel l to pixel n can be estimated by determining the difference in counts with and without the leaky pixel illuminated, divided by the radiance on the leaky pixel.

Data was collected with the I&T imaging configuration for the above 4 cases: pixel 225 dark, remaining pixels illuminated; pixel 225 illuminated, remaining pixels dark; all pixels illuminated; and all pixels dark. Given these four datasets, β_n can be estimated with both equations (4) and (5). Results from these calculations agree to within 10% of each other. The difference in the estimates of β_n indicates the amount of energy leaked from pixel 225 into the other pixels is not only a function of the radiance on pixel 225, but also a function of the radiance on the individual pixels. Initial analysis shows the higher the radiance on pixel n, the lesser the impact of leaky pixel 225 on the measured counts C_n .

The first order linear approximation for β_n can be used initially for the radiometric calibration, with attempts to more accurately determine the best correction after receiving more data collected on orbit (Figure 45).

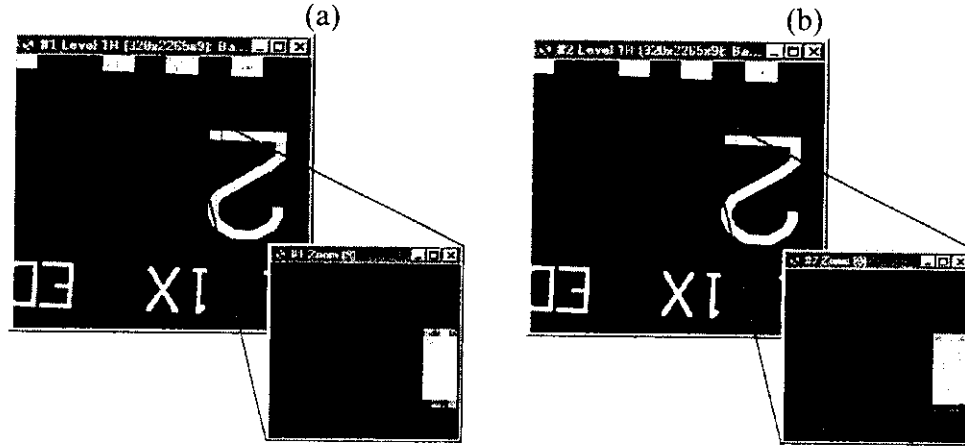


Figure 45. Affect of applying leaky pixel correction factor β_n . a.) Without correction. b.) With correction.

5.6 GEOMETRICAL IMAGE RECONSTRUCTION

The level 1R data will provide four segments of the scene recorded by the ALI, corresponding to the four SCAs of the Focal Plane Assembly. In order to create the entire image, the four segments must be merged together, taking into account the relative position of the SCAs within the module, the relative positions of each pixel within each SCA and the partial overlapping of pixel columns of adjacent SCAs. This process constitutes the Geometrical Image Reconstruction, a necessary processing step that is not part of the Calibration Pipeline.

6. COMMANDING THE ALI

The ALI has 37 basic commands. Each of these commands is uploaded to the spacecraft via the S-band transmitter to the Mongoose-V processor. The MV routes these commands to the ALICE RSN board via the 1773 fiber optic bus (see Section 2.8.5). The ASIST *I_PROCESS_STAT* window (Figure 49) displays various telemetry points that describe the status of the RSN: spacecraft time – indicating communication between the ALICE RSN and MV is operational, number of 1773 commands received since the last restart, number of 1773 retries, number of restarts since last power-up, and the functional code of the last command sent to the ALICE. Other pages of interest include the *I_STORED_CMD* and *I_CMD_LOG*.

A description of each command, its functional code, related parameters, and the actions these commands produce are listed below.

6.1 COMMANDS

6.1.1 I_NOOP

No operation is initiated.

- Function code: 00h
- Parameters: none
- Actions: none
- Error codes: none

6.1.2 /I_DIAGMODE

Sets ALICE diagnostics mode.

- Function code: 01h
- Parameters:
 - diag_mask
 - 0 = disable diagnostic packets
 - 1 = Dump Control Block
 - 2 = Dump Command Log
 - 3 = Dump Stored Command Queue
 - 4 = Dump Aperture Selector Resolver buffer (during extension)
 - 5 = Dump Aperture Selector Resolver buffer (during retraction)
- Actions:
 - Updates control block
 - cb.diag_mode
- Error codes:
 - Bad parameter -- error code = 5
 - command ignored

6.1.3 /I_RST28VTRIPS

Resets specific +28 V protection circuit.

- Function Code: 02h

- Parameters:
 - circuit
 - bit 0: HOPA trip circuit
 - bit 1: Heater Bank 1 trip circuit
 - bit 2: Heater Bank 2 trip circuit
 - bit 3: Heater Bank 3 trip circuit
 - bit 4: Heater Bank 4 trip circuit
 - bit 5: Motor Power trip circuit
 - bit 6: FPE Power trip circuit 1
 - bit 7: FPE Power trip circuit 2
- Actions:
 - Clears, then sets, specified bits in MTCE_REG_2[0:5]
 - Sets, then clears, specified bits in MTCE_REG_2[6:7]
 - Note that FPE control bits are inverted, so actions are reversed
 - Updates cb.trip_ckt_ena_status
 - Sets selected elements of cb.trip_state[:] to 0
- Error codes: none

6.1.4 /I_DSBL28VTRIPS

Disables specific +28 V protection circuits.

- Function Code: 03h
- Parameters:
 - circuit
 - bit 0: HOPA trip circuit
 - bit 1: Heater Bank 1 trip circuit
 - bit 2: Heater Bank 2 trip circuit
 - bit 3: Heater Bank 3 trip circuit
 - bit 4: Heater Bank 4 trip circuit
 - bit 5: Motor Power trip circuit
 - bit 6: FPE Power trip circuit 1
 - bit 7: FPE Power trip circuit 2
- Actions:
 - Clears specified bits in MTCE_REG_2[0:5]
 - Sets specified bits in MTCE_REG_2[6:7]
 - Updates control block
 - Note that FPE control bits are inverted, so actions are reversed
 - Updates control block
 - cb.trip_ckt_ena_status
- Error codes: none

6.1.5 /I_ENABLEPOKE

Enable memory poke.

- Function Code: 04h
- Parameters: none
- Actions:
 - Updates control block
 - cb.poke_status
- Error codes: none

6.1.6 /I_POKE

Poke specific memory address.

- Function Code: 05h
- Parameters:
 - address
 - value
- Actions:
 - Writes the “value” to “address”; if writing to EEPROM, sets and resets wait states appropriately
 - Note that EEPROM can be written to only when ALICE is connected to the GSE box. Otherwise, the EEPROM is write protected
 - Disables poke by updating control block
 - cb.poke_status
- Error codes:
 - Poke not enabled -- error code = 8
 - command ignored

6.1.7 /I_ARMHOPA

Arm specific HOPA circuit.

- Function Code: 06h
- Parameters:
 - circuit_mask
 - bit 0: HOPA circuit 1 --> CAL Launch Latch
 - bit 1: HOPA circuit 2 --> CAL Fail Safe
 - bit 2: HOPA circuit 3 --> TAC Launch Latch - A
 - bit 3: HOPA circuit 4 --> TAC Launch Latch - B
 - bit 4: HOPA circuit 5 --> TAC Fail Safe - A
 - bit 5: HOPA circuit 6 --> TAC Fail Safe -B
- Actions:
 - Updates control block
 - cb.HOPA_arm_status
 - Arms HOPA power by setting MTCE_REG_2[8]
- Error codes:
 - HOPA already armed -- error code = 9
 - command ignored
 - Bad parameter - Number of bits specified in “circuit_mask” not equal to one -- error code = 5
 - command ignored

6.1.8 /I_FIREHOPA

Fire specific HOPA circuit for specified time period.

- Function Code: 07h
- Parameters:
 - circuit_mask
 - bit 0: HOPA circuit 1 --> CAL Launch Latch
 - bit 1: HOPA circuit 2 --> CAL Fail Safe
 - bit 2: HOPA circuit 3 --> TAC Launch Latch - A

- bit 3: HOPA circuit 4 --> TAC Launch Latch - B
- bit 4: HOPA circuit 5 --> TAC Fail Safe - A
- bit 5: HOPA circuit 6 --> TAC Fail Safe -B
- DURATION
 - if = 0, energize HOPA for cb.defaults[HOPA_FIRE_DURATION_INDEX]
 - if <> 0, energize HOPA for specified number of seconds
- Actions:
 - Schedules I_RESETHOPA command
 - Energizes HOPA power by setting bit in MTCE_REG_2[9:14]
 - Updates control block
 - cb.HOPA_fire_status
 - cb.hs_status
 - clears HOPA_OVERCURRENT bit
 - clears HOPA_ON_TOO_LONG bit
 - clears cb.HOPA_on_time
- Error codes:
 - FIRE_HOPA_MASK does not match previously specified ARM_HOPA_MASK -- error code = 5
 - calls function that implements I_RESETHOPA -- rst_HOPA_ckts()
 - HOPA already being fired -- error code = 10
 - Command ignored
 - HOPA not armed -- error code = 11
 - Command ignored
 - Scheduler error, stored command queue full -- error code = 7
 - Command ignored

6.1.9 /I_RESETHOPA

Reset all HOPA circuits.

- Function Code: 08h
- Parameters: none
- Actions: -
 - Updates control block
 - clears cb.HOPA_arm_status
 - clears cb.HOPA_fire_status
 - Disarms HOPA power by clearing MTCE_REG_2[8]
 - Deenergizes HOPA power by clearing MTCE_REG_2[9:14]
- Error codes: none

6.1.10 /I_MECHPOWER

Enable mechanism power.

- Function Code: 09h
- Parameters: none
- Actions:
 - Updates control block
 - cb.mech_power
 - Enables mechanism power by setting MTCE_REG_5[0]
- Error codes: none

6.1.11 /I_MECHACTIVE

Activate specific mechanism in specific direction for specific number of steps.

- Function Code: 0Ah
- Parameters:
 - direction
 - if = 0, open TAC, extend AS, place CAL
 - else, close TAC, retract AS, stow CAL
 - mechanism
 - 0 = TAC, 1 = CAL, 2 = AS
 - num_steps
 - if = 0, number of steps specified by
cb.defaults[TAC_MOTOR_STEPS_INDEX],
cb.defaults[CAL_MOTOR_STEPS_INDEX] or
cb.defaults[AS_MOTOR_STEPS_INDEX]
 - if <> 0, step the specified number of steps
- Actions:
 - Updates control block
 - cb.motor_running
 - cb.active_motor
 - cb.motor_direction
 - cb.motor_steps
 - cb.motor_rate
 - cb.as_index
 - cb.as_counter
 - cb.motor_on_time
 - cb.hs_status
 - clears MOTOR_OVERTEMP_MASK bit
 - clears MOTOR_OVERCURRENT_MASK bit
 - clears MOTOR_ON_TOO_LONG_MASK bit
 - Programs and starts Motor Control Task Timer
- Error Codes:
 - Bad parameter, invalid mechanism ID -- error code = 5
 - command ignored
 - Mechanism power not enabled -- error code = 12
 - command ignored
 - Motor already active -- error code = 13
 - command ignored

6.1.12 /I_MECHRESET

Reset all mechanisms.

- Function Code: 0Bh
- Parameters: none
- Actions:
 - Disables Motor Control Task Timer
 - Updates control block
 - cb.motor_running
 - cb.mech_power
 - Disables motor power clearing MTCE_REG_5[0]
 - Turns off all motor phases by clearing MTCE_REG[1:4], MTCE_REG_5[5:8], MTCE_REG_5[9:12]

- Error codes: none

6.1.13 /I_LAMPENABLE

Enable internal lamp power.

- Function Code: 0Ch
- Parameters: none
- Actions:
 - Updates control block
 - cb.lamp_ena_status
 - Enables all flood lamp circuits by clearing ASCE_REG_3[0:5]
 - Note that these are active low control signals
- Error codes: none

6.1.14 /I_LAMPON

Power specific lamp for specific time period.

- Function Code: 0Dh
- Parameters:
 - lamp_mask
 - bit 0: MFPA Flood Lamp A
 - bit 1: MFPA Flood Lamp B
 - bit 2: spare
 - bit 3: MFPA Flood Lamp C
 - bit 4: spare
 - bit 5: spare
 - duration
 - if < 0: Turn on lamp indefinitely
 - if = 0: Turn on lamp for cb.defaults[LAMP_TIMER_INDEX] seconds
 - if > 0: Turn on lamp for specified number of seconds
- Actions:
 - Schedules I_LAMPRESET (if DURATION >= 0)
 - Updates control block
 - cb.lamp_ctl_status
 - if turning on lamps when all are off
 - clears LAMP_OVERCURRENT_MASK in cb.hs_status
 - clears LAMP_ON_TOO_LONG_MASK in cb.hs_status
 - initializes cb.lamp_on_time to zero
 - Turns on specified lamps by clearing bits in ASCE_REG_3[8:13]
 - Note that these are active low control signals
- Error codes:
 - Lamp power not enabled -- error code = 14
 - Command ignored
 - Bad parameter, more than three lamps specified -- error code = 5
 - Command ignored
 - Scheduler error, stored command queue full -- error code = 7
 - Command ignored

6.1.15 /I_LAMPRESET

Reset all internal lamps.

- Function Code: 0Eh
- Parameters: none
- Actions:
 - Updates control block
 - cb.lamp_ena_status
 - cb.lamp_ctl_status
 - Disables lamp power by setting ASCE_REG_3[0:5]
 - Turns off all lamps by setting ASCE_REG_3[8:13]
- Error codes: none

6.1.16 /I_RESETFPE

Reset focal plane electronics.

- Function Code: 0Fh
- Parameters: none
- Actions:
 - Updates control block
 - sets cb.fpe_s_to_p_array[0:4] to 0
 - sets cb.fpe_p_to_s_array[0:4] to 0
 - If FPE data gate is on
 - Clears FPE Data Gate by clearing ESN_PORT_A[0]
 - updates cb.fpe_data_gate
 - updates cb.time_data_gate_cleared
 - Clears FPE Reset line, ESN_PORT_A[1]
 - Note that FPE is an active low control signal
 - Waits for 1 millisecond
 - Sets FPE Reset line, ESN_PORT_A[1]
- Error codes: none

6.1.17 /I_SET_FPE_DG

Sets focal plane electronics data gate for specific time period.

- Function Code: 10h
- Parameters:
 - duration
 - if < 0: Set FPE Data Gate indefinitely
 - if = 0, Set FPE Data Gate for DEFAULT_FPE_DG_DURATION seconds
 - if > 0, Set FPE Data Gate for specified number of seconds
- Actions:
 - Schedule I_CLR_FPE_DG (if "duration" >= 0)
 - Updates control block
 - cb.time_data_gate_set
 - cb.fpe_data_gate
 - Sets FPE Data Gate, ESN_PORT_A[0]
- Error Codes:
 - FPE Data Gate already set - error code = 16
 - command ignored

- Scheduler error, too many stored commands - error code = 7
 - command ignored

6.1.18 /I_CLR_FPE_DG

Resets focal plane electronics data gate.

- Function Code: 11h
- Parameters: none
- Actions:
 - Updates control block
 - cb.time_data_gate_cleared
 - cb.fpe_data_gate
 - Clears FPE data gate , ESN_PORT_A[0]
- Error Codes: none

6.1.19 /I_CONFIGFPE

Sends focal plane electronics configuration command.

- Function Code: 12h
- Parameters:
 - config_command: Hex values as specified in FPE Interface Control Document
 - 0xxx: Null Command
 - 400x, 410x, 500x, 510x: Set PAN Integration Time
 - 420x, 430x, 520x, 530x: Set MS Integration Time
 - 6FFF, 7FFF: Enable Test Pattern
 - 6xxx, 7xxx (≠ 6FFF,7FFF): Disable Test Pattern
 - 8xxx, 9xxx: Set Line Rate
 - C100, D100: Enable MS/PAN Module
 - C101, D101: Disable MS/PAN Module
- Actions:
 - Updates control block
 - cb.fpe_p_to_s_array[], index depends on "config_command"
 - cb.fpe_s_to_p_array[], index depends on "config_command"
 - cb.last_fpe_config_cmd
 - cb.last_fpe_loopback
 - Sends "config_command" to FPE by writing to ESN Parallel-to-Serial converter hardware register
 - Reads loopback from Serial-to-Parallel converter hardware register
- Error Codes:
 - Date gate is currently set - error code = 17
 - Command Ignored
 - Undefined command - error code = 5
 - Command Ignored
 - Loopback value does not match command value - error code = 18
 - Error reported, no corrective measures taken, assume command received

6.1.20 /I_SETFPETHERM

Sets focal plane electronics thermal setpoint.

- Function Code: 13h
- Parameters:
 - setpoint_mask
 - Bit 0: MFPA side A alternate setpoint 1 (225 deg K)
 - Bit 1: MFPA side A alternate setpoint 2 (215 deg K)
 - Bit 2: MFPA side B alternate setpoint 1 (210 deg K)
 - Bit 3: MFPA side B alternate setpoint 2 (205 deg K)
- Actions:
 - Updates control block
 - cb.fpe_therm_sp
 - Sets FPE thermal setpoints by writing to ESN_PORT_B[0:3]
- Error Codes:
 - Date gate is currently set - error code = 19
 - Command Ignored
 - Illegal combination of bits in mask, (bit 0 and bit 1) or (bit 2 and bit 3)--- error code = 5
 - Command Ignored

6.1.21 /I_SETFPEPOWER

Sets-up focal plane electronics and thermal control bus power.

- Function Code: 14h
- Parameters:
 - power_mask
 - bit 0: FPE Operational Power
 - bit 1: unused
 - bit 2: FPE Thermal Control Bus A
 - bit 3: FPE Thermal Control Bus B
- Actions:
 - Updates control block
 - cb.fpe_pwr_status
 - cb.hs_status
 - Clears FPE_OVERTEMPERATURE_MASK if previously unpowered
 - Clears FPE_OVERCURRENT_MASK if previously unpowered
 - Clears FPE_ON_TOO_LONG_MASK if turning on FPE operational
 - Clears FPE_TCS_FAULT_MASK if turning on FPE Thermal Bus
 - cb.fpe_on_time -- initializes to zero if turning on operational power
 - cb.fpe_offset_mode -- sets to 1 (enables FPE housekeeping offset calculation) if turning off FPE operational, sets to 0 (disables) if turning off FPE operational
 - Schedules /I_RESETFPE for 2 seconds from the time command was executed
 - Enables/Disables FPE power as specified by writing to MTCE_REG_4[0:3]
- Error Codes:
 - Illegal combination of bits in mask (bit 2 and bit 3) -- error code = 5
 - Command Ignored
 - Stored command queue full, cannot schedule /I_RESETFPE -- error code = 7
 - Command is executed anyway, error code reported in housekeeping

6.1.22 /I_SET_TCS_MODE

Set thermal control system mode.

- Function Code: 15h

- Parameters:
 - mode
 - 0: Manual control
 - else: Automatic control
- Actions:
 - If not changing modes, no action taken
 - Turns off all heaters by clearing MTCE_REG_3[0:10]
 - Sets H12 current command to 0 by clearing MTCE_REG_0[0:11]
 - Updates control block
 - cb.heater_pwr_status
 - cb.h12_command
 - cb.therm_ctl_mode
 - If switching to automatic mode
 - cb.h1_h2_mode = cb.defaults[H1_H2_MODE_INDEX]
 - cb.h7_h11_mode = cb.defaults[H7_H11_MODE_INDEX]
 - cb.h12_mode = cb.defaults[H12_MODE_INDEX]
 - cb.h7_h11_command = 0
 - cb.last_h7_h11_cmd = 0
 - cb.last_h7_h11_error = 0
 - cb.h7_h11_error = 0
 - cb.tcs_interval_1 = 0
 - cb.h12_command = 0
 - cb.last_h12_cmd = 0
 - cb.h12_error = 0
 - cb.last_h12_error = 0
- Error Codes: none

6.1.23 /I_ENA_HTR_BANKS

Set-up thermal control system heater banks power.

- Function Code: 16h
- Parameters:
 - bank_mask
 - bit 0: Heater Bank 1 (HTR1 & HTR2)
 - bit 1: Heater Bank 2 (spare)
 - bit 2: Heater Bank 3 (HTR7-HTR11)
 - bit 3: Heater Bank 4 (HTR12)
 - Actions:
- Updates control block
 - cb.htr_bank_status
 - cb.hs_status
 - Clears HB1_OVERCURRENT_MASK if enabling Heater Bank 1
 - Clears HB2_OVERCURRENT_MASK if enabling Heater Bank 2
 - Clears HB3_OVERCURRENT_MASK if enabling Heater Bank 3
 - Clears HB4_OVERCURRENT_MASK if enabling Heater Bank 4
 - Enables / Disables heater banks as specified by writing MTCE_REG_3[11:14]
- Error Codes: none

6.1.24 /I_MAN_HTR_CTRL

Set-up specific thermal control system manual heater control parameter.

- Function Code: 17h
- Parameters:
 - htr_mask
 - bit 0:10, Heaters 1-11
 - h12_command
- Actions:
 - Updates control block
 - cb.heater_pwr_status
 - cb.h12_command
 - Turns on/off heaters by writing HTR_MASK to MTCE_REG_3[0:10]
 - Sets H12 current command by writing HTR12_CURRENT_COMMAND to MTCE_REG_0[0:11]
- Error Codes:
 - Not in manual control mode - error code = 20
 - Command ignored

6.1.25 Δ _TCS_AUTO_CTRL_MODE

Set thermal control system auto control mode.

- Function Code: 18h
- Parameters:
 - H1_H2_MODE
 - if 0: Disable HTR1 & HTR2
 - if 1: Disable HTR2, Control HTR1 as thermostat
 - if 2: Disable HTR1, Control HTR2 as thermostat
 - if 3: Control HTR1 & HTR2 as thermostats
 - if 4-7: Control truss Δ temperature
 - H7_H11_MODE
 - if 0: Disable HTR7- HTR11
 - if 1: Thermostatic Control of FPE Radiator Temperature
 - if 2: Proportional Control of FPE Radiator Temperature
 - if 3: Proportional Regulation of H12 Current
 - H12_MODE
 - if 0: Disable HTR12
 - if 1: Thermostatic Control of MFPA Conductor Bar Temperature
 - if 2: Proportional Control of MFPA Conductor Bar Temperature
 - if 3: Proportional Regulation of SBRS FPA Heater Power
 - if 4: Proportional Regulation of SBRS FPE Heater Power with hold
- Actions:
 - Updates control block
 - if changing h1_h2_mode
 - cb.h1_h2_mode
 - cb.heater_pwr_status -- turn off h1 and h2
 - if changing h7_h11_mode
 - cb.h7_h11_mode
 - cb.heater_pwr_status -- turn off h7-h11
 - cb.h7_h11_command = 0
 - cb.last_h7_h11_cmd = 0
 - cb.last_h7_h11_error = 0
 - cb.h7_h11_error = 0
 - cb.tcs_interval_1 = 0
 - if changing h12_mode
 - cb.h12_mode

- cb.h12_command = 0
 - cb.last_h12_cmd = 0
 - cb.h12_error = 0
 - cb.last_h12_error = 0
- For mode changes, associated heaters are turned off by writing to MTCE_REG_3[0:10], MTCE_REG_0[0:11]
- Error Codes:
 - Not in automatic control mode - error code = 21
 - Command ignored
 - H1_H2_MODE > 4, H7_H11_MODE > 3, H12_MODE > 4 - bad parameter -- error code = 5
 - Command ignored

6.1.26 /I_EARTH_OBS

Activate Earth observation script.

- Function Code: 19h
- Parameters: none
- Actions:
 - Calls the function that implements I_SET_FPE_DG
 - "set_fpe_data_gate(-1)" -- data gate set indefinitely
 - NOTE: commands are scheduled in reverse order, i.e. last command to be executed is scheduled first
 - Schedules I_CLR_FPE_DG
 - execution time = current time + {EO_AT_5_SECS, EO_AT_5_SUBSECS }
 - Schedules I_SET_FPE_DG
 - execution time = current time + {EO_AT_4_SECS, EO_AT_4_SUBSECS }
 - parameter 1 = -1, indefinitely
 - Schedules I_MECHACTIVE
 - execution time = current time + {EO_AT_3_SECS, EO_AT_3_SUBSECS }
 - parameter 1 = 0, open
 - parameter 2 = 0, select TAC
 - parameter 3 = 0, default number of steps
 - Schedules I_MECHPOWER
 - execution time = current time + {EO_AT_2_SECS, EO_AT_2_SUBSECS }
 - Schedules I_CLR_FPE_DG
 - execution time = current time + {EO_AT_1_SECS, EO_AT_1_SUBSECS }
- Error Codes:
 - Insufficient storage to schedule all commands - error code = 32
 - command ignored
 - Data gate already set - error code = 33
 - command ignored

6.1.27 /I_FL_CAL

Activate internal lamp script.

- Function Code: 1Ah
- Parameters: none
- Actions:
 - Calls the function that implements I_LAMPENABLE
 - "ena_lamp_pwr()"

- NOTE: commands are scheduled in reverse order, i.e. last command to be executed is scheduled first
- Schedules I_CLR_FPE_DG
 - execution time = current_time + {FLC_AT_6_SECS, FLC_AT_6_SUBSECS}
- Schedules I_LAMPRESET
 - execution time = current_time + {FLC_AT_5_SECS, FLC_AT_5_SUBSECS}
- Schedules I_LAMPON
 - execution time = current_time + {FLC_AT_4_SECS, FLC_AT_4_SUBSECS}
 - parameter 1 = FLC_MASK_3
 - parameter 2 = -1, indefinitely
- Schedules I_LAMPON
 - execution time = current_time + {FLC_AT_3_SECS, FLC_AT_3_SUBSECS}
 - parameter 1 = FLC_MASK_2
 - parameter 2 = -1, indefinitely
- Schedules I_SET_FPE_DG
 - execution time = current_time + {FLC_AT_2_SECS, FLC_AT_2_SUBSECS}
 - parameter 1 = -1, indefinitely
- Schedules I_LAMPON
 - execution time = current_time + {FLC_AT_1_SECS, FLC_AT_1_SUBSECS}
 - parameter 1 = FLC_MASK_1
 - parameter 2 = -1, indefinitely
- Error Codes:
 - Insufficient storage to schedule all commands - error code = 48
 - command ignored

6.1.28 /I_SOL_CAL

Activate solar calibration script.

- Function Code: 1Bh
- Parameters: none
- Actions:
 - Call function that implements /I_MECHPOWER
 - "ena_mech_pwr()"
 - NOTE: commands are scheduled in reverse order, i.e. last command to be executed is scheduled first
 - Schedules I_MECHACTIVE
 - execution time = current_time + {SOL_AT_9_SECS, FLC_AT_9_SUBSECS}
 - parameter 1 = 1, stow CAL plate
 - parameter 2 = 1, select CAL mechanism
 - parameter 3 = 0, default number of steps
 - Schedules I_MECHPOWER
 - execution time = current_time + {SOL_AT_8_SECS, FLC_AT_8_SUBSECS}
 - Schedules I_CLR_FPE_DG
 - execution time = current_time + {SOL_AT_7_SECS, FLC_AT_7_SUBSECS}
 - Schedules I_MECHACTIVE
 - execution time = current_time + {SOL_AT_6_SECS, FLC_AT_6_SUBSECS}
 - parameter 1 = 1, retract AS blocker
 - parameter 2 = 2, select AS mechanism
 - parameter 3 = 0, default number of steps
 - Schedules I_MECHPOWER
 - execution time = current_time + {SOL_AT_5_SECS, FLC_AT_5_SUBSECS}
 - Schedules I_MECHACTIVE
 - execution time = current_time + {SOL_AT_4_SECS, FLC_AT_4_SUBSECS}

- parameter 1 = 0, extend AS blocker
- parameter 2 = 2, select AS mechanism
- parameter 3 = 0, default number of steps
- Schedules I_MECHPOWER
 - execution time = current_time + {SOL_ΔT_3_SECS, FLC_ΔT_3_SUBSECS}
- Schedules I_SET_FPE_DG
 - execution time = current_time + {SOL_ΔT_2_SECS, FLC_ΔT_2_SUBSECS}
 - parameter 1 = -1, indefinitely
- Schedules I_MECHACTIVE
 - execution time = current_time + {SOL_ΔT_1_SECS, FLC_ΔT_1_SUBSECS}
 - parameter 1 = 0, place CAL plate
 - parameter 2 = 1, CAL selected
 - parameter 3 = 0, default number of steps
- Error Codes:
 - Insufficient storage to schedule all commands - error code = 64
 - command ignored

6.1.29 /I_SET_DEFAULT

Set specific parameter default value.

- Function Code: 1Ch
- Parameters:
 - param_index
 - See “Alice Parameter Descriptions” for details
 - value
 - See “Alice Parameter Descriptions” for details
- Actions:
 - Sets parameter to specified value
 - cb.defaults[“param_index”] = “value”
- Error Codes:
 - “param_index” out of range, error code = 5 (greater than or equal to 120 and less than 0)
 - command ignored
 - “value” out of range, error code = 5 (only for selected parameters, see “Alice Parameter Descriptions” for details)
 - command ignored

6.1.30 /I_FPE_OFFSET_MODE

Enable focal plane electronics housekeeping offset calculation.

- Function Code: 1Dh
- Parameters:
 - ENABLE
 - 0: Disable calculation of FPE Housekeeping offset
 - else: Enable calculation of FPE Housekeeping offset
- Actions:
 - Updates Control Block
 - cb.fpe_offset_mode
- Error Codes:
 - None

6.1.31 /I_SET_FPE_ENA_MSPAN

Enable MSPAN module.

- Function Code: 1Eh
- Parameters:
 - ENABLE
 - 0: Disable MS/PAN
 - else: Enable MS/PAN
- Actions:
 - Issues I_CONFIGFPE command
 - /I_CONFIGFPE 0xC100 to enable
 - /I_CONFIGFPE 0xC101 to disable
- Error Codes:
 - none, although errors may be generated by subsequent execution of I_CONFIGFPE

6.1.32 /I_SET_FPE_TEST_PATTERN

Enable test pattern mode.

- Function Code: 1Fh
- Parameters:
 - ENABLE
 - 0: Disable Test Pattern
 - else: Enable Test Pattern
- Actions:
 - Issues I_CONFIGFPE command
 - /I_CONFIGFPE 0x6FFF to enable
 - /I_CONFIGFPE 0x6000 to disable
- Error Codes:
 - none, although errors may be generated by subsequent execution of I_CONFIGFPE

6.1.33 /I_SAFE_MODE

Activate safe mode script.

- Function Code: 21h
- Parameters:
 - override
 - 0: Mechanism command scheduling is based on LED status
 - LED1 == 1 or LED2 == 1 schedules CAL commands
 - LED12 == 0 schedules AS commands
 - LED7 == 1 schedules TAC commands
 - else: Commands are unconditionally scheduled
- Actions:
 - Clears cb.stored_cmd_count before scheduling mechanism commands
 - Calls the function that implements /I_LAMPRESET -- "rst_lamps()"
 - NOTE: commands are scheduled in reverse order, i.e. last command to be executed is scheduled first
 - Schedules I_MECHACTIVE
 - execution time = current_time + {SAF_ΔT_6_SECS, SAF_ΔT_6_SUBSECS}
 - parameter 1 = 1: Stow CAL mechanism
 - parameter 2 = 1: Select CAL mechanism

- parameter 3 = 0: Step default number of steps
- Schedules I_MECHPOWER
 - execution time = current_time + {SAF_ΔT_5_SECS, SAF_ΔT_5_SUBSECS}
- Schedules I_MECHACTIVE
 - execution time = current_time + {SAF_ΔT_4_SECS, SAF_ΔT_4_SUBSECS}
 - parameter 1 = 1: Stow AS mechanism
 - parameter 2 = 2: Select AS mechanism
 - parameter 3 = 0: Step default number of steps
- Schedules I_MECHPOWER
 - execution time = current_time + {SAF_ΔT_3_SECS, SAF_ΔT_3_SUBSECS}
- Schedules I_MECHACTIVE
 - execution time = current_time + {SAF_ΔT_2_SECS, SAF_ΔT_2_SUBSECS}
 - parameter 1 = 1: Close TAC
 - parameter 2 = 0: Select TAC mechanism
 - parameter 3 = 0: Step default number of steps
- Schedules I_MECHPOWER
 - execution time = current_time + {SAF_ΔT_1_SECS, SAF_ΔT_1_SUBSECS}
- Error Codes:
 - None

6.1.34 /I_SCHED_CMD

Schedule a specific command to occur at a specific time.

- Function Code: 30h
- Parameters:
 - cmd_id: any command that has been defined (except I_SCHED_CMD)
 - param1: must be included
 - param2: must be included
 - param3: must be included
 - {secs_msw, secs_lsw, subsecs_msw, subsecs_lsw}: 4 word time record containing execution time
- Actions:
 - Inserts entry in stored command queue
 - Updates control block
 - cb.stored_cmd_cnt
- Error Codes:
 - Execution time less than current time, error code = 6
 - Command ignored
 - Stored command queue full, error code = 7
 - Command ignored
 - Attempt was made to schedule I_SCHED_CMD, error code = 5
 - Command ignored

6.1.35 /I_DEL_STORED_CMD

Delete a specific stored command.

- Function Code: 31h
- Parameters:
 - STORED_CMD_ID
- Actions:
 - Removes the specified command from the stored command queue

- Note that while queue is being manipulated, access by the stored command processor task is blocked (cb.stored_cmd_busy)
- Note that STORED_CMD_ID must match the ID that is reported when the stored command queue is dumped as a diagnostic packet
- Updates control block
 - cb.stored_cmd_cnt
- Error Codes:
 - Bad parameter, non-existent command identifier -- error code = 5
 - command ignored

6.1.36 /I_FLUSH_STORED_CMDS

Delete all stored commands.

- Function Code: 32h
- Parameters: none
- Actions:
 - Removes all commands from the stored command queue
 - Updates control block
 - cb.stored_cmd_cnt
- Error Codes: none

6.1.37 /I_RST_CMD_CNTRS

Reset ALICE stored command counters.

- Function Code: 33h
- Parameters: none
- Actions:
 - Clears the ALICE command counter and the ALICE command error counter
 - Updates control block
 - cb.cmd_count

cb.command_errors

- Error Codes: none

6.2 ALI PARAMETER START-UP VALUES

Default start-up values for ALI parameters are provided in Table 5. These values are used in conjunction with the /I_SET_DEFAULT command. **However, it is strongly urged that these default values not be changed during normal ALI operations.**

TABLE 5
Default ALI Start-up Parameters

| Name | Parameter Index | Startup Value | Description |
|---------------------|-----------------|---------------|---|
| HOPA_FIRE_DURATION | 0 | 150 | Duration (in seconds) of HOPA firing must be > 0 |
| TAC_MOTOR_STEPS | 1 | 350 | Number of steps taken when TAC is activated - > 105 degrees |
| CAL_MOTOR_STEPS | 2 | 541 | Number of steps taken when CAL is activated - > 145 degrees |
| AS_MOTOR_STEPS | 3 | 3000 | Number of steps taken when AS is activated - > 3 inches |
| TAC_MOTOR_RATE | 4 | 2185 | Time period between TAC steps (divide by 65536) -> 30 Hz |
| CAL_MOTOR_RATE | 5 | 655 | Time period between CAL steps (divide by 65536) -> 110 Hz |
| AS_MOTOR_RATE | 6 | 341 | Time period between AS steps (divide by 65536) -> 192 Hz |
| LAMP_TIMER_DURATION | 7 | 2 | Duration (in seconds) lamps are turned on must be > 0 |
| FPE_DG_DURATION | 8 | 25 | Duration (in seconds) data gate is set must be > 0 |
| H1_H2_MODE | 9 | 4 | H1-H2 Mode -> Control Truss Delta-T must be >=0 and <=4 |
| H7_H11_MODE | 10 | 3 | H7-H11 Mode -> Regulate H12 Power must be >= 0 and <= 3 |
| H12_MODE | 11 | 4 | H12 Mode -> Regulate FPA Rail Heater Power must be >= 0 and <=4 |
| H1_TSTAT_HI | 12 | 185 | Truss top plate turn-off threshold -> +30.2 deg C (H1-H2 mode 1,3) |
| H1_TSTAT_LO | 13 | 162 | Truss top plate turn-on threshold -> +20.1 deg C (H1-H2 mode 1,3) |
| H2_TSTAT_HI | 14 | 185 | Truss bottom plate turn-off threshold -> +30.2 deg C (H1-H2 mode 2,3) |
| H2_TSTAT_LO | 15 | 162 | Truss bottom plate turn-on threshold -> +20.1 deg C (H1-H2 mode 2,3) |
| H1_H2_DELTA_T_HI | 16 | 18 | Delta-T Turn-on threshold -> 7.88 deg C (H1-H2 mode 4) |
| H1_H2_DELTA_T_LO | 17 | 9 | Delta-T Turn-off threshold -> 3.94 deg C (H1-H2 mode 4) |
| H7_H11_TSTAT_HI | 18 | 140 | FPA Radiator Turn-off threshold -> -73.0 deg C (H7-H11 mode 1) |
| H7_H11_TSTAT_LO | 19 | 145 | FPA Radiator Turn-on threshold -> -74.2 deg C (H7-H11 mode 1) |
| H7_H11_T_SETPT | 20 | 90 | FPA Radiator Temperature Setpoint -> -60.1 deg C (H7-H11 mode 2) |
| H7_H11_PROP_KP | 21 | 10 | FPA Radiator Temperature Loop Proportional Gain (H7-H11 mode 2) |
| H7_H11_PROP_KI | 22 | 0 | FPA Radiator Temperature Loop Integral Gain (H7-H11 mode 2) |
| H12_TSTAT_HI | 23 | 52 | MFPA Conductor Bar Turn-off threshold - > -52.0 deg C (H12 mode 1) |
| H12_TSTAT_LO | 24 | 60 | MFPA Conductor Bar Turn-on threshold - > -53.9 deg C (H12 mode 1) |
| H12_T_SETPT | 25 | 56 | MFPA Conductor Bar Temperature Setpoint - > -52.9 deg C (H12 mode 2) |

TABLE 5 (Continued)
Default ALI Start-up Parameters

| Name | Parameter Index | Startup Value | Description |
|----------------------|-----------------|---------------|---|
| H12_T_PROP_KP | 26 | 100 | MFPA Conductor Bar Temperature Loop Proportional Gain (H12 mode 2) |
| H12_T_PROP_KI | 27 | 10 | MFPA Conductor Bar Temperature Loop Integral Gain (H12 mode 2) |
| H12_Q_SETPT | 28 | 78 | FPA Rail Heater Power Setpoint -> -HTRAM (HTRBM) = 9.09 (H12 mode 3,4) |
| H12_Q_PROP_KP | 29 | 100 | FPA Rail Heater Power Loop Proportional Gain (H12 mode 3, 4) |
| H12_Q_PROP_KI | 30 | 10 | FPA Rail Heater Power Loop Integral Gain (H12 mode 3,4) |
| EO_DELTA_T_1_SECS | 31 | 25 | Delta seconds "/I_CLR_FPE_DG" is scheduled after I_EARTH_OBS is executed --> FPE Data Gate is turned off, must be > 0 and < EO_DELTA_T_2_SECS |
| EO_DELTA_T_2_SECS | 32 | 26 | Delta seconds "/I_MECHPOWER" is scheduled after I_EARTH_OBS is executed --> Mechanism power is enabled, must be > EO_DELTA_T_1_SECS and < EO_DELTA_T_3_SECS |
| EO_DELTA_T_3_SECS | 33 | 27 | Delta seconds "/I_MECHACTIVE 1 0 0" is scheduled after I_EARTH_OBS is executed --> TAC closure is initiated, must be > EO_DELTA_T_2_SECS and < EO_DELTA_T_4_SECS |
| EO_DELTA_T_4_SECS | 34 | 41 | Delta seconds "/I_SET_FPE_DG -1" is scheduled after I_EARTH_OBS is executed --> FPE Data Gate is turned on for dark reference data, must be > EO_DELTA_T_3_SECS and < EO_DELTA_T_5_SECS |
| EO_DELTA_T_5_SECS | 35 | 42 | Delta seconds "/I_CLR_FPE_DG" is scheduled after I_EARTH_OBS is executed --> FPE Data Gate is turned off must be > EO_DELTA_T_4_SECS |
| EO_DELTA_T_1_SUBSECS | 36 | 0 | Delta subseconds (divide by 65535) added to EO_DELTA_T_1_SECS |
| EO_DELTA_T_2_SUBSECS | 37 | 0 | Delta subseconds (divide by 65535) added to EO_DELTA_T_2_SECS |
| EO_DELTA_T_3_SUBSECS | 38 | 0 | Delta subseconds (divide by 65535) added to EO_DELTA_T_3_SECS |
| EO_DELTA_T_4_SUBSECS | 39 | 0 | Delta subseconds (divide by 65535) added to EO_DELTA_T_4_SECS |
| EO_DELTA_T_5_SUBSECS | 40 | 0 | Delta subseconds (divide by 65535) added to EO_DELTA_T_5_SECS |
| FLC_DELTA_T_1_SECS | 41 | 1 | Delta seconds "/I_LAMPON cb.defaults[FLC_MASK_1] -1" is scheduled after I_FL_CAL is executed --> Flood Lamps specified in FLC_MASK_1 are turned on must be > 0 and < FLC_DELTA_T_2_SECS |

TABLE 5 (Continued)
Default ALI Start-up Parameters

| Name | Parameter Index | Startup Value | Description |
|-----------------------|-----------------|---------------|--|
| FLC_DELTA_T_2_SECS | 42 | 11 | Delta seconds " /I_SET_FPE_DG -1" is scheduled after I_FL_CAL is executed --> FPE Data Gate is turned on must be > FLC_DELTA_T_1_SECS and < FLC_DELTA_T_3_SECS |
| FLC_DELTA_T_3_SECS | 43 | 13 | Delta seconds " /I_LAMPON cb.defaults[FLC_MASK_2] -1" is scheduled after I_FL_CAL is executed --> Flood Lamps specified in FLC_MASK_2 are turned on must be > FLC_DELTA_T_2_SECS and < FLC_DELTA_T_4_SECS |
| FLC_DELTA_T_4_SECS | 44 | 15 | Delta seconds " /I_LAMPON cb.defaults[FLC_MASK_3] -1" is scheduled after I_FL_CAL is executed --> Flood Lamps specified in FLC_MASK_3 are turned on must be > FLC_DELTA_T_3_SECS and < FLC_DELTA_T_5_SECS |
| FLC_DELTA_T_5_SECS | 45 | 17 | Delta seconds " /I_LAMPRESET" is scheduled after I_FL_CAL is executed --> Flood Lamps are turned off must be > FLC_DELTA_T_4_SECS and < FLC_DELTA_T_6_SECS |
| FLC_DELTA_T_6_SECS | 46 | 19 | Delta seconds " /I_CLR_FPE_DG" is scheduled after I_FL_CAL is executed --> FPE Data Gate is turned off must be > FLC_DELTA_T_5_SECS |
| FLC_DELTA_T_7_SECS | 47 | 0 | unused |
| FLC_DELTA_T_8_SECS | 48 | 0 | unused |
| FLC_DELTA_T_9_SECS | 49 | 0 | unused |
| FLC_DELTA_T_1_SUBSECS | 50 | 0 | Delta subseconds (divide by 65535) added to FLC_DELTA_T_1_SECS |
| FLC_DELTA_T_2_SUBSECS | 51 | 0 | Delta subseconds (divide by 65535) added to FLC_DELTA_T_2_SECS |
| FLC_DELTA_T_3_SUBSECS | 52 | 0 | Delta subseconds (divide by 65535) added to FLC_DELTA_T_3_SECS |
| FLC_DELTA_T_4_SUBSECS | 53 | 0 | Delta subseconds (divide by 65535) added to FLC_DELTA_T_4_SECS |
| FLC_DELTA_T_5_SUBSECS | 54 | 0 | Delta subseconds (divide by 65535) added to FLC_DELTA_T_5_SECS |
| FLC_DELTA_T_6_SUBSECS | 55 | 0 | Delta subseconds (divide by 65535) added to FLC_DELTA_T_6_SECS |
| FLC_DELTA_T_7_SUBSECS | 56 | 0 | unused |
| FLC_DELTA_T_8_SUBSECS | 57 | 0 | unused |
| FLC_DELTA_T_9_SUBSECS | 58 | 0 | unused |
| FLC_MASK_1 | 59 | 0x06 | Flood lamps that are turned on at FLC_DELTA_T_1_SECS (lamps 1, 2 and 3) |
| FLC_MASK_2 | 60 | 0x03 | Flood lamps that are turned on at FLC_DELTA_T_3_SECS (lamps 1 and 2) |

TABLE 5 (Continued)
Default ALI Start-up Parameters

| Name | Parameter Index | Startup Value | Description |
|-----------------------|-----------------|---------------|---|
| FLC_MASK_3 | 61 | 0x01 | Flood lamps that are turned on at FLC_DELTA_T_4_SECS (lamp 1) |
| FLC_MASK_4 | 62 | 0 | unused |
| FLC_MASK_5 | 63 | 0 | unused |
| FLC_MASK_6 | 64 | 0 | unused |
| SOL_DELTA_T_1_SECS | 65 | 1 | Delta seconds "/I_MECHACTIVE 0 1 0" is scheduled after I_SOL_CAL is executed --> CAL deployment is initiated must be > 0 and < SOL_DELTA_T_2_SECS |
| SOL_DELTA_T_2_SECS | 66 | 7 | Delta seconds "/I_SET_FPE_DG -1" is scheduled after I_SOL_CAL is executed --> FPE Data Gate is turned on must be > SOL_DELTA_T_1_SECS and < SOL_DELTA_T_3_SECS |
| SOL_DELTA_T_3_SECS | 67 | 8 | Delta seconds "/I_MECHPOWER" is scheduled after I_SOL_CAL is executed --> Mechanism power is enabled must be > SOL_DELTA_T_2_SECS and < SOL_DELTA_T_4_SECS |
| SOL_DELTA_T_4_SECS | 68 | 9 | Delta seconds "/I_MECHACTIVE 0 2 0" is scheduled after I_SOL_CAL is executed --> AS Deployment is initiated must be > SOL_DELTA_T_3_SECS and < SOL_DELTA_T_5_SECS |
| SOL_DELTA_T_5_SECS | 69 | 26 | Delta seconds "/I_MECHPOWER" is scheduled after I_SOL_CAL is executed --> Mechanism power is enabled must be > SOL_DELTA_T_4_SECS and < SOL_DELTA_T_6_SECS |
| SOL_DELTA_T_6_SECS | 70 | 27 | Delta seconds "/I_MECHACTIVE 1 2 0" is scheduled after I_SOL_CAL is executed --> AS Stowage is initiated must be > SOL_DELTA_T_5_SECS and < SOL_DELTA_T_7_SECS |
| SOL_DELTA_T_7_SECS | 71 | 44 | Delta seconds "/I_CLR_FPE_DG" is scheduled after I_SOL_CAL is executed --> FPE Data Gate is turned off must be > SOL_DELTA_T_6_SECS and < SOL_DELTA_T_8_SECS |
| SOL_DELTA_T_8_SECS | 72 | 45 | Delta seconds "/I_MECHPOWER" is scheduled after I_SOL_CAL is executed --> Mechanism power is enabled must be > SOL_DELTA_T_7_SECS and < SOL_DELTA_T_9_SECS |
| SOL_DELTA_T_9_SECS | 73 | 46 | Delta seconds "/I_MECHACTIVE 1 1 0" is scheduled after I_SOL_CAL is executed --> CAL stowage is initiated must be > SOL_DELTA_T_8_SECS |
| SOL_DELTA_T_1_SUBSECS | 74 | 0 | Delta subseconds (divide by 65535) added to SOL_DELTA_T_1_SECS |
| SOL_DELTA_T_2_SUBSECS | 75 | 0 | Delta subseconds (divide by 65535) added to SOL_DELTA_T_2_SECS |

TABLE 5 (Continued)
Default ALI Start-up Parameters

| Name | Parameter Index | Startup Value | Description |
|-------------------------|-----------------|---------------|---|
| SOL_DELTA_T_3_SUBSECS | 76 | 0 | Delta subseconds (divide by 65535) added to SOL_DELTA_T_3_SECS |
| SOL_DELTA_T_4_SUBSECS | 77 | 0 | Delta subseconds (divide by 65535) added to SOL_DELTA_T_4_SECS |
| SOL_DELTA_T_5_SUBSECS | 78 | 0 | Delta subseconds (divide by 65535) added to SOL_DELTA_T_5_SECS |
| SOL_DELTA_T_6_SUBSECS | 79 | 0 | Delta subseconds (divide by 65535) added to SOL_DELTA_T_6_SECS |
| SOL_DELTA_T_7_SUBSECS | 80 | 0 | Delta subseconds (divide by 65535) added to SOL_DELTA_T_7_SECS |
| SOL_DELTA_T_8_SUBSECS | 81 | 0 | Delta subseconds (divide by 65535) added to SOL_DELTA_T_8_SECS |
| SOL_DELTA_T_9_SUBSECS | 82 | 0 | Delta subseconds (divide by 65535) added to SOL_DELTA_T_9_SECS |
| AS_POS_RESOLUTION | 83 | 12 | Interval (multiplied by 0.0052 seconds) at which AS resolver position is sampled during I_SOL_CAL |
| DIAG_INTERVAL | 84 | 16 | Interval in seconds diagnostic packets are queued to the OS for downlink |
| FPE_OVERTEMP_LIMIT | 85 | 250 | FPE temperature which triggers shutdown of FPE by Health & Safety task -> +58.6 deg C |
| FPE_OVERCURRENT_LIMIT | 86 | 165 | FPE current which triggers shutdown of FPE by Health & Safety task -> 1.5 Amps |
| FPE_MAX_ON_TIME | 87 | 30000 | Time (in seconds) FPE Operational Power can be on before Health & Safety Task shuts it off |
| HOPA_OVERCURRENT_LIMIT | 88 | 196 | HOPA current which triggers HOPA reset by Health & Safety task -> 1.1 Amps |
| HOPA_MAX_ON_TIME | 89 | 180 | Time (in seconds) HOPA can be on before Health & Safety Task does a HOPA reset |
| MOTOR_OVERTEMP_LIMIT | 90 | 250 | Motor temperature which triggers a mechanism reset by Health & Safety task -> +58.6 deg C |
| MOTOR_OVERCURRENT_LIMIT | 91 | 193 | Motor current which triggers a mechanism reset by Health & Safety task -> 2.1 Amps |
| MOTOR_MAX_ON_TIME | 92 | 60 | Time (in seconds) motor can be active before Health & Safety Task does a mechanism reset |
| LAMP_OVERCURRENT_LIMIT | 93 | 250 | Lamp current which triggers a lamp reset by Health & Safety task -> 0.98 Amps |
| LAMP_MAX_ON_TIME | 94 | 60 | Time (in seconds) lamps can be on before Health & Safety Task does a lamp reset |
| HB1_OVERCURRENT_LIMIT | 95 | 196 | Heater Bank 1 current which triggers the Health & Safety task to disable it -> 1.1 Amps |
| HB2_OVERCURRENT_LIMIT | 96 | 196 | Heater Bank 2 current which triggers the Health & Safety task to disable it -> 1.1 Amps |
| HB3_OVERCURRENT_LIMIT | 97 | 196 | Heater Bank 3 current which triggers the Health & Safety task to disable it -> 1.1 Amps |
| HB4_OVERCURRENT_LIMIT | 98 | 196 | Heater Bank 4 current which triggers the Health & Safety task to disable it -> 1.1 Amps |
| TCS_INTERVAL_1 | 99 | 60 | Interval (in seconds) control is updated in H7-H11 mode 2 |
| TCS_INTERVAL_2 | 100 | 5 | Interval (in seconds) control is updated in H12 mode 2, 3 and 4 |

TABLE 5 (Continued)
Default ALI Start-up Parameters

| Name | Parameter Index | Startup Value | Description |
|-----------------------|-----------------|---------------|---|
| TCS_INTERVAL_3 | 101 | 1200 | Interval (in seconds) control is updated in H7-H11 mode 3 |
| H7_H11_Q_SETPT | 102 | 139 | MFPA Conductor Bar Heater Power Setpoint - > 0.18 Amps (1.7 Watts) (H7-H11mode 3) |
| H7_H11_Q_PROP_KP | 103 | 10 | MFPA Conductor Bar Heater Power Loop Proportional Gain (H7-H11mode 3) |
| H7_H11_Q_PROP_KI | 104 | 10 | MFPA Conductor Bar Heater Power Loop Integral Gain (H7-H11mode 3) |
| UNUSED | 105 | 0 | unused |
| H12_CUR_AVERAGE | 106 | 10 | Number of previous values of H12_CUR to be averaged in calculating the control in H7-H11 mode 3, must be > 0 and < 20 |
| SAFE_DELTA_T_1_SECS | 107 | 1 | Delta seconds "/I_MECHPOWER" is scheduled after I_SAFE_MODE is executed --> Mechanism power is enabled must be > 0 and < SAFE_DELTA_T_2_SECS |
| SAFE_DELTA_T_2_SECS | 108 | 2 | Delta seconds "/I_MECHACTIVE 1 0 0" is scheduled after I_SAFE_MODE is executed --> TAC closure is initiated must be > SAFE_DELTA_T_1_SECS and < SAFE_DELTA_T_3_SECS |
| SAFE_DELTA_T_3_SECS | 109 | 17 | Delta seconds "/I_MECHPOWER" is scheduled after I_SAFE_MODE is executed --> Mechanism power is enabled must be > SAFE_DELTA_T_2_SECS and < SAFE_DELTA_T_4_SECS |
| SAFE_DELTA_T_4_SECS | 110 | 18 | Delta seconds "/I_MECHACTIVE 1 2 0" is scheduled after I_SAFE_MODE is executed --> AS Stowage is initiated must be > SAFE_DELTA_T_3_SECS and < SAFE_DELTA_T_5_SECS |
| SAFE_DELTA_T_5_SECS | 111 | 34 | Delta seconds "/I_MECHPOWER" is scheduled after I_SAFE_MODE is executed --> Mechanism power is enabled must be > SAFE_DELTA_T_4_SECS and < SAFE_DELTA_T_6_SECS |
| SAFE_DELTA_T_6_SECS | 112 | 35 | Delta seconds "/I_MECHACTIVE 1 1 0" is scheduled after I_SAFE_MODE is executed --> CAL stowage is initiated must be > SAFE_DELTA_T_5_SECS |
| MAX_H7_H11_CMD_INC | 113 | 8 | Maximum increase in H7-H11 command (bits) allowed during H7-H11 mode 3 control-> 6.4 Watts, must be > 0 |
| MAX_H7_H11_CMD_DEC | 114 | 8 | Maximum decrease in H7-H11 command (bits) allowed during H7-H11 mode 3 control -> 6.4 Watts, must be > 0 |
| HTRAM_HTRBM_OFF_LIMIT | 115 | 10 | FPA Rail Heater Power threshold which triggers the Health & Safety Task to turn off the FPE thermal control bus when FPE operational power is on --> HTRAM (HTRBM) = 1.2 V (0.01 W) |
| TRIP_SAFE_TIME | 116 | 10 | Interval in seconds trip state is reset to zero |

6.3 HAZARDOUS COMMANDS

Of the 37 ALI commands, 17 have been labeled 'hazardous'. A hazardous command is one that may cause harm to the instrument if not implemented properly or executed at the wrong time. For example, arming and firing the ALI HOPAs are hazardous commands because if fired at the wrong time, may result in the releasing of launch latch or fail-safe latches prematurely.

A list of ALI hazardous commands are provided in the Table 6. Prior to the execution of these commands, approval by cognizant MIT/Lincoln Laboratory personnel must be provided.

TABLE 6
ALI Hazardous Commands

| Command | Function Code | Function |
|-----------------------|---------------|---------------------------------|
| // DSBL28VTRIPS | 03h | Disable 28V Protection Circuits |
| // ENABLEPOKE | 04h | Enable Memory Poke |
| // POKE | 05h | Poke Memory |
| // ARMHOPA | 06h | Arm HOPA Circuit |
| // FIREHOPA | 07h | Fire HOPA Circuit |
| // MECHPOWER | 09h | Enable Mechanism Power |
| // MECHACTIVE | 0Ah | Activate Mechanism |
| // LAMPENABLE | 0Ch | Enable Lamp Power |
| // LAMPON | 0Dh | Turn On Lamps |
| // SET TCS MODE | 15h | Set Thermal Control Mode |
| // ENA HTR BANKS | 16h | Setup ALI Heater Banks |
| // MAN HTR CTRL | 17h | ALI Manual Heater Control |
| // TCS AUTO CTRL MODE | 18h | Set TS Auto Control Modes |
| // EARTH OBS | 19h | Do Earth Observation |
| I SOL CAL | 1Bh | Do Solar Calibration |
| // SET DEFAULT | 1Ch | Set Parameter Default Value |
| // SAFE MODE | 21h | Activate Safe Mode Sequence |

7. TELEMETRY

The ALI telemetry is composed of one housekeeping and four diagnostics packets. The housekeeping packet (Application ID 080h) consists of 59 words and is provided in Table 7. Words 0-32 provide Analog Housekeeping Telemetry. The Health and Safety Register is listed in Word 33. Words 34-41 compose the Analog Board Status Register, Words 42-46 the RSN Processor Status, and Words 47-59 the Motor and FPE Status Register.

The four diagnostics packets (APIDs 81-84h) also available may be queued to the operating system every 16 seconds using the /I_DIAGMODE command. The Control Block diagnostic packet (081h) includes information on the processor status, default parameter values, and other flags and counters. The Command Log packet (082h) contains a list of the 27 most recently processed commands. This information includes the command number, time the command was processed, return status, and command parameters. The Stored Command buffer diagnostic packet (083h) lists up to 40 commands which have been scheduled for later execution. Information in this packet includes the command number, time to be processed, and command parameters. Finally, the Aperture Selector Position Buffer packet (084h) consists of time and position data collected during the most recent deployment or retraction of the aperture selector.

During flight operations, all ALI telemetry may be accessed from either the GSFC Mission Operations Center (MOC) or MIT/LL ASIST workstations. The ASIST or Advanced Spacecraft Integration and Systems Test workstation is an IBM PC running off a UNIX platform developed at GSFC. This computer houses each subsystem's telemetry databases and is capable of reading and displaying all or a subset of spacecraft telemetry, based on which application ids the user selects. Seven ASIST windows are referred to for general status of the Advanced Land Imager. Examples of these windows are provided in Figures 46-52.

TABLE 7
ALI Telemetry Points

| WORD | BITS | DESCRIPTION | NOTES |
|------|-------|--|---------------------------------------|
| | | CCSDS PRIMARY HEADER | |
| PH1 | 13:15 | version number | = 0 |
| | 12 | type | telemetry packet: =0 |
| | 11 | secondary header flag | secondary header is present: =1 |
| | 0:10 | application ID | = 080h |
| PH2 | 14:15 | segment flags | unsegmented packet: = 3h |
| | 0:13 | source sequence count | packet counter |
| PH3 | 0:15 | packet length | message length - 7 (in bytes) = 79h |
| | | CCSDS SECONDARY HEADER | |
| SH1 | 0:15 | time in seconds, most significant word | |
| SH2 | 0:15 | time in seconds, least significant word | |
| SH3 | 0:15 | time in subseconds, most significant word | |
| SH4 | 0:15 | time in subseconds, least significant word | |
| | | ANALOG HOUSEKEEPING | |
| 0 | 0:07 | T1, Metering Truss Top Plate +Y | 00h = -50.83°C, FFh = +60.83°C |
| | 8:15 | T28, Aperture Selector Motor | 00h = -50.83°C, FFh = +60.83°C |

TABLE 7 (Continued)

ALI Telemetry Points

| WORD | BITS | DESCRIPTION | NOTES |
|------|------|--|-----------------------------------|
| 1 | 0:07 | T18, Telescope Surround +Y | 00h = -50.83°C, FFh = +60.83°C |
| | 8:15 | T36, ALICE Radiator | 00h = -50.83°C, FFh = +60.83°C |
| 2 | 0:07 | T26, Aperture Cover Launch Latch | 00h = -50.83°C, FFh = +60.83°C |
| | 8:15 | T38, FPE Board 1 | 00h = -50.83°C, FFh = +60.83°C |
| 3 | 0:07 | T9, Pallet +X Side | 00h = -50.83°C, FFh = +60.83°C |
| | 8:15 | T2, Metering Truss Top Plate -Y | 00h = -50.83°C, FFh = +60.83°C |
| 4 | 0:07 | T20, MFPA Conductor Bar | 00h = -50.83°C, FFh = +60.83°C |
| | 8:15 | T6, Baseplate at +X Flexure | 00h = -50.83°C, FFh = +60.83°C |
| 5 | 0:07 | T37, Radiator Support Frame | 00h = -50.83°C, FFh = +60.83°C |
| | 8:15 | T39, FPE Board 2 | 00h = -50.83°C, FFh = +60.83°C |
| 6 | 0:07 | T16, Calibration Plate Drive Motor | 00h = -50.83°C, FFh = +60.83°C |
| | 8:15 | T10, Pallet -X Side | 00h = -50.83°C, FFh = +60.83°C |
| 7 | 0:07 | T3, Metering Truss Shell | 00h = -50.83°C, FFh = +60.83°C |
| | 8:15 | T32, FPA Radiator | 00h = -50.83°C, FFh = +60.83°C |
| 8 | 0:07 | T24, Aperture Cover Drive Motor Structure | 00h = -50.83°C, FFh = +60.83°C |
| | 8:15 | T7, Baseplate at +X, +Y Flexure | 00h = -50.83°C, FFh = +60.83°C |
| 9 | 0:07 | H12 Current Command | 00h = -2.03 Amps, FFh = 2.03 Amps |
| | 8:15 | T27, Aperture Cover | 00h = -50.83°C, FFh = +60.83°C |
| 10 | 0:07 | T17, Telescope Surround -Y | 00h = -50.83°C, FFh = +60.83°C |
| | 8:15 | T4, MFPA Frame at +Y Rail Mount | 00h = -50.83°C, FFh = +60.83°C |
| 11 | 0:07 | T35, FPE Radiator | 00h = -50.83°C, FFh = +60.83°C |
| | 8:15 | T25, Aperture Cover Drive Motor | 00h = -50.83°C, FFh = +60.83°C |
| 12 | 0:07 | T15, Calibration Plate Assembly | 00h = -50.83°C, FFh = +60.83°C |
| | 8:15 | T8, Baseplate at -X, -Y Flexure | 00h = -50.83°C, FFh = +60.83°C |
| 13 | 0:07 | T19, MFPA Conductor Bar, internal rail interface | 00h = -39.55°C, FFh = -100.45°C |
| | 8:15 | T29, MFPA Conductor Bar, external flex link | 00h = -39.55°C, FFh = -100.45°C |
| 14 | 0:07 | T21, MFPA Conductor Bar, internal flex link | 00h = -39.55°C, FFh = -100.45°C |
| | 8:15 | T34, FPA Radiator, bottom | 00h = -39.55°C, FFh = -100.45°C |
| 15 | 0:07 | T33, FPA Radiator, top | 00h = -39.55°C, FFh = -100.45°C |
| | 8:15 | HTRAM, MFPA heater voltage, side A | 00h = -0.225V, FFh = 30.225V |
| 16 | 0:07 | HTPPOSB, Heater power +15V, side B | 00h = -30.45V, FFh = +30.45V |
| | 8:15 | HTPNEGB, Heater power -15V, side B | 00h = -30.45V, FFh = +30.45V |
| 17 | 0:07 | REFATM, MFPA Thermal Ctrl Volt Ref, side A | 00h = -10.15V, FFh = +10.15V |
| | 8:15 | REFBTM, MFPA Thermal Ctrl Volt Ref, side A | 00h = -10.15V, FFh = +10.15V |
| 18 | 0:07 | HTPPOSA, Heater power +15V, side A | 00h = -30.45V, FFh = +30.45V |
| | 8:15 | HTPNEGA, Heater power -15V, side A | 00h = -30.45V, FFh = +30.45V |
| 19 | 0:07 | HTRBM, MFPA heater voltage, side B | 00h = -0.225V, FFh = 30.225V |
| | 8:15 | FPPP15, Focal Plane Power +15V | 00h = -30.45V, FFh = +30.45V |
| 20 | 0:07 | FPPN15, Focal Plane Power -15V | 00h = -30.45V, FFh = +30.45V |
| | 8:15 | FPP5A, Focal Plane Power +5V, analog | 00h = -10.15V, FFh = +10.15V |
| 21 | 0:07 | FPP5L, Focal Plane Power +5V, digital | 00h = -10.15V, FFh = +10.15V |
| | 8:15 | H12 Current | 00h = -2.03 Amps, FFh = 2.03 Amps |

TABLE 7 (Continued)

ALI Telemetry Points

| WORD | BITS | DESCRIPTION | NOTES |
|------|------|--|--|
| 22 | 0:07 | TERRAM, MFPA Temp Error Signal, Side A | 00h = -1.269°K, FFh = +1.269°K |
| | 8:15 | TERRBM, MFPA Temp Error Signal, Side B | 00h = -1.269°K, FFh = +1.269°K |
| 23 | 0:07 | Flood Lamp 1 current | 00h = -1.015 A, FFh = 1.015 A |
| | 8:15 | Flood Lamp 2 current | 00h = -1.015 A, FFh = 1.015 A |
| 24 | 0:07 | Flood Lamp 3 current | 00h = -1.015 A, FFh = 1.015 A |
| | 8:15 | ALICE +15V monitor | 00h = -30.45V, FFh = +30.45V |
| 25 | 0:07 | ALICE -15V monitor | 00h = -30.45V, FFh = +30.45V |
| | 8:15 | ALICE +5V monitor | 00h = -10.15V, FFh = +10.15V |
| 26 | 0:07 | ALICE +5V CURRENT | 00h = -10.15 Amps, FFh = +10.15 Amps |
| | 8:15 | ALICE 2.5V REF - A | 00h = -10.15V, FFh = +10.15V |
| 27 | 0:07 | ALICE +28V Input Current | 00h = -5.075 Amps, FFh = 5.075 Amps |
| | 8:15 | Motor Current | 00h = -4.06 Amps, FFh = 4.06 Amps |
| 28 | 0:07 | Analog Board Temperature (T5) | 00h = -50.83°C, FFh = +60.83°C |
| | 8:15 | Paraffin Actuator Current | 00h = -2.03 Amps, FFh = 2.03 Amps |
| 29 | 0:07 | Heater Bank 1 Current | 00h = -2.03 Amps, FFh = 2.03 Amps |
| | 8:15 | FPE +28V Input Current | 00h = -5.075 Amps, FFh = 5.075 Amps |
| 30 | 0:07 | Heater Bank 3 Current | 00h = -2.03 Amps, FFh = 2.03 Amps |
| | 8:15 | Heater Bank 4 Current | 00h = -2.03 Amps, FFh = 2.03 Amps |
| 31 | 0:07 | TMSPAN, MS/PAN Module Temperature | 00h = -1.015°C, FFh = +1.015°C |
| | 8:15 | TMPH1, FPA Placeholder 1 temperature | 00h = -1.015°C, FFh = +1.015°C |
| 32 | 0:07 | TMPH2, FPA Placeholder 2 temperature | 00h = -1.015°C, FFh = +1.015°C |
| | 8:15 | FPE Housekeeping Offset D/A Output | 00h = -10.15V, FFh = +10.15V |
| 33 | | Health & Safety Register | |
| | 0 | 0 = OK, 1 = FPE Overtemperature | |
| | 1 | 0 = OK, 1 = FPE Overcurrent | |
| | 2 | 0 = OK, 1 = FPE On too long | |
| | 3 | 0 = OK, 1 = HOPA Overcurrent | |
| | 4 | 0 = OK, 1 = HOPA On too long | |
| | 5 | 0 = OK, 1 = Motor Overtemperature | |
| | 6 | 0 = OK, 1 = Motor Overcurrent | |
| | 7 | 0 = OK, 1 = Motor On too long | |
| | 8 | 0 = OK, 1 = Lamp Overcurrent | |
| | 9 | 0 = OK, 1 = Lamp On too long | |
| | 10 | 0 = OK, 1 = Heater Bank 1 Overcurrent | |
| | 11 | 0 = OK, 1 = Heater Bank 2 Overcurrent | |
| | 12 | 0 = OK, 1 = Heater Bank 3 Overcurrent | |
| | 13 | 0 = OK, 1 = Heater Bank 4 Overcurrent | |
| | 14 | 0 = OK, 1 = FPE Thermal Control Fault | |
| | 15 | unused | |
| | | ANALOG BOARD STATUS REGISTERS | |
| 34 | 0 | LED 1 status -- CAL position | 0 = Cal Plate Stowed, 1 = Cal Plate Not Stowed |

TABLE 7 (Continued)

ALI Telemetry Points

| WORD | BITS | DESCRIPTION | NOTES |
|------|-------|---|---|
| | 1 | LED 2 status -- CAL position | 0 = Cal Plate Stowed, 1 = Cal Plate Not Stowed |
| | 2 | LED 3 status -- CAL position | 0 = Cal Plate Deployed, 1 = Cal Plate Not Deployed |
| | 3 | LED 4 status -- CAL Fail Safe Status | 0 = Cal Fail Safe Deployed, 1 = Cal Fail Safe Secured |
| | 4 | LED 5 status -- CAL Launch Latch Status | 0 = Cal Launch Latch Secured, 1 = Cal Launch Latch Deployed |
| | 5 | LED 6 status | unused |
| | 6 | LED 7 status -- TAC Fail Safe | 0 = TAC Fail Safe Secured, 1 = TAC Fail Safe Deployed |
| | 7 | LED 8 status -- TAC position | 0 = TAC Fully Closed, 1 = TAC Not Fully Closed |
| | 8 | LED 9 status -- TAC position | 0 = TAC Fully Open, 1 = TAC Not Fully Open |
| | 9 | LED 10 status -- TAC Launch Latch | 0 = TAC Launch Latch Secured, 1 = TAC Launch Latch Deployed |
| | 10 | LED 11 status -- AS position | 0 = AS Not Fully Extended, 1 = AS Fully Extended |
| | 11 | LED 12 status -- AS position | AS Not Fully Retracted, 1 = AS Fully Retracted |
| | 12 | LED 13 status | unused |
| | 13 | LED 14 status | unused |
| | | From RSN Board | |
| | 14 | FPE Data Gate Status | 1 = enabled |
| | 15 | FPE Reset Line status | 0 = reset active, 1 = reset inactive |
| 35 | 0:11 | TAC Status | 000h = 0 degrees, FFFh = 1228.5 degrees |
| | 12:15 | FPE PAN integration time | 0h = 0.27 milliseconds, Fh = 1.62 milliseconds |
| 36 | 0:13 | resolver data | 000h = 3.2211, 3FFFh = -2.7787 |
| | 14 | resolver direction | 0 = Extending, 1 = Retracting |
| | 15 | unused | |
| 37 | 0:11 | TMSPAN Offset | 0x000 = 0V, 0xFFFF = +10V |
| | 12 | arm flood lamp 1 | 0=armed |
| | 13 | arm flood lamp 2 | 0=armed |
| | 14 | arm flood lamp 3 | 0=armed |
| | 15 | unused | |
| 38 | 0:11 | H12 current command (D/A input) | 000h = 0 Amps, FFFh = 2 Amps |
| | 12 | enable flood lamp 1 | 0 = on |
| | 13 | enable flood lamp 2 | 0 = on |
| | 14 | enable flood lamp 3 | 0 = on |
| | 15 | unused | |
| 39 | 0 | HOPA trip circuit enable | 1 = trip circuit enabled |
| | 1 | Heater Bank 1 trip circuit enable | 1 = trip circuit enabled |
| | 2 | Heater Bank 2 trip circuit enable | 1 = trip circuit enabled |

TABLE 7 (Continued)

ALI Telemetry Points

| WORD | BITS | DESCRIPTION | NOTES |
|------|------|---|--------------------------|
| | 3 | Heater Bank 3 trip circuit enable | 1 = trip circuit enabled |
| | 4 | Heater Bank 4 trip circuit enable | 1 = trip circuit enabled |
| | 5 | Motor power trip circuit enable | 1 = trip circuit enabled |
| | 6 | FPE operational power trip circuit enable | 1 = trip circuit enabled |
| | 7 | FPE thermal power trip circuit enable | 1 = trip circuit enabled |
| | 8 | HOPA power status | 1=enabled |
| | 9 | HOPA A status (CAL Launch Latch) | 1=HOPA energized |
| | 10 | HOPA B status (CAL Fail Safe) | 1=HOPA energized |
| | 11 | HOPA C status (TAC Launch Latch - A) | 1=HOPA energized |
| | 12 | HOPA D status (TAC Launch Latch - B) | 1=HOPA energized |
| | 13 | HOPA E status (TAC Fail Safe - A) | 1=HOPA energized |
| | 14 | HOPA F status (TAC Fail Safe - B) | 1=HOPA energized |
| | 15 | Motor power status | 1=enabled |
| 40 | 0 | Heater 1 status | 1=on |
| | 1 | Heater 2 status | 1=on |
| | 2 | Heater 3 status | 1=on |
| | 3 | Heater 4 status | 1=on |
| | 4 | Heater 5 status | 1=on |
| | 5 | Heater 6 status | 1=on |
| | 6 | Heater 7 status | 1=on |
| | 7 | Heater 8 status | 1=on |
| | 8 | Heater 9 status | 1=on |
| | 9 | Heater 10 status | 1=on |
| | 10 | Heater 11 status | 1=on |
| | 11 | Heater Bank 1 status | 1=on |
| | 12 | Heater Bank 2 status | 1=on |
| | 13 | Heater Bank 3 status | 1=on |
| | 14 | Heater Bank 4 status | 1=on |
| | 15 | unused | |
| 41 | 0 | HOPA trip circuit status | 0 = tripped |
| | 1 | Heater Bank 1 trip circuit status | 0 = tripped |
| | 2 | Heater Bank 2 trip circuit status | 0 = tripped |
| | 3 | Heater Bank 3 trip circuit status | 0 = tripped |
| | 4 | Heater Bank 4 trip circuit status | 0 = tripped |
| | 5 | Motor power trip circuit status | 0 = tripped |
| | 6 | FPE trip circuit 1 status | 0 = tripped |
| | 7 | FPE trip circuit 2 status | 0 = tripped |
| | 8 | FPE operational power status-A | 1 = enabled |
| | 9 | FPE operational power status-B | 1 = enabled |
| | 10 | FPE thermal power status-A | 1 = enabled |
| | 11 | FPE thermal power status-B | 1 = enabled |
| | 12 | FPE MFPA side A plus offset | 1 = enabled |

TABLE 7 (Continued)

ALI Telemetry Points

| WORD | BITS | DESCRIPTION | NOTES |
|------|-------|--|--|
| | 13 | FPE MFPA side A minus offset | 1 = enabled |
| | 14 | FPE MFPA side B plus offset | 1 = enabled |
| | 15 | FPE MFPA side B minus offset | 1 = enabled |
| | | RSN BOARD PROCESSOR STATUS | |
| 42 | 0:11 | CAL status | 000h = degrees, FFFh = 1097.55 degrees |
| | 12:15 | FPE MS Integration Time | 0h = 0.81 milliseconds, Fh = 4.86 milliseconds |
| 43 | 0:2 | number of watchdog counter resets | |
| | 3 | analog converter status | 1 = busy |
| | 4 | inhibit 1773 A side transmitter | 1 = inhibit |
| | 5 | inhibit 1773 B side transmitter | 1 = inhibit |
| | 6 | eprom status | 1 = not busy |
| | 7 | reset type | 0 = power up 1 = watchdog or external |
| | 8:15 | stored command count | |
| 44 | 0:15 | total number of 1773 commands received | |
| 45 | 0:15 | number of bad 1773 commands received | |
| 46 | 0:7 | return status of last command | |
| | 8:15 | function code of last command | |
| | | Motor and FPE Status Register | |
| 47 | 0 | poke status | 1 = enabled |
| | 1 | motor activation status | 1 = motor running |
| | 2:3 | active motor identifier | 0 = Telescope Aperture Cover 1 = Calibration Diffuser 2 = Aperture Selector |
| | 4 | ALI thermal control mode | 0 = manual, 1 = automatic |
| | 5:7 | HTR1 & HTR2 control mode | 0 = HTR1 & HTR2 control disabled 1 = HTR2 disabled, HTR1 controlled thermostatically 2 = HTR1 disabled, HTR2 controlled thermostatically 3 = HTR1 & HTR2 controlled thermostatically 4-7 = HTR1 & HTR2 control truss delta temp. |
| | 8:9 | HTR7-HTR11 control mode | 0 = Disable HTR7- HTR11 1 = Control FPE Radiator temperature (thermostatically) 2 = Control FPA Radiator temperature (thermal/digital converter) 3 = Regulate HTR12 current (thermal/digital converter) |

TABLE 7 (Continued)

ALI Telemetry Points

| WORD | BITS | DESCRIPTION | NOTES |
|------|-------|---------------------------------------|--|
| | 10:12 | HTR12 control mode | 0 = Disable HTR12 1 = Control HTR12 thermostatically 2 = Control HTR12 with a temperature loop 3 = Control HTR12 to regulate MFPA heater power 4 = Control HTR12 to regulate MFPA heater power with hold feature |
| | 13:15 | ALICE Diagnostic mode | 0 = No Diagnostic stream 1 = Control Block Contents 2 = Command Log 3 = Stored Command Queue 4 = Aperture Selector Position -- opening 5 = Aperture Selector Position -- closing |
| 48 | 0:15 | AS status | 0000h = 0 inches, FFFFh = 65.536 inches |
| 49 | 0:15 | Time FPE data gate set - word 1 | MSW Seconds |
| 50 | 0:15 | Time FPE data gate set - word 2 | LSW Seconds |
| 51 | 0:15 | Time FPE data gate set - word 3 | SubSeconds |
| 52 | 0:15 | Time FPE data gate cleared - word 1 | MSW Seconds |
| 53 | 0:15 | Time FPE data gate cleared - word 2 | LSW Seconds |
| 54 | 0:15 | Time FPE data gate cleared - word 3 | SubSeconds |
| 55 | 0:11 | FPE line rate | 000h = 238.0952381 lines per second FFFh = 182.4921585 lines per second |
| | 12 | MS/PAN bias enable status | 0 = enabled 1 = disabled |
| | 13 | Test pattern status | 0 = disabled 1 = enabled |
| | 14 | FPE offset calculation state | 1 = enabled, 0 = disabled |
| | 15 | unused | |
| 56 | 0:15 | Last FPE configuration command issued | see FPE ICD for details--leave as hex |
| 57 | 0:15 | Echo of last configuration command | see FPE ICD for details--leave as hex |
| 58 | 0:11 | TMPH1 Offset | 0x000 = 0V, 0xFFFF = +10V |
| | 12:15 | unused | |
| 59 | 0:11 | TMPH2 Offset | 0x000 = 0V, 0xFFFF = +10V |
| | 12:15 | unused | |

| Nominal ALI HSKP Parameters | | |
|--------------------------------|--------|----|
| T36 -ALICE Radiator Temp | -50.83 | ?U |
| T38 -FPE Board 1 | -50.83 | ?U |
| T20 -MPPA Conductor Bar | -50.83 | ?U |
| T39 -FPE Board 2 | -50.83 | ?U |
| T32 -FPA Radiator | -50.83 | ?U |
| T35 -FPE Radiator | -50.83 | ?U |
| FPP15 - FPE Power +15V: | -30.45 | ?U |
| FPP15 - FPE Power -15V: | -30.45 | ?U |
| FPP5A - FPE Power +5V Analog: | -10.15 | ?U |
| FPP5L - FPE Power +5V Digital: | -10.15 | ?U |
| Flood Lamp 1 Current | -1.015 | ?U |
| Flood Lamp 2 Current | -1.015 | ?U |
| Flood Lamp 3 Current | -1.015 | ?U |
| ALICE +15V monitor | -30.45 | ?U |
| ALICE -15V monitor | -30.45 | ?U |
| ALICE +5V monitor | -10.15 | ?U |
| ALICE +5V current | -10.15 | ?U |
| ALICE 2.5V REF -A | -10.15 | ?U |
| ALICE +28V Input Current | -5.075 | ?U |
| T5 -Analog Board Temp | -50.83 | ?U |
| FPE +28V Input Current | -5.075 | ?U |
| TEMPAN - MS/PAN Temperature: | -1.015 | ?U |

Figure 46. ASIST 1_NOMINAL telemetry page. Several key telemetry points (voltages, currents and temperatures) are listed on this page.

| Health & Safety Status | | |
|------------------------|----|----|
| FPE Temperature: | OK | ?u |
| FPE Current: | OK | ?u |
| FPE On Time: | OK | ?u |
| HOPA Current: | OK | ?u |
| HOPA On Time: | OK | ?u |
| Motor Temperature: | OK | ?u |
| Motor Current: | OK | ?u |
| Motor On Time: | OK | ?u |
| Lamp Current: | OK | ?u |
| Lamp On Time: | OK | ?u |
| Heater Bank 1 Current: | OK | ?u |
| Heater Bank 2 Current: | OK | ?u |
| Heater Bank 3 Current: | OK | ?u |
| Heater Bank 4 Current: | OK | ?u |
| FPE Thermal Control: | OK | ?u |

Figure 47. ASIST I_HS_STAT telemetry page. This window displays the status of the continuous internal health and safety monitoring performed by the ALICE (see Section 2.8.6).

| Focal Plane Electronics | | | | | |
|-----------------------------------|----------|----|-----------------------|----------|-------------|
| REFAIM - MFPA Htr Setpt, A: | -10.15 | ?u | FPE1 Trip Status: | DISABLED | ?TRIPPED ?u |
| HTRAM - MFPA Htr Voltage, A: | -0.225 | ?u | FPE2 Trip Status: | DISABLED | ?TRIPPED ?u |
| TERRAM - MFPA Temp Err Signal, A: | -1.269 | ?u | FPE Current: | -5.075 | ?u |
| REFBIM - MFPA Htr Setpt, B: | -10.15 | ?u | | | |
| HTRBM - MFPA Htr Voltage, B: | -0.225 | ?u | MFPA A Side + Offset: | | ?u |
| TERBIM - MFPA Temp Err Signal, B: | -1.269 | ?u | MFPA A Side - Offset: | | ?u |
| HTRP0SA- Heater Power +15V, A: | -30.45 | ?u | MFPA B Side + Offset: | | ?u |
| HTRP0GA- Heater Power -15V, A: | -30.45 | ?u | MFPA B Side - Offset: | | ?u |
| HTRP0SB- Heater Power +15V, B: | -30.45 | ?u | | | |
| HTRP0GB- Heater Power -15V, B: | -30.45 | ?u | FPE Data Gate: | | ?u |
| FPEP15 - FPE Power +15V: | -30.45 | ?u | FPE Reset: | ACTIVE | ?u |
| FPEM15 - FPE Power -15V: | -30.45 | ?u | | | |
| FPE5A - FPE Power +5V Analog: | -10.15 | ?u | | | |
| FPE5D - FPE Power +5V Digital: | -10.15 | ?u | | | |
| FPE Data Gate Set MSW seconds: | | | FPE Power Status | | |
| FPE Data Gate Set LSW seconds: | | | Operational: | | |
| FPE Data Gate Set Subseconds: | | | Thermal-A: | | |
| FPE Data Gate Clrd MSW seconds: | | | Thermal-B: | | |
| FPE Data Gate Clrd LSW seconds: | | | | | |
| FPE Data Gate Clrd Subseconds: | | | | | |
| | | | TEMPAN: | 0 | ?-1.015 ?u |
| FPE PAN Integration Time: | 0.27 | ?u | TEMPH1: | 0 | ?-1.015 ?u |
| FPE MS Integration Time: | 0.81 | ?u | TEMPH2: | 0 | ?-1.015 ?u |
| FPE Line Rate - lines/sec: | 237.739 | ?u | A/D Input: | -10.15 | ?u |
| MS/PAN Bias enable status: | ENABLED | ?u | | | |
| Test Pattern Status: | DISABLED | ?u | | | |
| last FPE config cmd: | 0000 | | | | |
| Echo of last config cmd: | 0000 | | | | |

Figure 48. ASIST I_FPE telemetry page. Key thermal control system parameters are displayed in the upper left corner. FPE configuration parameters are provided in the lower left corner. Data gate activity and FPE power status is located in the middle of the right hand column.

| Processor Status | |
|--------------------------------|---------------------|
| Watchdog reset count: | 0 |
| 1773-A Exit Status: | |
| 1773-B Exit Status: | |
| EEPROM Status: | BUSY |
| Reset type: | POWER UP |
| <hr/> | |
| 1773 Command Count: | 0 |
| 1773 Command Errors: | 0 |
| Return Status of last command: | 0 |
| Function Code of last command: | 0 |
| Stored Command Count: | 0 |
| <hr/> | |
| Control Block Variables | |
| Poke Status: | |
| Mechanism Power Status: | |
| Mechanism State: | |
| Active Mechanism: | TEL APER CVR |
| ALI Thermal Control Mode: | MANUAL |
| TCS Automatic Control Mode 1: | 1&2 DISABLED |
| TCS Automatic Control Mode 2: | DISABLE HTR7-HTR11 |
| TCS Automatic Control Mode 3: | DISABLE HTR 12 |
| ALICE Diagnostic Mode: | NO DIAG STREAM |
| <hr/> | |
| Spacecraft Information: | |
| Alice Time (RAW): | 00-000-00:00:00.000 |
| Alice Time (seconds): | |
| Alice Time (subseconds): | |

Figure 49. ASIST I_PROCESS_STAT telemetry page. Key parameters include the watchdog reset counter at the top, 1773 summary since last reset in the middle, and thermal control mode status and spacecraft time towards the bottom.

| Temperatures | | | | |
|--------------------------------|--------|----|-------------------------------------|-----------|
| T1 - Truss Top Plate, +Y: | -50.83 | ?u | T36 - ALICE Radiator: | -50.83 ?u |
| T2 - Truss Top Plate, -Y: | -50.83 | ?u | | |
| T3 - Truss Shell: | -50.83 | ?u | T35 - FPE Radiator: | -50.83 ?u |
| T4 - MFPA Frame, +Y Rail: | -50.83 | ?u | T38 - FPE Board 1: | -50.83 ?u |
| T5 - Analog Board: | -50.83 | ?u | T39 - FPE Board 2: | -50.83 ?u |
| T6 - Baseplate, +X: | -50.83 | ?u | | |
| T7 - Baseplate, +X, +Y: | -50.83 | ?u | | |
| T8 - Baseplate, -X, -Y: | -50.83 | ?u | T37 - FPA Radiator Frame: | -50.83 ?u |
| T9 - Pallet, +X: | -50.83 | ?u | T32 - FPA Radiator: | -50.83 ?u |
| T10 - Pallet, -X: | -50.83 | ?u | T20 - MFPA Conductor Bar: | -50.83 ?u |
| T17 - Telescope Housing, -Y: | -50.83 | ?u | | |
| T18 - Telescope Housing, +Y: | -50.83 | ?u | | |
| | | | T19 - MFPA Conductor Bar, rail I/F: | -39.55 ?u |
| | | | T29 - MFPA Conductor Bar, external: | -39.55 ?u |
| | | | T21 - MFPA Conductor Bar, internal: | -39.55 ?u |
| | | | | |
| T15 - Cal. Plate Assembly: | -50.83 | ?u | | |
| T16 - CP Motor: | -50.83 | ?u | T33 - FPA Radiator, top: | -39.55 ?u |
| T28 - Aperture Selector Motor: | -50.83 | ?u | T34 - FPA Radiator, bottom: | -39.55 ?u |
| T24 - IAC Motor Structure: | -50.83 | ?u | | |
| T25 - IAC Motor: | -50.83 | ?u | | |
| T26 - IAC Launch Latch: | -50.83 | ?u | | |
| T27 - Aperture Cover: | -50.83 | ?u | | |

Figure 50. ASIST I_TEMPS telemetry page. This page lists all ALI temperature sensor readings. Telescope temperatures are grouped in the upper left, mechanism temperatures are in the lower left, FPE temperatures in the upper right and FPA temperatures in the middle right.

| Thermal Control | | | | |
|----------------------------|-----------------|-----------|----------|----|
| Heater Bank 1 Status: | OFF | ?DISABLED | ?TRIPPED | ?u |
| Heater Bank 1 Current: | -2.03 | ?u | | |
| Heater Bank 2 Status: | OFF | ?DISABLED | ?TRIPPED | ?u |
| Heater Bank 3 Status: | OFF | ?DISABLED | ?TRIPPED | ?u |
| Heater Bank 3 Current: | -2.03 | ?u | | |
| Heater Bank 4 Status: | OFF | ?DISABLED | ?TRIPPED | ?u |
| Heater Bank 4 Current: | -2.03 | ?u | | |
| <hr/> | | | | |
| Thermal Control Mode: | MANUAL | | ?u | |
| <hr/> | | | | |
| Automatic Control Modes | | | | |
| HTR1 & HTR2: | 1&2 DISABLED | ?u | | |
| HTR7-HTR11: | DISABLE HTR7-HT | ?u | | |
| HTR12: | DISABLE HTR 12 | ?u | | |
| <hr/> | | | | |
| HTR12: | | | | |
| Current Command - analog: | 0 | | ?u | |
| Current Command - digital: | -2.03 | | ?u | |
| Heater Current: | -2.03 | | ?u | |
| HTR1 State: | OFF | | ?u | |
| HTR2 State: | OFF | | ?u | |
| HTR3 State (spare): | OFF | | ?u | |
| HTR4 State (spare): | OFF | | ?u | |
| HTR5 State (spare): | OFF | | ?u | |
| HTR6 State (spare): | OFF | | ?u | |
| HTR7 State: | OFF | | ?u | |
| HTR8 State: | OFF | | ?u | |
| HTR9 State: | OFF | | ?u | |
| HTR10 State: | OFF | | ?u | |
| HTR11 State: | OFF | | ?u | |

Figure 51. ASIST I_THERMAL telemetry page. This page summarizes the current state of the thermal control system. The TCS mode is listed near the middle and the status of individual heaters are located at the bottom.

| Mechanism Status | | | |
|---------------------------------------|-------------------|-----------|----|
| CAL Position: | 0 | | ?u |
| AS Position: | 0 | | ?u |
| TAC Position: | 0 | | ?u |
| Motor Trip Circuit Status: | DISABLED | TRIPPED | ?u |
| Motor Power: | | | ?u |
| Motor Current: | -4.06 | | ?u |
| Mechanism Status: | | | ?u |
| Active Mechanism: | TEL APER CVR | | ?u |
| <hr/> | | | |
| HOPA Trip Circuit Status: | DISABLED | TRIPPED | ?u |
| HOPA Power Status: | | | ?u |
| HOPA Current: | -2.03 | | ?u |
| Calibration Plate Launch Latch HOPA:: | | | ?u |
| Calibration Plate Fail Safe HOPA: | | | ?u |
| Aperture Cover Launch Latch HOPA A: | | | ?u |
| Aperture Cover Launch Latch HOPA B: | | | ?u |
| Aperture Cover Fail Safe HOPA A: | | | ?u |
| Aperture Cover Fail Safe HOPA B: | | | ?u |
| <hr/> | | | |
| LED Status: | | | |
| Calibration Plate Stowed? | CAL PLATE STOWED? | | ?u |
| Calibration Plate Stowed? | CAL PLATE STOWED? | | ?u |
| Calibration Plate Deployed? | CAL PLATE DEPLOY? | | ?u |
| Calibration Fail Safe Deployed? | CAL FAIL SAFE DE? | | ?u |
| Calibration Launch Latch Deployed? | CAL LAUNCH LATCH? | | ?u |
| TAC Fail Safe Deployed? | TAC FAIL SAFE SE? | | ?u |
| TAC Closed? | TAC FULLY CLOSED? | | ?u |
| TAC Open? | TAC FULLY OPEN | | ?u |
| TAC Launch Latch Deployed? | TAC LAUNCH LATCH? | | ?u |
| AS Deployed? | ????? | | ?u |
| AS Stowed? | ????? | | ?u |
| Spares (LED6, LED13, LED14): | 0 | 0 | 0 |
| Resolver Position: | 3.2211 | EXTENDING | |

Figure 52. ASIST I_MECH_STAT telemetry page. Status of the ALI mechanisms and motor power are located at the top, HOPA information is in the middle, and mechanism LED and resolver readouts are at the bottom of this page.

7.1 TELEMETRY LIMITS

Yellow and red limits are used to check telemetry points and verify they are within operational constraints. Any parameter crossing a yellow high or a yellow low limit will result in a warning to the operator that this has occurred and that this telemetry point is approaching dangerous levels and should be monitored. Any parameter crossing a red high or a red low limits will result in a warning to the operator that this has occurred, that the related hardware is in danger, and that immediate action is required. Table 8 provides the flight operations thermal yellow and red limits defined for the ALI. Temperatures listed in this table are in degrees C. Table 9 provides the flight operations power (voltages and currents) yellow and red limits defined for ALI.

TABLE 8
Flight Thermal Yellow and Red Telemetry Limits for the ALI
(Temperatures are in degrees C)

| | Description | NMEMONIC | TYPE | Cold Survival | Cold Turn-on | Red Low | Yellow Low | Yellow High | Red High | Hot Turn-on | Hot Survival |
|-----|--|-------------|--------|---------------|--------------|---------|------------|-------------|----------|-------------|--------------|
| T1 | Metering Truss Top Plate +Y | IHSKP T1 | AD-590 | -30 | N/A | -25 | -20 | 43 | 45 | N/A | 50 |
| T2 | Metering Truss Top Plate -Y | IHSKP T2 | AD-590 | -30 | N/A | -25 | -20 | 43 | 45 | N/A | 50 |
| T3 | Metering Truss Shell | IHSKP T3 | AD-590 | -30 | N/A | -25 | -20 | 43 | 45 | N/A | 50 |
| T4 | Focal Plane Frame at +Y Rail Mount | IHSKP T4 | AD-590 | N/A | N/A | N/A | -15 | 43 | 45 | N/A | 50 |
| T5 | Analog Board Temperature | IHSKP_ANALC | AD-590 | -30 | -20 | -20 | -15 | 54 | 59 | 40 | 60 |
| T6 | Metering Truss Base Plate at +X Flexure | IHSKP T6 | AD-590 | -30 | N/A | -20 | -15 | 43 | 45 | N/A | 50 |
| T7 | Metering Truss Base Plate at -X,-Y Flexure | IHSKP T7 | AD-590 | -30 | N/A | -20 | -15 | 43 | 45 | N/A | 50 |
| T8 | Metering Truss Base Plate at -X,+Y Flexure | IHSKP T8 | AD-590 | -30 | N/A | -20 | -15 | 43 | 45 | N/A | 50 |
| T9 | Pallet at +Z Flexure | IHSKP T9 | AD-590 | -30 | N/A | -10 | -5 | 43 | 45 | N/A | 50 |
| T10 | Pallet at -X Side | IHSKP T10 | AD-590 | -30 | N/A | -10 | -5 | 43 | 45 | N/A | 50 |
| T11 | | | | | | | | | | | |
| T12 | | | | | | | | | | | |
| T13 | | | | | | | | | | | |
| T14 | | | | | | | | | | | |
| T15 | Calibration Diffuser Assembly | IHSKP T15 | AD-590 | -30 | N/A | -20 | -15 | 43 | 45 | 40 | 50 |
| T16 | Calibration Diffuser Drive Motor | IHSKP T16 | AD-590 | -30 | N/A | -20 | -15 | 43 | 45 | 40 | 50 |
| T17 | Housing Top Plate -Y | IHSKP T17 | AD-590 | -30 | N/A | -20 | -15 | 43 | 45 | N/A | 50 |
| T18 | Housing Top Plate +Y | IHSKP T18 | AD-590 | -30 | N/A | -20 | -15 | 43 | 45 | N/A | 50 |
| T19 | Focal Plane Conductor Bar, Internal Rail Interface | IHSKP T19 | DT-570 | -80 | N/A | -80 | -75 | N/A | N/A | N/A | N/A |
| T20 | Focal Plane Conductor Bar, Internal Flex Link | IHSKP T20 | AD-590 | N/A | N/A | N/A | N/A | 43 | 45 | N/A | 50 |
| T21 | Focal Plane Conductor, Internal Rail Interface | IHSKP T21 | DT-570 | -80 | N/A | -80 | -75 | N/A | N/A | N/A | N/A |
| T22 | | | | | | | | | | | |
| T23 | | | | | | | | | | | |
| T24 | Aperture Cover Drive Motor Structure | IHSKP T24 | AD-590 | -45 | -35 | -40 | -30 | 43 | 45 | 40 | 50 |
| T25 | Aperture Cover Drive Motor | IHSKP T25 | AD-590 | -45 | -35 | -40 | -30 | 43 | 45 | 40 | 50 |
| T26 | Aperture Cover Launch Latch Paraffin Actuator | IHSKP T26 | AD-590 | -45 | -35 | -40 | -30 | 43 | 45 | 40 | 50 |
| T27 | Aperture Cover | IHSKP T27 | AD-590 | -45 | -35 | -40 | -30 | 43 | 45 | 40 | 50 |
| T28 | Aperture Selector Motor | IHSKP T28 | AD-590 | -45 | -35 | -40 | -30 | 43 | 45 | 40 | 50 |
| T29 | Focal Plane Conductor Bar, External Flex Link | IHSKP T29 | DF-570 | -80 | N/A | -80 | -75 | N/A | N/A | N/A | N/A |
| T30 | | | | | | | | | | | |
| T31 | | | | | | | | | | | |
| T32 | Focal Plane Radiator, Bottom | IHSKP T32 | AD-590 | N/A | N/A | N/A | N/A | 43 | 45 | N/A | 50 |
| T33 | Focal Plane Radiator, Top | IHSKP T33 | DT-570 | -80 | N/A | -80 | -75 | N/A | N/A | N/A | N/A |
| T34 | Focal Plane Radiator, Bottom | IHSKP T34 | DT-570 | -80 | N/A | -80 | -75 | N/A | N/A | N/A | N/A |
| T35 | Focal Plane Electronics Radiator +Y Support | IHSKP T35 | AD-590 | -30 | N/A | -20 | -15 | 43 | 45 | N/A | 45 |
| T36 | ALICE Power Module +X Side | IHSKP T36 | AD-590 | -30 | -20 | -10 | -5 | 54 | 59 | 40 | 59 |
| T37 | Radiator Support Frame (FPA) | IHSKP T37 | AD-590 | N/A | N/A | N/A | N/A | 43 | 45 | N/A | 50 |
| T38 | Focal Plane Electronics Board 1 | IHSKP T38 | AD-590 | -30 | -15 | -20 | -15 | 43 | 45 | 40 | 50 |
| T39 | Focal Plane Electronics Board 2 | IHSKP T39 | AD-590 | -30 | -15 | -20 | -15 | 43 | 45 | 40 | 50 |

TABLE 9
Flight Power Yellow and Red Telemetry Limits For the ALI

| Parameter | | Red Min | Yellow Min | Yellow Max | Red Max |
|--------------------------------------|-----|---------|------------|------------|---------|
| FPPP15 Focal Plane Power +15V | OFF | NA | NA | NA | NA |
| | ON | +14.0V | +14.5V | +15.5V | +16.0V |
| FPPN15 Focal Plane Power -15V | OFF | NA | NA | NA | NA |
| | ON | -16.0V | -15.5V | -14.5V | -14.0V |
| FPP5A Focal Plane Power +5V, analog | OFF | NA | NA | NA | NA |
| | ON | +4.50V | +4.75V | +5.25V | +5.5V |
| FPP5L Focal Plane Power +5V, digital | OFF | NA | NA | NA | NA |
| | ON | +4.50V | +4.75V | +5.25V | +5.5V |
| Flood Lamp 1 Current | OFF | NA | NA | NA | NA |
| | ON | NA | NA | 0.94A | 0.98A |
| Flood Lamp 2 Current | OFF | NA | NA | NA | NA |
| | ON | NA | NA | 0.94A | 0.98A |
| Flood Lamp 3 Current | OFF | NA | NA | NA | NA |
| | ON | NA | NA | 0.94A | 0.98A |
| ALICE +15V Monitor | | +14.0V | +14.5V | +15.5V | +16.0V |
| ALICE -15V Monitor | | -16.0V | -15.5V | -14.5V | -14.0V |
| ALICE +5V Monitor | | +4.50V | +4.75V | +5.25V | +5.5V |
| ALICE +5V Current | | 0.3A | 0.4A | 3.4A | 3.5A |
| ALICE 2.5V Reference | | +2.3V | +2.4V | +2.6V | +2.7V |
| ALICE +28V Input Current | | 0.4A | 0.5A | 2.4A | 2.5A |
| FPE +28V Input Current | | 0.1A | 0.12A | 1.1A | 1.2A |

8. FLIGHT OPERATIONS

The ALI has been designed to require as little commanding as possible. All default parameters are loaded into RAM from a PROM each time the ALICE is powered. Additionally, the thermal control system and health and safety interlocks are fully autonomous. As a result, it is expected that only commanding of the focal plane electronics and mechanisms will be required during flight operations.

8.1 POWER ON AND IDLE MODE

To power on the ALI, the ASIST *I_ALI_POWERON* Systems Test and Operations Language (STOL) procedure should be executed. This will provide +28 V bus power to the ALICE. The ALICE will configure itself according to the default parameters listed in Table 5. The focal plane operational power will not be active but the A side of the thermal control system will be functional and will autonomously attempt to regulate the focal plane temperature to 220 K and maintain a thermal differential of <8 K between the top and bottom plates of the metering truss by manipulating heaters H1, 2, and 7-12. **The ALICE does not check the positions of the ALI mechanisms after being powered. Therefore, it is important to correctly configure the ALI prior to terminating power to the ALICE. It is also recommended that the state of the mechanisms be checked immediately after the ALI is powered.**

8.2 ACHIEVING THERMAL EQUILIBRIUM

A review of the thermal control system is provided in Section 2.9.

After a period of several orbits the ALI should achieve thermal stability and be ready for data acquisition. If a data collection event is attempted prior to the establishment of thermal equilibrium of the focal plane, Health and Safety Register #14 may indicate an anomaly. This situation poses no health risks to the instrument, has been observed during thermal vacuum testing at Goddard, and is due to the fact that the ALI is not designed to collect data until the FPA is at a stable temperature.

8.3 RELEASING LAUNCH LATCHES AND FAIL-SAFE HOPAS

To fire any high output paraffin actuators, the following STOL procedures should be run during a real time contact with Goddard Space Flight Center. **NOTE: A MIT/Lincoln Laboratory staff member is required be present any time a HOPA is fired.**

Aperture cover launch latch:

| | |
|--|-----------------------------|
| <i>/i_armhopa circuit_mask = 4</i> (8 for redundant latch) | ; arm HOPA circuit |
| <i>/i_firehopa circuit_mask = 4</i> (8 for redundant latch) duration = 0 | ; fire HOPA circuit |
| wait until <i>/ihskip_ledstat10 = 1</i> | ; wait until latch deployed |
| <i>/i_resethopa</i> | ; reset HOPA circuit |
| <i>/i_flush_stored_cmds</i> | ; flush all commands |

Aperture cover fail-safe:

NOTE: The aperture cover fail-safe should only be executed in the event of the aperture cover motor (not the aperture selector or solar diffuser motors) completely fails and cannot be recovered. The fail-safe HOPA can only be fired once and the aperture cover can never be closed again. It is

mandatory that a MIT/Lincoln Laboratory staff member be present any time a fail-safe HOPA is fired.

```
/i_armhopa circuit_mask = 16 (32 for redundant latch) ; arm HOPA circuit
/i_firehopa circuit_mask = 16 (32 for redundant latch) duration = 0 ; fire HOPA circuit
wait until /ihskip_ledstat7 = 1 ; wait until fail-safe deployed
/i_resethopa ; reset HOPA circuit
/i_flush_stored_cmds ; flush all commands
```

Solar Diffuser Launch Latch:

```
/i_armhopa circuit_mask = 1 ; arm HOPA circuit
/i_firehopa circuit_mask = 1 duration = 0 ; fire HOPA circuit
wait until /ihskip_ledstat5 = 1 ; wait until latch deployed
/i_resethopa ; reset HOPA circuit
/i_flush_stored_cmds ; flush all commands
```

Solar Diffuser Fail-safe:

NOTE: The solar diffuser fail-safe should only be executed in the event of the solar diffuser motor (not the aperture cover or aperture selector motors) completely fails and cannot be recovered. The fail-safe HOPA can only be fired once and the solar diffuser can never be deployed again. It is mandatory that a MIT/Lincoln Laboratory staff member be present any time a fail-safe HOPA is fired.

```
/i_armhopa circuit_mask = 2 ; arm HOPA circuit
/i_firehopa circuit_mask = 2 duration = 0 ; fire HOPA circuit
wait until /ihskip_ledstat4 = 0 ; wait until fail-safe deployed
/i_resethopa ; reset HOPA circuit
/i_flush_stored_cmds ; flush all commands
```

8.4 DARK DATA COLLECTION

A dark scene will provide valuable data with which the dark current and noise of the focal plane may be investigated. To configure the ALI for dark data collection, the focal plane operational power must be activated, focal plane electronics configured, and the focal plane allowed to stabilize for four minutes. The following sequence is recommended for nominal dark scene data collections:

```
/i_setfpower power_mask = 5 ; activate focal plane operational power
wait 10 ; wait 10 seconds for FPE to come up
/i_configfpe config_command = 37583 ; configure FPE
/i_configfpe config_command = 16396 ; configure FPE
/i_configfpe config_command = 16908 ; configure FPE
wait 240 seconds ; allow time for the focal plane to warm-up
/i_set_fpe_dg duration = -1 ; activate focal plane data gate
wait 30 seconds ; collect dark current
/i_clr_fpe_dg ; reset focal plane data gate
/i_setfpower power_mask = 4 ; deactivate focal plane operational power
```

8.5 EARTH SCENE DATA COLLECTION

A standard earth observation requires three primary activities: open the aperture cover, collect data, and close the aperture cover. The following sequence is recommended for nominal earth scene data collection:

| | |
|---|--|
| /i_setfpower power_mask = 5 | ; activate focal plane operational power |
| wait 10 | ; wait 10 seconds for FPE to come up |
| /i_configfpe config_command = 37583 | ; configure FPE |
| /i_configfpe config_command = 16396 | ; configure FPE |
| /i_configfpe config_command = 16908 | ; configure FPE |
| wait 240 seconds | ; allow time for the focal plane to warm-up |
| /i_mechpower | ; enable mechanism power |
| /i_mechactive direction=0 mechanism=0 num_steps=0 | ; open the aperture cover |
| wait 30 | ; allow time for the aperture cover to open |
| /i_set_fpe_dg duration = -1 | ; activate focal plane data gate |
| wait 30 seconds | ; collect earth data |
| /i_clr_fpe_dg | ; reset focal plane data gate |
| /i_mechpower | ; enable mechanism power |
| /i_mechactive direction=1 mechanism=0 num_steps=0 | ; close the aperture cover |
| wait 30 | ; allow time for the aperture cover to close |
| /i_setfpower power_mask = 4 | ; deactivate focal plane operational power |

8.6 INTERNAL LAMP DATA COLLECTION

Internal lamp data will be used on orbit to track the radiometric stability of the focal plane and also contamination build-up on detector filter surfaces. To configure the ALI for internal lamp data collection, the focal plane operational power must be activated, focal plane electronics configured, and the focal plane allowed to stabilize for four minutes. The following sequence is recommended for nominal internal lamp data collection:

| | |
|-------------------------------------|---|
| /i_setfpower power_mask = 5 | ; activate focal plane operational power |
| wait 10 | ; wait 10 seconds for FPE to come up |
| /i_configfpe config_command = 37583 | ; configure FPE |
| /i_configfpe config_command = 16396 | ; configure FPE |
| /i_configfpe config_command = 16908 | ; configure FPE |
| wait 240 seconds | ; allow time for the focal plane to warm-up |
| /i_fl_cal | ; execute flood lamp script |
| wait 20 | ; allow time for flood lamp script to execute |
| /i_setfpower power_mask = 4 | ; deactivate focal plane operational power |

8.7 TYPICAL DCE COMMAND SEQUENCE

A typical data collection event or DCE will encompass dark current, earth, and flood lamp data collection elements. The dark current will be used to accurately subtract background levels from each earth scene. Dark data will be collected before and after each earth scene to track background drifting and internal lamp data will be used to assess the radiometric stability of the focal plane, relative to previous and future observations. The following sequence is recommended for a nominal data collection event:

| | |
|-------------------------------------|--|
| /i_setfpower power_mask = 5 | ; activate focal plane operational power |
| wait 10 | ; wait 10 seconds for FPE to come up |
| /i_configfpe config_command = 37583 | ; configure FPE |
| /i_configfpe config_command = 16396 | ; configure FPE |
| /i_configfpe config_command = 16908 | ; configure FPE |

| | |
|---|--|
| wait 240 seconds | ; allow time for the focal plane to warm-up |
| /i_set_fpe_dg duration = 1 | ; collect dark current for 1 second |
| wait 2 | ; wait 2 seconds |
| /i_mechpower | ; enable mechanism power |
| /i_mechactive direction=0 mechanism=0 num_steps=0 | ; open the aperture cover |
| wait 30 | ; allow time for the aperture cover to open |
| /i_set_fpe_dg duration = -1 | ; activate focal plane data gate |
| wait 30 seconds | ; collect earth data |
| /i_clr_fpe_dg | ; reset focal plane data gate |
| /i_mechpower | ; enable mechanism power |
| /i_mechactive direction=1 mechanism=0 num_steps=0 | ; close the aperture cover |
| wait 30 | ; allow time for the aperture cover to close |
| /i_set_fpe_dg duration = 1 | ; collect dark current for 1 second |
| wait 2 | ; wait 2 seconds |
| /i_fl_cal | ; execute flood lamp script |
| wait 20 | ; allow flood lamp script to execute |
| /i_setfpepower power_mask = 4 | ; deactivate focal plane operational power |

8.8 SOLAR CALIBRATION

The primary technique that will be used to radiometrically calibrate and monitor the ALI is known as solar calibration (Section 4.2). To achieve this type of calibration, first the aperture cover is closed, the solar diffuser is placed in front of the M2 mirror (see Section 2.4), and the focal plane is activated. The first two steps ensure the safety of the instrument throughout the remaining sequence. The spacecraft is then slewed so that the instrument is pointed at the Sun. After this maneuver is completed the ALI collects data as the aperture selector is first deployed and then stowed. Standard dark current and internal lamp data are also taken at this time. Once the solar calibration is completed, the instrument is slewed away from the Sun and the solar diffuser is stowed. The following sequence is recommended for a nominal solar calibration:

Verify the aperture cover is closed. If not, close it.

| | |
|---|---|
| /i_mechpower | |
| /i_mechactive direction = 0 mechanism = 1 num_steps = 0 | ; deploy solar diffuser |
| /i_setfpepower power_mask = 5 | ; activate focal plane operational power |
| wait 10 | ; wait 10 seconds for FPE to come up |
| /i_configfpe config_command = 37583 | ; configure FPE |
| /i_configfpe config_command = 16396 | ; configure FPE |
| /i_configfpe config_command = 16908 | ; configure FPE |
| wait 240 seconds | ; allow time for the focal plane to warm-up |
| Slew spacecraft to point instrument at the Sun. | |
| Wait for pointing to stabilize. | |
| /i_set_fpe_dg duration = 1 | ; collect dark current for 1 second |
| wait 2 | ; wait 2 seconds |
| /i_set_fpe_dg duration = -1 | ; activate focal plane data gate |
| /i_mechpower | ; enable mechanism power |
| /i_mechactive direction=0 mechanism= 2 num_steps=0 | ; deploy aperture selector |
| wait 20 | ; allow time for selector to finish |
| /i_mechpower | ; enable mechanism power |
| /i_mechactive direction=1 mechanism= 2 num_steps=0 | ; stow aperture selector |
| wait 20 | ; allow time for selector to finish |
| /i_clr_fpe_dg | ; reset focal plane data gate |
| wait 2 | ; wait 2 seconds |
| /i_set_fpe_dg duration = 1 | ; collect dark current for 1 second |
| wait 2 | ; wait 2 seconds |
| /i_fl_cal | ; execute flood lamp script |
| wait 20 | ; allow flood lamp script to execute |

```

/i_setfpepower power_mask = 4 ; deactivate focal plane operational power
Slew spacecraft to point instrument away from the Sun
/i_mechpower
/i_mechactive direction = 1 mechanism = 1 mun_steps = 0 ; stow solar diffuser

```

8.9 LUNAR CALIBRATION

The ALI lunar calibration consists of slewing the spacecraft in a raster fashion in order to scan the Moon across each SCA, recording science data at each crossing. A dark reference is obtained before the calibration begins and between each SCA crossing. An internal lamp data acquisition is performed at the end of the sequence. The following sequence is recommended for a nominal lunar calibration:

```

/i_setfpepower power_mask = 5 ; activate focal plane operational power
wait 10 ; wait 10 seconds for FPE to come up
/i_configfpe config_command = 37583 ; configure FPE
/i_configfpe config_command = 16396 ; configure FPE
/i_configfpe config_command = 16908 ; configure FPE
wait 240 seconds ; allow time for the focal plane to warm-up
/i_set_fpe_dg duration = 1 ; collect dark current for 1 second
wait 2 ; wait 2 seconds
/i_mechpower ; enable mechanism power
/i_mechactive direction=0 mechanism=0 num_steps=0 ; open the aperture cover
wait 30 ; allow time for the aperture cover to open
/i_set_fpe_dg duration = -1 ; activate focal plane data gate
wait 30 seconds ; Lunar scan #1
/i_clr_fpe_dg ; reset focal plane data gate
wait 2 seconds ; wait 2 seconds
/i_set_fpe_dg duration = 1 ; collect deep space data for 1 second
wait XXX seconds ; allow time for the spacecraft to slew
/i_set_fpe_dg duration = -1 ; activate focal plane data gate
wait 30 seconds ; Lunar scan #2
/i_clr_fpe_dg ; reset focal plane data gate
wait 2 seconds ; wait 2 seconds
/i_set_fpe_dg duration = 1 ; collect deep space data for 1 second
wait XXX seconds ; allow time for the spacecraft to slew
/i_set_fpe_dg duration = -1 ; activate focal plane data gate
wait 30 seconds ; Lunar scan #3
/i_clr_fpe_dg ; reset focal plane data gate
wait 2 seconds ; wait 2 seconds
/i_set_fpe_dg duration = 1 ; collect deep space data for 1 second
wait XXX seconds ; allow time for the spacecraft to slew
/i_set_fpe_dg duration = -1 ; activate focal plane data gate
wait 30 seconds ; Lunar scan #4
/i_clr_fpe_dg ; reset focal plane data gate
/i_mechpower ; enable mechanism power
/i_mechactive direction=1 mechanism=0 num_steps=0 ; close the aperture cover
wait 30 ; allow time for the aperture cover to close
/i_set_fpe_dg duration = 1 ; collect dark current for 1 second
wait 2 ; wait 2 seconds
/i_fl_cal ; execute flood lamp script
wait 20 ; allow flood lamp script to execute
/i_setfpepower power_mask = 4 ; deactivate focal plane operational power

```


8.10 FPA OUTGASSING

The focal plane array may need periodic warming in order to drive contaminants from the surface of the multispectral filters. To place the ALI in outgassing mode, two steps are required: 1) warming of the FPA by turning on all internal heaters and the spacecraft powered outgassing heater 2) opening the aperture cover 22 degrees. It has been demonstrated during thermal vacuum testing at Goddard that turning on all ALI heaters will heat the focal plane to $\sim 3^{\circ}\text{C}$. This is sufficient to drive all previously observed contaminants from the filter surfaces. However, the aperture cover must also be opened partially to allow the outgassed material to escape. Two STOL procedures have been developed to accomplish these tasks, *ALI_OUTGAS.PRC* and *ALI_APERTURE_OUTGAS.PRC*. The following sequence is taken from these procedures and is recommended for placing the ALI in outgassing mode:

```
/i_set_tcs_mode mode = 0 ; get manual control of TCS
/i_ena_htr_banks mank_mask=13 ; enable all heater banks
/i_man_htr_ctrl htr_mask = x'7c3' h12_command = x'400' ; turn on all heaters

/i_mechpower ; enable mechanism power
/i_mech_active direction = 0 mechanism = 0 num_steps = 60 ; open aperture cover 22 degrees
```

NOTE #1: To return to normal thermal control system operations the following command must be sent:

```
/i_set_tcs_mode mode = 1 ; return thermal control system to
                           its normal operating mode
```

Note #2: The spacecraft controlled outgassing heater must also be turned on during FPA outgassing.

```
/talifpeoghton ; Turn on spacecraft controlled ALI
                 outgassing heater
```

8.11 NOMINAL POWER OFF

To power off the ALI the ASIST *I_ALI_POWEROFF* STOL procedure should be executed. This will terminate the +28 V bus power to the ALICE. **The ALICE does not check the positions of the ALI mechanisms before being powered down. Therefore, it is important to correctly configure the ALI prior to terminating power to the ALICE. Unless configured for outgassing (Section 8.10), the solar diffuser and aperture selector should be stowed and the aperture cover should be closed.**

8.12 SAFEHOLD

When in the safehold configuration, the ALI should have the aperture cover closed, ALICE +28 V power terminated, and the spacecraft survival heaters enabled. Circumstances surrounding the necessity of placing the instrument into safehold are covered in Sections 10 and 11.

9. OPERATIONAL CONSTRAINTS

The Advanced Land Imager has three operational constraints:

1. The aperture cover of the instrument must be closed and remain closed if the spacecraft points within 18 degrees of the Sun. This constraint includes periods when the ALI is in the outgassing mode (see Section 8.10). An exception to this constraint is if the spacecraft is on the dark side of the Earth (i.e. looking toward the Sun through the Earth). Care must be used when the spacecraft is leaving eclipse.
2. No high output paraffin actuator (HOPA) may be fired without the consent of an MIT Lincoln Laboratory cognizant engineer.
3. No solar calibrations may be conducted until after the first 28 days of operation.

10. FLIGHT TSMs AND RTSs

Telemetry and statistical monitoring or TSM is used to autonomously check critical parameters of all satellite subsystems to ensure the overall safety of the observatory. For each TSM, an associated real time script or RTS is called to execute the appropriate spacecraft response. Besides the events that will result in the spacecraft entering safehold (e.g. loss of attitude control), there are five TSMs that will result in action directly related to the ALI.

TSM # 67: If the Z-axis of the spacecraft is within 18 degrees of the Sun then execute RTS #12.

TSM #100: If IHSKP_T36 (ALICE power module) is ≥ 59 C then execute RST #8.

TSM #101: If IHSKP_T38 (FPE board #1) is ≥ 50 C then execute RTS #8.

TSM #103: IF IHSKP_P28V (ALICE +28 V current) is ≥ 2.5 Amps then execute RTS #7.

TSM #116: If IHSKP_T19 (FPA temperature) is < -83 C then execute RTS #61.

```
RTS #7: /ialipwr off                                ; emergency ALI power off

RTS #8: /i_setfpepower power_mask=0                ; turn off all FPE power
        wait 5                                       ; wait 5 seconds
        /i_safe_mode override = 1                   ; stow all ALI mechanisms
        wait 60                                      ; wait 60 seconds
        /ialipwr off                                ; power off ALICE

RTS #12: /i_setfpepower power_mask=0                ; turn off all FPE power
        wait 5                                       ; wait 5 seconds
        /i_safe_mode override = 1                   ; stow all ALI mechanisms

RTS #61: /talifpeoghton                             ; Turn on spacecraft controlled ALI
        /i_set_tcs_mode mode = 0                    ; get manual control of TCS
        /i_ena_htr_banks mank_mask=13               ; enable all heater banks
        /i_man_htr_ctrl htr_mask = x'7c3' h12_command = x'400' ; turn on all heaters
```

11. ALI CONTINGENCIES

Table 10 lists contingency actions to be taken in the event of specific anomalous conditions of the ALI. The following are procedures referenced in this table:

Emergency Shutdown of the ALI

Terminate +28V power to ALICE immediately

Orderly ALI shutdown:

Off FPE Operating and Heater Power (see below)
Command ALI to "go to safehold" (I_SAFE_MODE)
Power off ALICE

Command to Safehold:

Issue "go to safehold" (I_SAFE_MODE override=1).

On FPE Operating Power:

Issue command to turn on FPE operating power
(I_SETFPEPOWER POWER_MASK = 5, FPA heater bus A in operation.
I_SETFPEPOWER POWER_MASK = 9, FPA heater bus B in operation.)

Off FPE Operating Power:

Issue command to turn off FPE operating power
If Housekeeping word bit 10 = 1 AND bit 11 = 0 THEN issue I_SETFPEPOWER
POWER_MASK = 4, (FPA heater bus A in operation).
If Housekeeping word bit 10 = 0 AND bit 11 = 1 THEN issue I_SETFPEPOWER
POWER_MASK = 8, (FPA heater bus B in operation).

Off FPE Operating and Heater Power

Issue command to turn off FPE operating and heater power (I_SETFPEPOWER
POWER_MASK = 0)

On FPA Radiator Outgas Heater

Issue command to turn on FPA radiator outgas heater.

Set Event

Write event message identifying monitor condition.

The table below lists the anomalies identified requiring a timely response, or, at a minimum, the noting of an event. For each potential anomaly, the tables indicate the monitor word and bits in the ALICE telemetry, the limit, if known, the action taken by ALI, and the operational response that should be executed.

TABLE 10
ALI Contingency Table

| Anomaly | Monitor Point | Limit | ALI Action | Spacecraft Procedure | Notes |
|--|--|--------------------|---|-----------------------------|---------------------------------|
| Excess FPE radiator temperature | Housekeeping Word 11, bits 0:7; (0 = -50.83C, 255 = +60.82 C). Also, Housekeeping Word 33, bit 0 Flag (0 = OK, 1 = FPE Overtemperature). | Temp > 58.6C | Off FPE Operational and Heater Power | Set Event | ALI Health and Safety Interlock |
| Excess FPE Input Current | Housekeeping word 29, bits 8:15; (0 = -5.075 Amps, 255 = +5.075 Amps). Also, Housekeeping Word 33, bit 1 Flag (0 = OK, 1 = FPE Overcurrent). | Current > 1.5 Amps | Off FPE Operational and Heater Power | Set Event | ALI Health and Safety Interlock |
| Excess FPE Operational Time | Housekeeping Word 33, bit 2 Flag (0 = OK, 1 = FPE on too long). | 30,000 Seconds | Off FPE Operational Power | Set Event | ALI Health and Safety Interlock |
| Excess Paraffin Actuator Current | Housekeeping Word 28, bits 8:15; (0 = -2.03 Amps, 255 = +2.03 Amps). Also Housekeeping Word 33, bit 3 Flag (0 = OK, 1 = Actuator Overcurrent). | 1.1 Amp | Disarm and Disable Paraffin Actuator | Set Event | ALI Health and Safety Interlock |
| Excess Paraffin Actuator Operation Time | Housekeeping Word 33, Bit 4 Flag (0 = OK, 1 = Actuator operation too long). | > 120 Sec | Disarm and Disable Paraffin Actuator | Set Event | ALI Health and Safety Interlock |
| Excess Aperture Cover Motor Temperature | Housekeeping Word 11, bits 8:15; (0 = -58.83C, 255 = +60.83C). Also Housekeeping Word 33, Bit 5 Flag (0 = OK, 1 = Motor overtemperature). | > 58.6C | Disable Motor Power and turn off all Motor Phases | Set Event | ALI Health and Safety Interlock |
| Excess Calibration Diffuser Plate Motor Temperature | Housekeeping Word 6, bits 0:7; (0 = -58.83C, 255 = +60.83C). Also Housekeeping Word 33, Bit 5 Flag (0 = OK, 1 = Motor overtemperature). | > 58.6C | Disable Motor Power and turn off all Motor Phases | Set Event | ALI Health and Safety Interlock |
| Excess Calibration Aperture Selector Motor Temperature | Housekeeping Word 0, bits 8:15; (0 = -58.83C, 255 = +60.83C). Also Housekeeping Word 33, Bit 5 Flag (0 = OK, 1 = Motor overtemperature). | > 58.6C | Disable Motor Power and turn off all Motor Phases | Set Event | ALI Health and Safety Interlock |
| Excess Motor Current | Housekeeping Word 27, bits 8:15; (0 = -5.075 Amps, 255 = +5.075 Amps). Also Housekeeping Word 33, Bit 6 Flag (0 = OK, 1 = Motor Overcurrent). | > 2.1 Amps | Disable Motor Power and turn off all Motor Phases | Set Event | ALI Health and Safety Interlock |
| Excess Motor Operation Time | Housekeeping Word 33, Bit 7 Flag (0 = OK, 1 = Motor On Too Long). | > 60 Sec | Disable Motor Power and turn off all Motor Phases | Set Event | ALI Health and Safety Interlock |
| Excess Lamp 1 Current | Housekeeping Word 23, bits 0:7; (0 = -1.015 Amps, 255 = +1.015 Amps). Also, Housekeeping Word 33, Bit 8 Flag (0 = OK, 1 = Lamp Overcurrent). | > 0.98 Amps | Disable Lamp power and turn off all lamps | Set Event | ALI Health and Safety Interlock |
| Excess Lamp 2 Current | Housekeeping Word 23, bits 8:15; (0 = -1.015 Amps, 255 = +1.015 Amps). Also, Housekeeping Word 33, Bit 8 Flag (0 = OK, 1 = Lamp Overcurrent). | > 0.98 Amps | Disable Lamp power and turn off all lamps | Set Event | ALI Health and Safety Interlock |
| Excess Lamp 3 Current | Housekeeping Word 24, bits 0:7; (0 = -1.015 Amps, 255 = +1.015 Amps). Also, Housekeeping Word 33, Bit 8 Flag (0 = OK, 1 = Lamp Overcurrent). | > 0.98 Amps | Disable Lamp power and turn off all lamps | Set Event | ALI Health and Safety Interlock |
| Excessive Lamp Operation Time | Housekeeping Word 33, Bit 9 Flag (0 = OK, 1 = Lamp on too long). | > 60 Sec | Disable Lamp power and turn off all lamps | Set Event | ALI Health and Safety Interlock |

TABLE 10 (Continued)

ALI Contingency Table

| | | | | | |
|---|---|---|-----------------------------------|--|---------------------------------|
| Excessive Heater Bank 1 Current | Housekeeping Word 29, bits 0:7; (0 = -2.03 Amps, 255 = +2.05 Amps). Also, Housekeeping Word 33, Bit 10 Flag (0 = OK, 1 = Heater Bank 1 Overcurrent). | > 1.1 Amp | Disable Heater Bank 1 Power | Set Event | ALI Health and Safety Interlock |
| Excessive Heater Bank 3 Current | Housekeeping Word 30, bits 0:7; (0 = -2.03 Amps, 255 = +2.05 Amps). Also, Housekeeping Word 33, Bit 12 Flag (0 = OK, 1 = Heater Bank 3 Overcurrent). | > 1.1 Amp | Disable Heater Bank 1 Power | Set Event | ALI Health and Safety Interlock |
| Excessive Heater Bank 4 Current | Housekeeping Word 29, bits 8:15; (0 = -2.03 Amps, 255 = +2.05 Amps). Also, Housekeeping Word 33, Bit 13 Flag (0 = OK, 1 = Heater Bank 4 Overcurrent). | > 1.1 Amp | Disable Heater Bank 1 Power | Set Event | ALI Health and Safety Interlock |
| FPE Thermal Control Fault | Housekeeping Word 33, Bit 14 Flag (0 = OK, 1 = FPE Thermal Control Fault). | FPE Operational Power On AND FPA Rail Heater Power >0 | Disable FPE Thermal Control Power | Set Event | ALI Health and Safety Interlock |
| High ALICE Power Module Temperature | Housekeeping Word 1, bits 8:15; (0 = -50.83C, 255 = +60.83C) | > 53C | None | For four (4) consecutive occurrences: Set Event | T36 Warning |
| Excess ALICE Power Module Temperature | Housekeeping Word 1, bits 8:15; (0 = -50.83C, 255 = +60.83C) | > 58C | None | For four (4) consecutive occurrences: Orderly ALI Shutdown ; Set Event | |
| High FPE Board 1 Temperature | Housekeeping Word 2, bits 8:15; (0 = -50.83C, 255 = +60.83C) | > 42C | None | For four (4) consecutive occurrences: Set Event | T38 Warning |
| Excessive FPE Board 1 Temperature | Housekeeping Word 5, bits 8:15; (0 = -50.83C, 255 = +60.83C) | >44C | None | For four (4) consecutive occurrences: Off FPE Operating Power; Set Event | |
| High FPE Board 2 Temperature | Housekeeping Word 5, bits 8:15; (0 = -50.83C, 255 = +60.83C) | > 42C | None | For four (4) consecutive occurrences: Set Event | T39 Warning |
| Excessive FPE Board 2 Temperature | Housekeeping Word 5, bits 8:15; (0 = -50.83C, 255 = +60.83C) | >44C | None | For four (4) consecutive occurrences: Off FPE Operating Power; Set Event | |
| Extremely Cold FPA Conductor Bar | Housekeeping Word 13, bits 0:7; (0 = -39.55C, 255 = -100.45C) | < -74C | None | For four (4) consecutive occurrences: Set Event | T19 Warning |
| Excessively Cold FPA Conductor Bar | Housekeeping Word 13, bits 0:7; (0 = -39.55C, 255 = -100.45C) | < -79C | None | For four (4) consecutive occurrences: On FPA Radiator Outgas Heater; Set Event | |
| Extremely Cold FPE Radiator Temperature | Housekeeping Word 11, bits 0:7; (0 = -50.83C, 255 = +60.83C) | <-14C | None | For four (4) consecutive occurrences: Set Event | T35 Warning |
| Excessively Cold FPE Radiator Temperature | Housekeeping Word 11, bits 0:7; (0 = -50.83C, 255 = +60.83C) | <-19C | None | For four (4) consecutive occurrences: On FPE Operational Power; Set Event | |
| Excessive ALICE +28V Current | | >2.5 Amps | None | For four (4) consecutive occurrences: Emergency shutdown of the ALI; Set Event | |

12. EMERGENCY CONTACT NUMBERS

TABLE 11

Emergency Contact Numbers

| Name | Pager Number | Work Phone Number | Home Phone Number |
|-----------------|--------------|-------------------|-------------------|
| Jeff Mendenhall | 888-508-9863 | 781-981-0392 | 978-635-1887 |
| Leo Bernotas | | 781-981-4962 | |
| Costas Digenis | | 781-981-7993 | |
| Don Lencioni | | 781-981-7996 | |

13. SUMMARY

The ALI has demonstrated breakthrough technologies in the large non-cryogenic MS/Pan FPA, Wide FOV telescope, and silicon carbide optics. It has been thoroughly tested, characterized, and calibrated. It is expected with high confidence that flight tests will validate data continuity with Landsat 7. It provides a pathfinder for an attractive follow-on Landsat and, with technology transfer, would significantly lower follow-on costs

14. REFERENCES

1. D. E. Lencioni, C. J. Digenis, W. E. Bicknell, D. R. Hearn, and J. A. Mendenhall, "Design and Performance of the EO-1 Advanced Land Imager," *SPIE Conference on Sensors, Systems, and Next Generation Satellites III*, Florence, Italy, 20 September 1999.
2. W. E. Bicknell, C. J. Digenis, S. E. Forman, and D. E. Lencioni, "EO-1 Advanced Land Imager," *SPIE Conference on Earth Observing Systems IV*, Denver, Colorado, 18 July 1999.
3. C. J. Digenis, D. E. Lencioni, and W. E. Bicknell, "New Millennium EO-1 Advanced Land Imager," *SPIE Conference on Earth Observing Systems III*, San Diego, California, July 1998.
4. D. E. Lencioni and D. R. Hearn, "New Millennium EO-1 Advanced Land Imager," *International Symposium on Spectral Sensing Research*, San Diego, Dec. 13-19, 1997.
5. "Landsat 7 System Specification," Revision K, NASA Goddard Space Flight Center, 430-L-0002-K, July 1997.
6. D. R. Hearn, "EO-1 Advanced Land Imager Modulation Transfer Functions," *MIT Lincoln Laboratory Technical Report 1061*, 22 March 2000.
7. D. E. Lencioni, D. R. Hearn, J. A. Mendenhall, and W. E. Bicknell, "EO-1 Advanced Land Imager calibration and performance," *SPIE Conference on Earth Observing Systems IV*, Denver, Colorado, 18 July 1999.
8. D. R. Hearn, J. A. Mendenhall, and B. C. Willard, "Spatial calibration of the EO-1 Advanced Land Imager," *SPIE Conference on Earth Observing Systems IV*, Denver, Colorado, 18 July 1999.
9. J. A. Mendenhall and A. C. Parker, "Spectral calibration of the EO-1 Advanced Land Imager," *SPIE Conference on Earth Observing Systems IV*, Denver, Colorado, 18 July 1999.
10. J. A. Mendenhall, D. E. Lencioni, and A. C. Parker, "Radiometric calibration of the EO-1 Advanced Land Imager," *SPIE Conference on Earth Observing Systems IV*, Denver, Colorado, 18 July 1999.
11. J. A. Mendenhall, D. E. Lencioni, D. R. Hearn, and A. C. Parker, "EO-1 Advanced Land Imager preflight calibration," *Proc. SPIE*, Vol. 3439, pp. 390-399, July 1998.
12. J. A. Mendenhall, D. E. Lencioni, D. R. Hearn, and A. C. Parker, "EO-1 Advanced Land Imager in-flight calibration," *Proc. SPIE*, Vol. 3439, pp. 416-422, July 1998.
13. J. Evans and H. Viggh, "Radiometric Calibration Pipeline for the EO-1 Advanced Land Imager," *SPIE Conference on Earth Observing Systems IV*, Denver, Colorado, 18 July 1999.
14. B. C. Willard, "Wide field-of-view Schmidt-sphere imaging collimator," *SPIE Conference on Earth Observing Systems IV*, Denver, Colorado, 18 July 1999.
15. H. Viggh, J. Mendenhall, R. Sayer, J. S. Stuart, and M. Gibbs, "An Automated Ground Data Acquisition and Processing System for Calibration and Performance Assessment of the EO-1 Advanced Land Imager," *SPIE Conference on Earth Observing Systems IV*, Denver, Colorado, 18 July 1999.
16. H. Viggh, J. S. Stuart, R. Sayer, J. Evans, and M. Gibbs, "Performance Assessment Software for the EO-1 Advanced Land Imager," *SPIE Conference on Earth Observing Systems IV*, Denver, Colorado, 18 July 1999.

RALPH WELSH
69774

GOOD FOR ON ORBIT ALSO

Test Procedures for Integration and Testing of the Advanced Land Imager with the Earth Observing-1 Spacecraft

Jeff Mendenhall and Ed Bicknell
MIT/Lincoln Laboratory
03/22/99

1.0 Introduction:

This document specifies the ASIST displays and procedures to be used by personnel during integration and testing of the Advanced Land Imager with the Earth Observing-1 spacecraft. The procedures and housekeeping parameters described below are to be used only during nominal lab testing. Additional procedures will be supplied for conducting EMI/EMC; Thermal Balance and Thermal Vacuum; Vibration, Shock, and Acoustic; and End-to-End tests.

This document is composed of two main sections. The first section describes the ASIST display windows to be monitored whenever the ALI is supplied +28V spacecraft power. A list and description of parameters displayed in these windows are provided. Additionally, yellow and red values are supplied for each parameter. Yellow values indicate regions where a parameter has exceeded the nominal range of operation but does not endanger the instrument. Operators should make note of these occurrences, closely monitor these parameters until the ALI is turned-off, and report a summary of these events to MIT/Lincoln Laboratory personnel (see attached contact list - Table 6) at the earliest convenience but no later than the end of the day. Red values are limits which, when exceeded, pose an immediate health risk to the instrument. Operators noting a red value has been exceeded should immediately execute the ALI Turn Off Sequence and notify MIT/Lincoln Laboratory personnel.

The second section describes five ALI ASIST STOL procedures: Turn-on and Health Check Sequence, Functional Test, Performance Assessment Test, Turn-off Sequence, and Emergency Shutdown Sequence. Each procedure has a description of its function and supporting *Command, ASIST Display, and Data Processing* sections.

2.0 ASIST Display Windows:

Three ASIST display windows have been created to support quick-look monitoring of key ALI parameters during normal lab testing at SWALES. The three windows may be opened by accessing ASIST telemetry files using the ASIST *Add New Window* command. The *Nominal ALI Housekeeping* window (*I_NOMINAL* file) consists of 19 key parameters whose analog values are updated at a rate of 1 Hz and displayed in a text format (see Table 1). The second ASIST window, the *ALI Trending* window (*I_TREND* file), is a graphical window. This window displays five temperatures monitored in the *Nominal ALI Housekeeping* window (T36 ALICE Radiator Temperature, T38 FPE Board 1 Temperature, T39 FPE Board 2 Temperature, T35 FPE Radiator Temperature, T5 Analog Board Temperature) in a strip chart manner. The *ALI Health and Safety* window (*I_HS_STAT* file), is a text display of 15 critical parameters that directly indicate the current safety of the instrument (see Table 2). These parameters are displayed in a binary format where green indicates a parameter is within safety limits and red indicates a parameter has exceeded a safety limit. Once a parameter has exceeded a red limit, immediate action is taken by the ALI Control Electronics (ALICE) to maintain the safety of the instrument. For example, if the ALI focal plane electronics (ALI FPE) current limit (1.5 Amps) is exceeded, the ALICE will terminate power to the ALI FPE. This condition will be indicated by the FPE Over Current parameter turning red on the *ALI Health and Safety* window. (The ALI FPE will then remain off until manually powered at a later time.) Operators noting a red value has been exceeded should immediately execute the ALI Turn Off Sequence and notify MIT/Lincoln Laboratory personnel.

The three ASIST windows described above should be open whenever the +28V spacecraft power is supplied to the ALI.

Table 1: Nominal ALI Housekeeping Window Parameter Description

| Parameter | | Nominal Value | Yellow Min | Yellow Max | Red Min | Red Max |
|--------------------------------------|-------------------------------|--------------------------------|------------|-----------------------------|---------|-----------------------------|
| T36 ALICE Radiator Temperature | Idle | $T_{36}=T_a+4^{\circ}\text{C}$ | NA | $T_{36}+10^{\circ}\text{C}$ | NA | $T_{36}+15^{\circ}\text{C}$ |
| | Functional Test | $T_{36}=T_a+6^{\circ}\text{C}$ | | | | |
| | Perf. Assess. Test | $T_{36}=T_a+6^{\circ}\text{C}$ | | | | |
| T38 FPE Board 1 Temperature | Idle | $T_{38}=T_a$ | NA | $T_{38}+10^{\circ}\text{C}$ | NA | $T_{38}+15^{\circ}\text{C}$ |
| | Functional Test | $T_{38}=T_a+2^{\circ}\text{C}$ | | | | |
| | Perf. Assess. Test | $T_{38}=T_a+3^{\circ}\text{C}$ | | | | |
| T39 FPE Board 2 Temperature | Idle | $T_{39}=T_a$ | NA | $T_{39}+10^{\circ}\text{C}$ | NA | $T_{39}+15^{\circ}\text{C}$ |
| | Functional Test | $T_{39}=T_a+1^{\circ}\text{C}$ | | | | |
| | Perf. Assess. Test | $T_{39}=T_a+2^{\circ}\text{C}$ | | | | |
| T35 FPE Radiator Temperature | | $T_{35}=T_a$ | NA | $T_{35}+10^{\circ}\text{C}$ | NA | $T_{35}+15^{\circ}\text{C}$ |
| T5 Analog Board Temperature | Idle | $T_5=T_a+1^{\circ}\text{C}$ | NA | $T_5+10^{\circ}\text{C}$ | NA | $T_5+15^{\circ}\text{C}$ |
| | Functional Test | $T_5=T_a+2^{\circ}\text{C}$ | | | | |
| | Perf. Assess. Test | $T_5=T_a+2^{\circ}\text{C}$ | | | | |
| FPPP15 Focal Plane Power +15V | OFF | 0.0V | NA | NA | NA | NA |
| | ON | +15.0V | +14.5V | +15.5V | +14.0V | +16.0V |
| FPPN15 Focal Plane Power -15V | OFF | 0.0V | NA | NA | NA | NA |
| | ON | -15.0V | -15.5V | -14.5V | -16.0V | -14.0V |
| FPP5A Focal Plane Power +5V, analog | OFF | 0.0V | NA | NA | NA | NA |
| | ON | +5.0V | +4.75V | +5.25V | +4.5V | +5.5V |
| FPP5L Focal Plane Power +5V, digital | OFF | 0.0V | NA | NA | NA | NA |
| | ON | +5.0V | +4.75V | +5.25V | +4.5V | +5.5V |
| Flood Lamp 1 Current | OFF | 0.0A | NA | NA | NA | NA |
| | ON | 0.89A | NA | 0.94A | NA | 0.98A |
| Flood Lamp 2 Current | OFF | 0.0A | NA | NA | NA | NA |
| | ON | 0.89A | NA | 0.94A | NA | 0.98A |
| Flood Lamp 3 Current | OFF | 0.0A | NA | NA | NA | NA |
| | ON | 0.89A | NA | 0.94A | NA | 0.98A |
| ALICE -15V Monitor | | +15.0V | +14.5V | +15.5V | +14.0V | +16.0V |
| ALICE -15V Monitor | | -15.0V | -15.5V | -14.5V | -16.0V | -14.0V |
| ALICE +5V Monitor | | +5.0V | +4.75V | +5.25V | +4.5V | +5.5V |
| ALICE +5V Current | | 0.5A | 0.4A | 0.6A | 0.3A | 0.7A |
| ALICE 2.5V Reference | | +2.5V | +2.4V | +2.6V | +2.3V | +2.7V |
| ALICE +28V Input Current | | 0.6A | 0.5A | 0.7A | 0.4A | 0.8A |
| FPE +28V Input Current | Thermal A Only | 0.22A | 0.15A | 0.30A | 0.1A | 0.35A |
| | Thermal B Only | 0.22A | 0.15A | 0.30A | 0.1A | 0.35A |
| | Thermal A + Operational Power | 0.98A | 0.9A | 1.1A | 0.8A | 1.2A |
| | Thermal B + Operational Power | 0.98A | 0.9A | 1.1A | 0.8A | 1.2A |
| | Operational Power Only | 0.68A | 0.6A | 0.8A | 0.5A | 0.9A |

T_a = Ambient Temperature

Table 2: ALI Health and Safety Window Parameter Description

| Parameter |
|----------------------------|
| FPE Over Temperature |
| FPE Over Current |
| FPE On Too Long |
| HOPA Over Current |
| HOPA On Too Long |
| Motor Over Temperature |
| Motor Over Current |
| Motor On Too Long |
| Lamp Over Current |
| Lamp On Too Long |
| Heater Band 1 Over Current |
| Heater Band 2 Over Current |
| Heater Band 3 Over Current |
| Heater Band 4 Over Current |
| FPE Thermal Control Fault |

3.0 Procedures

3.1 Turn-On and Health Check Sequence:

The ALI turn-on and health check procedure consists of opening the ASIST ALI display windows and supplying the ALI +28V spacecraft power. The ALI will then perform an internal start-up procedure that will subsequently place the instrument in a standard operating condition. This condition consists of the ALICE and Thermal Control A power on, but the focal plane array operational power off (ALI idle mode). Once the ALI has been powered, a comparison of parameter values displayed in the ASIST *Nominal ALI Housekeeping* window to expected values (see Table 3) should be performed to ascertain the health of the instrument.

3.1.1 Commands - None

3.1.2 ASIST Displays - The ASIST will display the nominal ALI housekeeping windows during turn-on and while the ALI is active. Table 3 depicts the parameter values expected while the ALI is in idle mode. Additionally, particular attention should be paid to the *Health and Safety* ASIST window immediately after power is supplied to the ALI.

3.1.3 Data Processing- No data processing required. Housekeeping data collected while the ALI was powered should be sent to MIT/Lincoln Laboratory personnel.

3.2 Functional Test:

The ALI functional test consists of executing the **Turn-On Sequence** and then running the ASIST 'ALI_FUNCTIONAL' STOL procedure. This procedure will turn-on and configure the focal plane, wait four minutes for focal plane array stabilization, collect housekeeping and science data (dark current) for 2 seconds, turn off the data gate, and turn off the focal plane operational power. The data collected during

3.2.1 Commands – (For reference only)

| <u>Action</u> | | <u>ACCN</u> | | <u>ASIST</u> | | <u>BIB</u> |
|---------------------------|---|-------------------|---|--------------------|---|--------------------|
| FPE on | = | fpeon | = | fpeon | = | /i_setfpepower 5 |
| Configure FPE | = | start data_start | = | /i_configfpe 37583 | = | /i_configfpe 37583 |
| | | | = | /i_configfpe 16396 | = | /i_configfpe 16396 |
| | | | = | /i_configfpe 16908 | = | /i_configfpe 16908 |
| Wait 4 minutes | = | wait 240 | = | wait 240 | = | wait 240 |
| Collect 2 seconds of data | = | Collect 2 seconds | = | /i_set_fpe_dg 2 | = | /i_set_fpe_dg 2 |
| Data gate off | = | start data_stop | = | none | = | none |
| FPE off | = | no command | = | /i_setfpepower 4 | = | /i_setfpepower 4 |

3.2.2 ASIST Displays - The ASIST will display the nominal ALI housekeeping windows. Table 4 depicts the parameter values expected during a functional test.

3.2.3 Data Processing- Software will be provided for offline reduction of the dark current science data. Analysis will include the generation of mean and standard deviation (noise) plots for each pixel of every band. These plots should be compared to the nominal mean and standard deviation plots provided in Figures 1 and 2. Mean values should not deviate by more than 5% of the values shown in Figure 1. Noise values should not exceed 1.5 DN for MS pixels and 2 DN for PAN pixels. Finally, housekeeping and science data collected during functional tests should be sent to MIT/Lincoln Laboratory personnel.

3.3 Performance Assessment Test:

The ALI performance assessment test consists of executing the **Turn-On Sequence** and then running the ASIST 'ALI_PERFORMANCE' STOL procedure. This procedure will turn-on and configure the focal plane, wait four minutes for focal plane array stabilization, activate the internal calibration lamps for 10 seconds, turn on the data gate, turn off the internal calibration lamps in 2 second intervals, turn off the data gate, and turn off the focal plane operational power.

3.3.1 Commands – (For reference only)

| <u>Action</u> | | <u>ACCN</u> | | <u>ASIST</u> | | <u>BIB</u> |
|----------------|---|------------------|---|--------------------|---|--------------------|
| FPE on | = | fpeon | = | fpeon | = | /i_setfpepower 5 |
| Configure FPE | = | start data_start | = | /i_configfpe 37583 | = | /i_configfpe 37583 |
| | | | = | /i_configfpe 16396 | = | /i_configfpe 16396 |
| | | | = | /i_configfpe 16908 | = | /i_configfpe 16908 |
| Wait 4 minutes | = | wait 240 | = | wait 240 | = | wait 240 |
| Run INTCAL | = | intcal | = | intcal | = | /i_fl_cal |
| FPE off | = | no command | = | /i_setfpepower 4 | = | /i_setfpepower 4 |

3.3.2 ASIST Displays - The ASIST will display the nominal ALI housekeeping windows. Operators should witness the *Flood Lamp 1 Current*, *Flood Lamp 2 Current* and *Flood Lamp 3 Current* values increase from 0 to ~ 0.9 amps for 16 seconds and then return to 0 amps (see Table 5).

3.3.3 Data Processing- Software will be provided for offline reduction of the performance assessment science data. Analysis will include the generation of mean plots for one pixel of every band as a function of frame number. These plots should be compared to the nominal performance assessment results provided in Figure 3. Mean values should not deviate by more than 5% of the values shown in Figure 3. Finally, housekeeping and science data collected during functional tests should be sent to MIT/Lincoln Laboratory personnel.

3.4 Turn-Off Sequence:

The ALI turn-off procedure consists of running the ASIST 'ALI_OFF' STOL procedure followed by turning off the ALI +28V spacecraft power. Once the ALI power has been terminated, the ALI housekeeping display windows may be closed. The 'ALI_OFF' procedure will turn off the data gate and the focal plane operational power in preparation for power down.

3.4.1 Commands - (For reference only)

| <u>Action</u> | | <u>ACCN</u> | | <u>ASIST</u> | | <u>BIB</u> |
|---------------|---|-----------------|---|------------------|---|------------------|
| Data gate off | = | start data_stop | = | /i_clr_fpe_dg | = | /i_clr_fpe_dg |
| FPE off | = | no command | = | /i_setfpepower 4 | = | /i_setfpepower 4 |

3.4.2 ASIST Displays - The ASIST will display the nominal housekeeping windows (see Table 3) until the ALI power is terminated.

3.4.3 Data Processing- No data processing required. Housekeeping and science data collected while the ALI was powered should be sent to MIT/Lincoln Laboratory personnel.

3.5 Emergency Shutdown Sequence:

The ALI emergency shutdown procedure may be performed in two manners, depending on the severity of the problem*. If a situation occurs whereby the health of the spacecraft and/or the instrument is in immediate and severe jeopardy, the ALI may be shut down by terminating the spacecraft +28V power. However, if the ALI is not in immediate danger (including the red tag items mentioned above), the ALI should be shut down by running the ASIST 'ALI_OFF' STOL procedure followed by turning off the ALI +28V spacecraft power. Once the ALI power has been terminated, the ALI housekeeping display windows may be closed. The 'ALI_OFF' procedure will turn off the data gate and the focal plane operational power (if needed) in preparation for power down.

Once the spacecraft and ALI are no longer in danger, MIT/Lincoln Laboratory personnel should be notified.

**NOTE: The emergency shut down procedure outlined in this document is to be used during nominal laboratory testing only. A different shut down procedure will be provided for EMI/EMC; Thermal Balance and Thermal Vacuum; Vibration, Shock, and Acoustic; and End-to-End tests. Additionally, an in-flight emergency shut down procedure will be provided at a later date.*

Table 3: Nominal ALI Housekeeping Window Parameter Values During ALI Idle Mode

| Parameter | Nominal Value |
|--------------------------------------|--------------------------|
| T36 ALICE Radiator Temperature | $T_a + 4^\circ \text{C}$ |
| T38 FPE Board 1 Temperature | T_a |
| T39 FPE Board 2 Temperature | T_a |
| T35 FPE Radiator Temperature | T_a |
| T5 Analog Board Temperature | $T_a + 1^\circ \text{C}$ |
| FPPP15 Focal Plane Power +15V | 0.03V |
| FPPN15 Focal Plane Power -15V | 0.03V |
| FPP5A Focal Plane Power +5V, analog | 0.03V |
| FPP5L Focal Plane Power +5V, digital | 1.71V |
| Flood Lamp 1 Current | 0.01A |
| Flood Lamp 2 Current | 0.01A |
| Flood Lamp 3 Current | 0.01A |
| ALICE +15V Monitor | +14.92V |
| ALICE -15V Monitor | -14.92V |
| ALICE +5V Monitor | +4.97V |
| ALICE +5V Current | 0.597 |
| ALICE 2.5V Reference | +2.50V |
| ALICE +28V Input Current | 0.616 |
| FPE +28V Input Current | 0.218 |

T_a = Ambient Temperature

Table 4: Nominal ALI Housekeeping Window Parameter Values During a Functional Test

| Parameter | Nominal Value |
|--------------------------------------|--------------------------|
| T36 ALICE Radiator Temperature | $T_a + 6^\circ \text{C}$ |
| T38 FPE Board 1 Temperature | $T_a + 2^\circ \text{C}$ |
| T39 FPE Board 2 Temperature | $T_a + 1^\circ \text{C}$ |
| T35 FPE Radiator Temperature | T_a |
| T5 Analog Board Temperature | $T_a + 2^\circ \text{C}$ |
| FPPP15 Focal Plane Power +15V | +14.92V |
| FPPN15 Focal Plane Power -15V | -15.16V |
| FPP5A Focal Plane Power +5V, analog | +4.90V |
| FPP5L Focal Plane Power +5V, digital | +4.81V |
| Flood Lamp 1 Current | 0.01A |
| Flood Lamp 2 Current | 0.01A |
| Flood Lamp 3 Current | 0.01A |
| ALICE +15V Monitor | +14.93V |
| ALICE -15V Monitor | -14.93V |
| ALICE +5V Monitor | +4.98V |
| ALICE +5V Current | 0.52A |
| ALICE 2.5V Reference | +2.51V |
| ALICE +28V Input Current | 0.62A |
| FPE +28V Input Current | 0.98A |

T_a = Ambient Temperature

Table 4: Nominal ALI Housekeeping Window Parameter Values During a Functional Test

| Parameter | Nominal Value |
|--------------------------------------|--------------------------|
| T36 ALICE Radiator Temperature | $T_a + 6^\circ \text{C}$ |
| T38 FPE Board 1 Temperature | $T_a + 2^\circ \text{C}$ |
| T39 FPE Board 2 Temperature | $T_a + 1^\circ \text{C}$ |
| T35 FPE Radiator Temperature | T_a |
| T5 Analog Board Temperature | $T_a + 2^\circ \text{C}$ |
| FPPP15 Focal Plane Power +15V | +14.92V |
| FPPN15 Focal Plane Power -15V | -15.16V |
| FPP5A Focal Plane Power +5V, analog | +4.90V |
| FPP5L Focal Plane Power +5V, digital | +4.81V |
| Flood Lamp 1 Current | 0.01A |
| Flood Lamp 2 Current | 0.01A |
| Flood Lamp 3 Current | 0.01A |
| ALICE +15V Monitor | +14.93V |
| ALICE -15V Monitor | -14.93V |
| ALICE +5V Monitor | +4.98V |
| ALICE +5V Current | 0.52A |
| ALICE 2.5V Reference | +2.51V |
| ALICE +28V Input Current | 0.62A |
| FPE -28V Input Current | 0.98A |

T_a = Ambient Temperature

Figure 1: Nominal Functional Test Mean Values

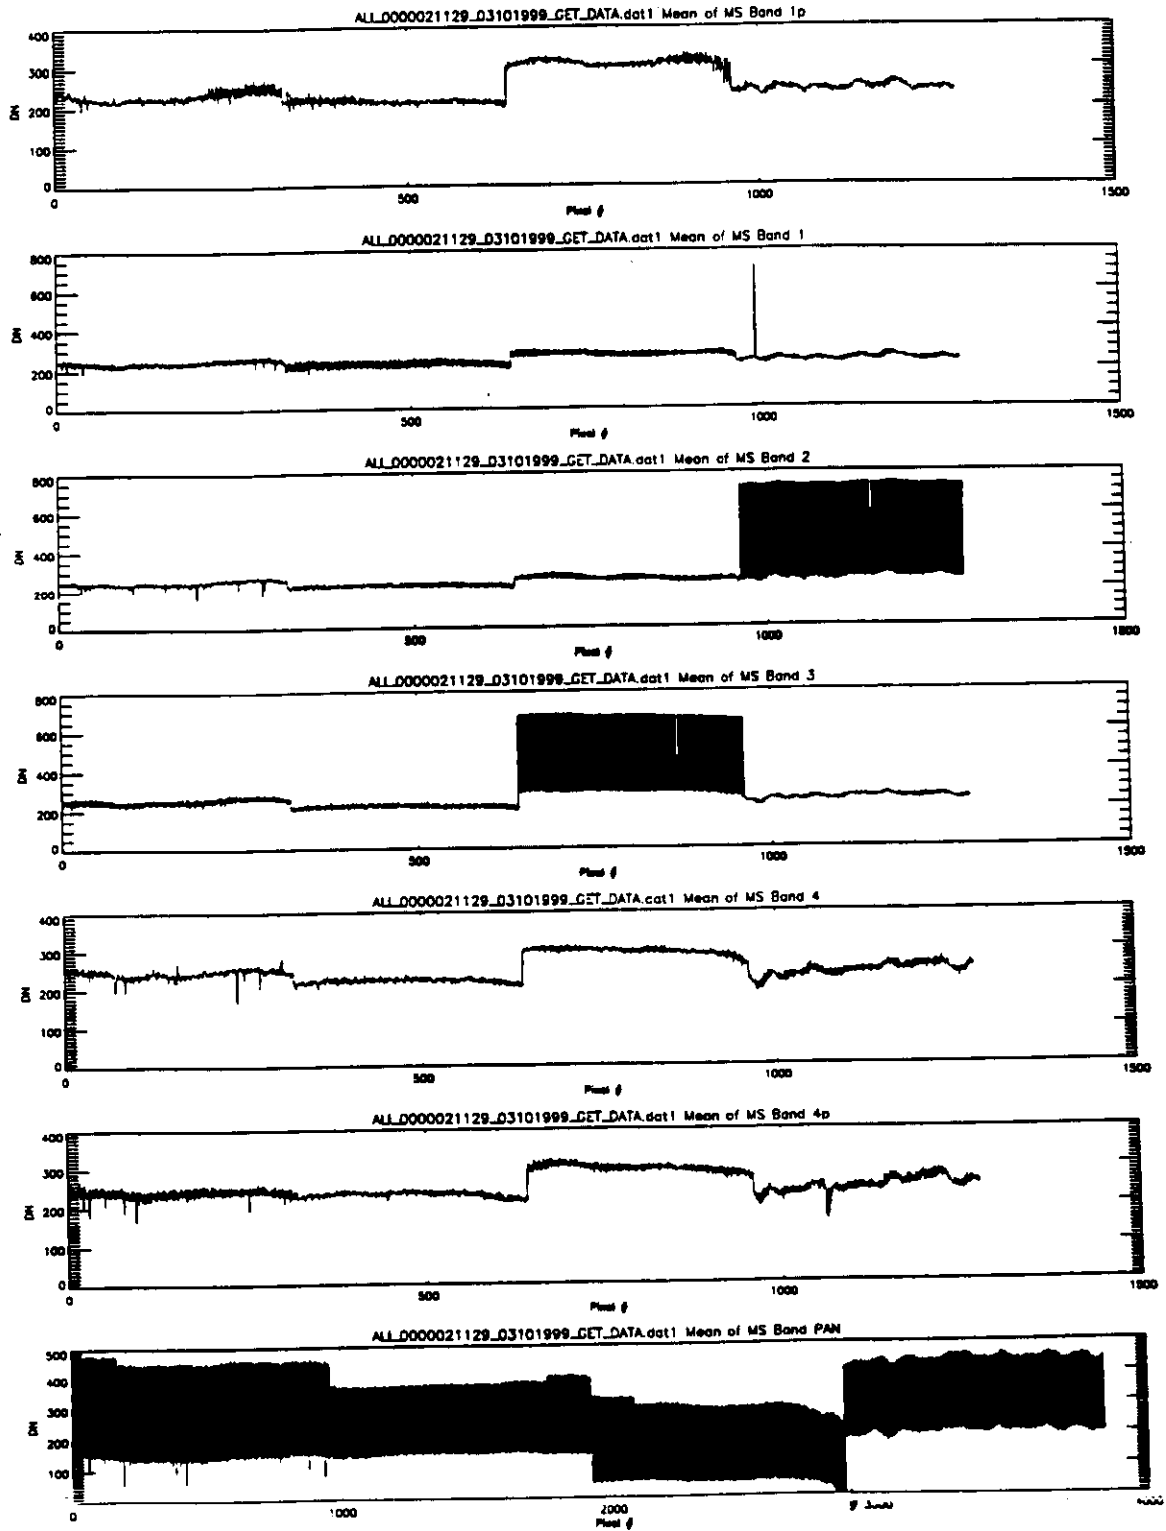
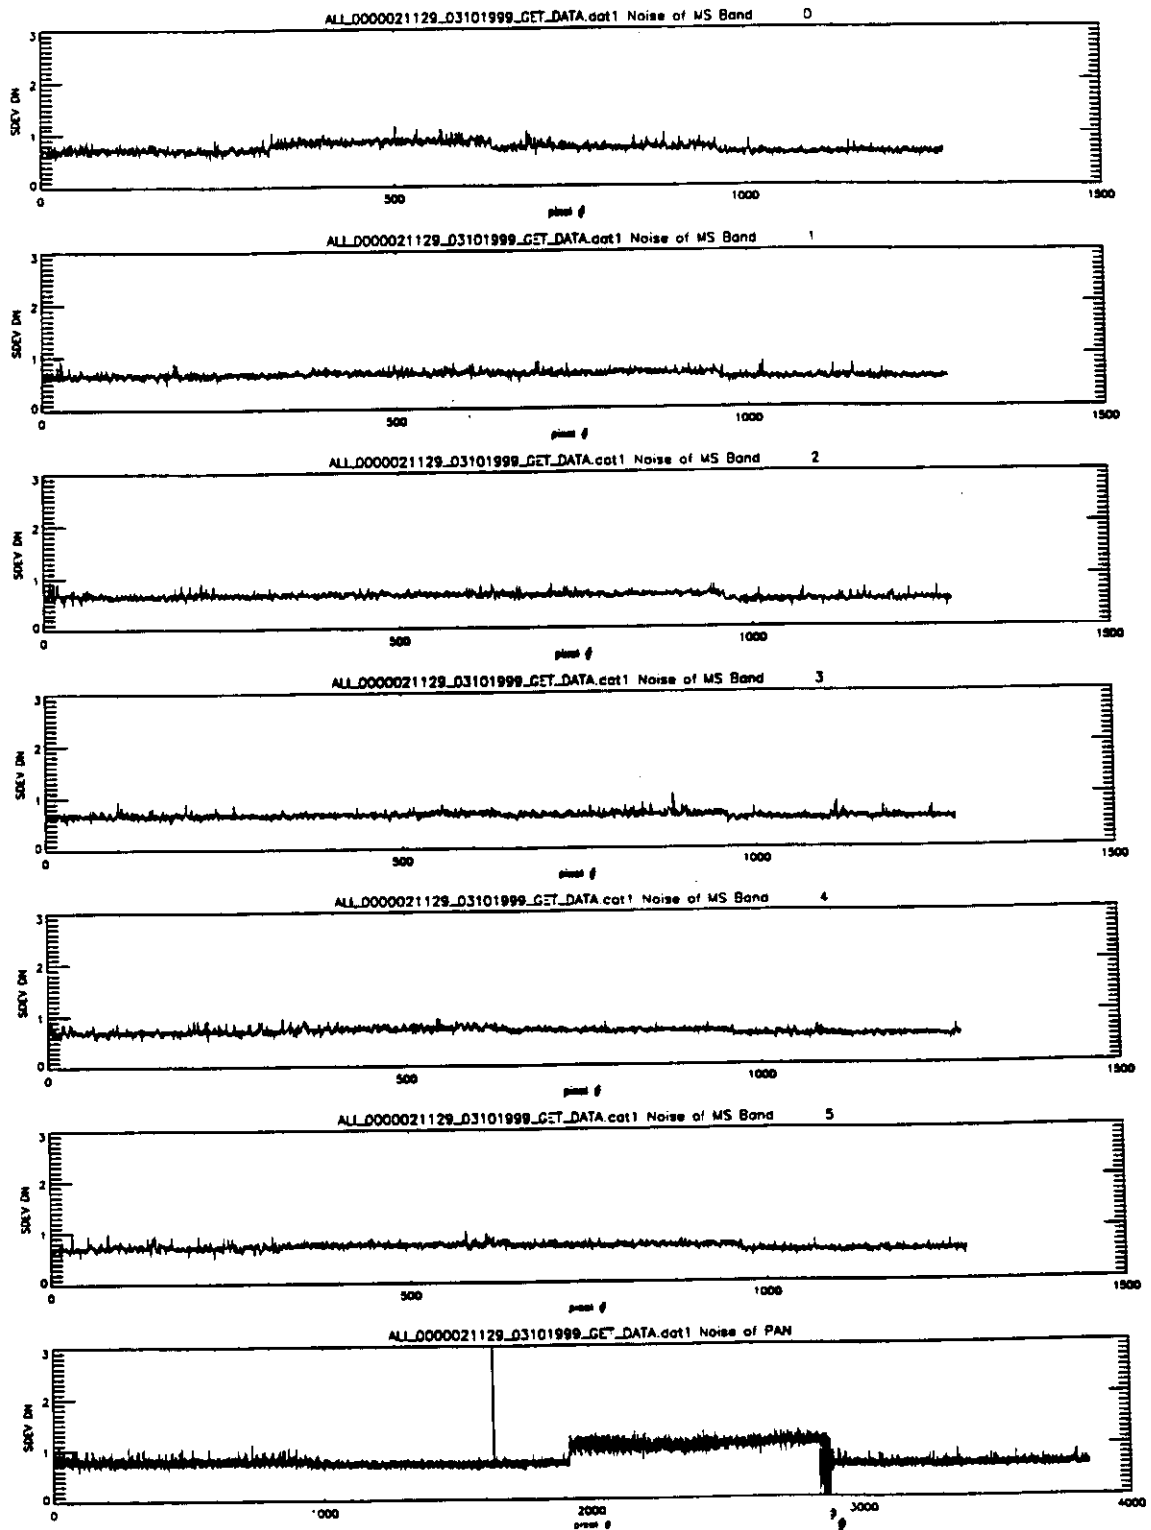


Figure 2: Nominal Functional Test Standard Deviation Values



**Table 5: Nominal ALI Housekeeping Window Parameter Values
During a Performance Assessment Test**

| Parameter | Nominal Value |
|--------------------------------------|--------------------------|
| T36 ALICE Radiator Temperature | $T_a + 6^\circ \text{C}$ |
| T38 FPE Board 1 Temperature | $T_a + 3^\circ \text{C}$ |
| T39 FPE Board 2 Temperature | $T_a + 2^\circ \text{C}$ |
| T35 FPE Radiator Temperature | T_a |
| T5 Analog Board Temperature | $T_a + 2^\circ \text{C}$ |
| FPPP15 Focal Plane Power +15V | +14.93V |
| FPPN15 Focal Plane Power -15V | -15.16V |
| FPP5A Focal Plane Power +5V, analog | +4.90V |
| FPP5L Focal Plane Power +5V, digital | +4.82V |
| Flood Lamp 1 Current | 0.89A |
| Flood Lamp 2 Current | 0.89A |
| Flood Lamp 3 Current | 0.89A |
| ALICE +15V Monitor | +14.92V |
| ALICE -15V Monitor | -14.92V |
| ALICE +5V Monitor | +4.81V |
| ALICE +5V Current | 3.30A |
| ALICE 2.5V Reference | +2.50V |
| ALICE +28V Input Current | 1.17A |
| FPE +28V Input Current | 0.94A |

Figure 3: Nominal Performance Assessment Test Mean Values

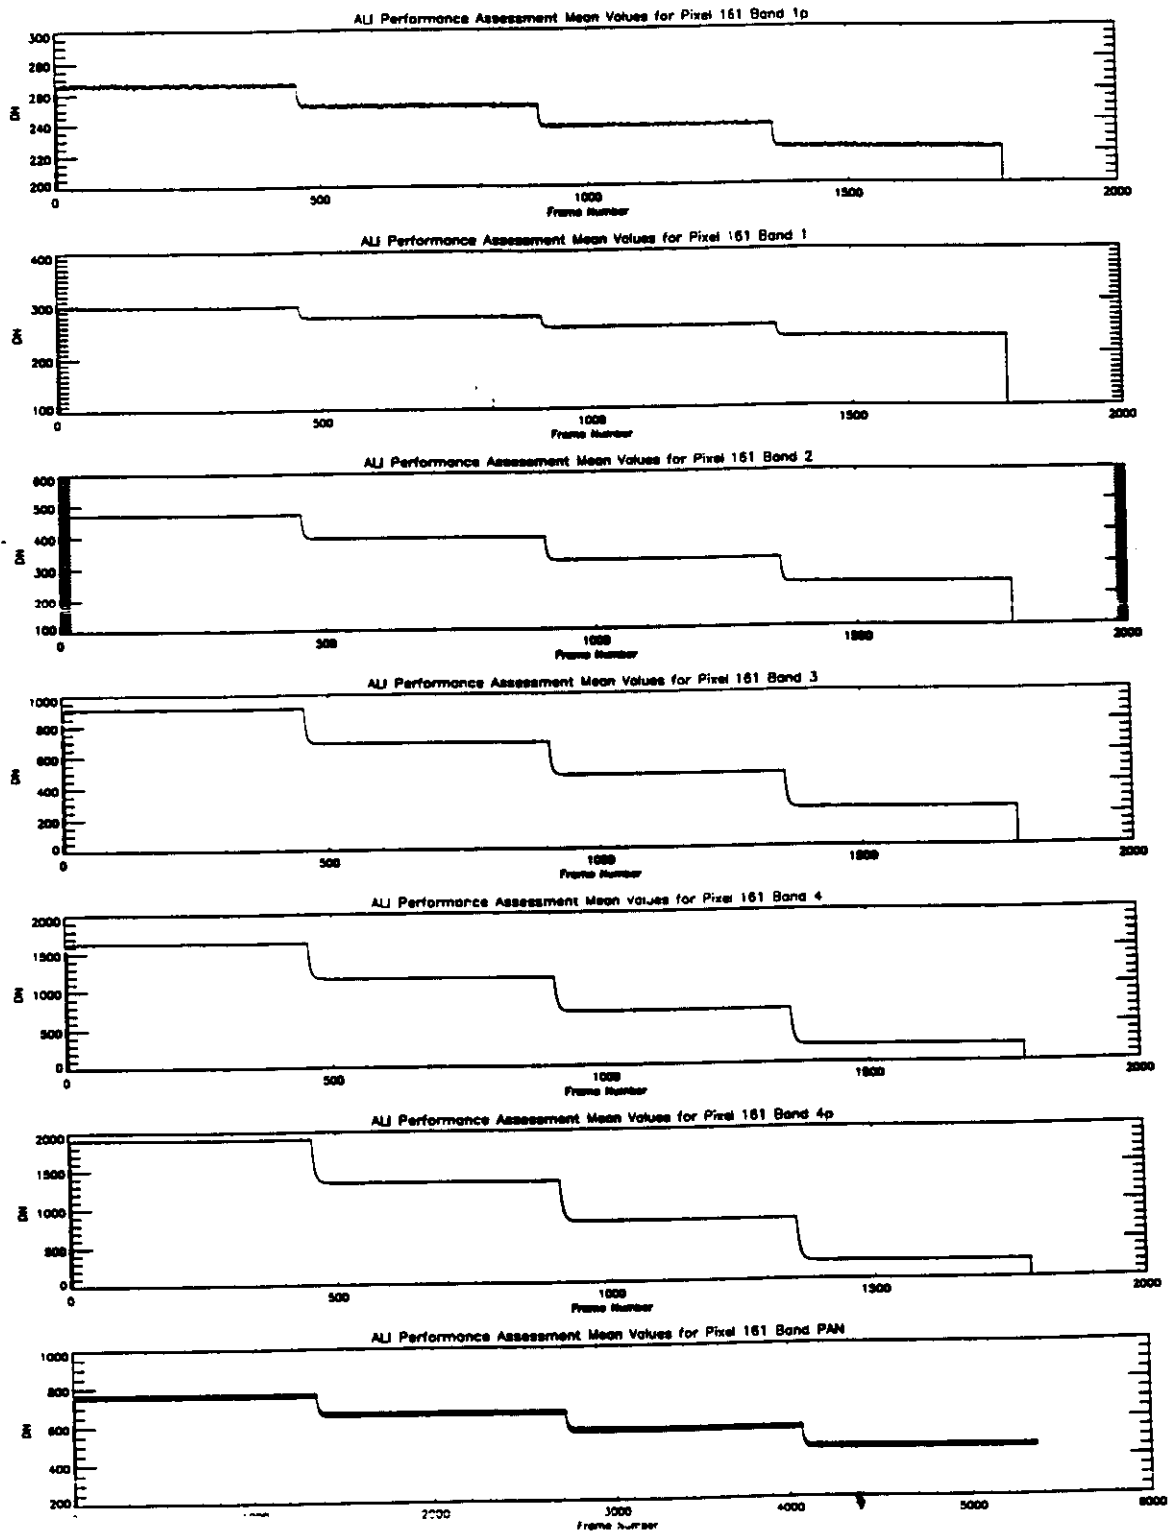


Table 6: MIT/Lincoln Laboratory Contact Sheet

| Name | Work Number | Home Number |
|-----------------|--------------------|--------------------|
| Jeff Mendenhall | 781-981-0392 | 978-635-1887 |
| Ed Bicknell | 781-981-7968 | 781-861-1819 |
| Don Lencioni | 781-981-7967 | 978-369-6184 |
| Costas Digenis | 781-981-7964 | 978-443-2614 |